



CoPilot 500

Industrial Inkjet Printing System User Guide



CoPilot 500

Industrial Inkjet Printing System User Guide

For use with:

- **CoPilot 500 Controller,
CoPilot 500 Turbo Controller, or
CoPilot 500 High Speed Turbo Controller**
- **CoPilot 500 Oil Printhead or
CoPilot 500 Solvent Printhead**

Revised 7/12/2021

P/N 2005995 – Rev O

Copyright and Trademarks

Copyright ©2021 Squid Ink Manufacturing.

All rights reserved. All trademarks and brand names are the property of their respective owners.

Alfamaq

1a. Cda. Jacarandas #14 Col. El Vergel, Iztapalapa. Ciudad de México C.P. 09880
(55) 5426-4137 800 253-2627

info@alfamaq.mx

www.alfamaq.mx

Contents

Abbreviations & Terminology	9
Safety	11
Understanding Safety Notifications	12
General Precautions	12
Introduction.....	13
General System Description	13
System Components.....	15
Printhead Overview.....	16
Controller Overview.....	17
System Specifications.....	18
Software Specifications.....	20
Component Dimensions.....	21
Printhead.....	21
Controller.....	22
Options.....	23
Mounting Hardware.....	24
Installation and Setup.....	25
General Recommendations	25
Material Handling	25
Grounding	25
AC Power	25
Work Area	26
Vibration	26
Maintenance Access.....	26
Mounting	27
Mounting the Controller.....	28
Mounting Printhead(s).....	29
Mounting the Ink System.....	31
Mounting a Photocell.....	34
Distance from Substrate.....	35
Rotating or Tilting the Printhead.....	38
Connecting the Ink Supply	39

Cartridge Ink System Setup	39
Bag Ink System Setup.....	44
Printhead Height Relative to Ink Reservoir or Ink Pan.....	47
Cable Connections	51
Connecting Photocell Trigger to Controller	51
Connecting an Optional Encoder to Controller.....	52
Custom Triggering Device.....	53
Printhead Data Cable.....	54
Connecting a Second Printhead	55
Connecting a Second CoPilot 500 Printing System.....	56
Connecting an Optional Low Ink Warning Beacon.....	57
Connecting to a Desktop PC.....	58
Connecting to a Local Area Network.....	59
USB Port	60
Optional Four Port USB Hub.....	61
Power Supply	62
Commissioning the Printhead	63
Commissioning an Ink Cartridge System	63
Commissioning a Bag Ink System	66
Software Interface	69
Interface Button Overview	69
Home Screen	74
Zoom Screen.....	75
Message Screen	76
Delete.....	76
Message Screen Remote Server	77
Settings Screen.....	78
Line Speed	79
Distance to Trigger.....	81
Print Direction.....	82
Encoder.....	83
Repeat and Squid Connect Trigger Settings.....	84
Counters.....	86
Spit Settings	87
Barcode Validation	89
USB Load.....	90

Reset.....	92
Printhead Temperature	93
Calibrating the Touchscreen	94
Remote Database Server.....	95
Set Date	97
Set Time.....	98
Peak Encoder Speed	99
Custom Keyboard	100
Language	102
Static IP Address.....	104
User Data	105
Wireless Interface	106
Temperature Warning Screens	110
GUI Refresh	112
Software Setup	113
Entering the Proper Settings	113
Operation.....	115
Powering On	115
Creating a Print Message.....	116
Transferring a Print Message.....	116
Loading a Print Message	117
Printing a Message	118
Powering Off	118
Maintenance.....	119
Checking Mounting Hardware and Connections	119
Cleaning the Nozzle Faceplate	119
Flushing the Printhead	120
Purging the Printhead of Air Bubbles	123
External Cleaning.....	123
Preparing a CoPilot 500 for Shipping or Storage	123
Troubleshooting	127
Parts List	129
Replaceable Parts.....	129
Complete Systems.....	129

Other Replaceable Parts.....	130
Floor Stand Assemblies	131
Conveyor Mount Assemblies	132
Inks and Fluids	133
Exploded Views.....	134
Cartridge Ink System.....	134
Bag Ink System	137
Printhead.....	139
CoPilot 500 Controller*/CoPilot 500 HiSpeed Controller**	140
CoPilot 500 Turbo/CoPilot 500 HiSpeed Turbo Controller.....	141
System Updates	145
Applying Updates from USB	145
Product Warranty	147
Warranty Statement	147
Warranty Period	147
Printheads.....	147
Repairs.....	147
Print Quality	147
Shipping Policy.....	147
Exclusions.....	147
Warranty Procedures	148
Warranty within 60 days of invoice.....	148
Warranty 60 days to 1 year from invoice (6 months for Printheads).....	148
Warranty Eligibility.....	148
Limited Warranty	148
Disclaimer of Damages	149
Technical Support.....	151

Abbreviations & Terminology

The following abbreviations are used throughout this User Guide:

Abbreviation	Meaning	Abbreviation	Meaning
C	Celsius	NTFS	A USB format
CE	Meets safety, health, and environmental requirements of the European Union	P/N	Part Number
cm	Centimeters	PDF417	A barcode format
CP500	CoPilot 500	PNP	Positive-Negative-Positive
dpi	Dots per inch	QR	A barcode format
EAN-8	A barcode format	RJ12	Registered Jack 12
EAN-15	A barcode format	SCC-14 28	A barcode format
F	Fahrenheit	SCC-14 ITF	A barcode format
FAT32	A USB format	SSCC-18	A barcode format
fpm	Feet per minute	SSID	Service Set Identifier
ft	Feet	TUV	Meets the requirements of the German Equipment and Product Safety Act
GB	Gigabytes	UCC-128	A barcode format
GND	Ground	UDP	User Datagram Protocol
GUI	Graphic User Interface	UPC-A	A barcode format
Hz	Hertz	USB	Universal Serial Bus
IP	Internet Protocol	VAC	Volts Alternating Current
IT	Information Technology	W	Watts
LED	Light-Emitting Diode	WiFi	Wireless networking technology
ml	Milliliters	°	Degrees
m	Meters	‘	Feet
MicroQR	A barcode format	“	Inches
min	Minutes	<	Less than
mm	Millimeters	>	Greater than
MSI	A barcode format	#	Number
NPN	Negative-Positive-Negative	%	Percent

Safety




Please follow these simple safety steps to ensure smooth and safe operation:

- While unpacking and setting up the unit, always take care to use proper lifting techniques. Avoid overreaching and leaning over while handling the printer and accessories.
- While installing, maintaining, and operating the printing system, always wear safety glasses, gloves, and protective clothing.
- Make sure the electrical power source is properly wired and grounded. The power source should comply with all safety regulations and codes applicable to the installation location.
- Turn off and unplug the printing system while servicing and performing maintenance.

NOTE: Some service and maintenance procedures require the power to be left on. During such procedures, carefully follow the safety instructions.







- Use only Squid Ink Manufacturing ink and Squid Ink Manufacturing approved fluids.
- The Squid Ink CoPilot 500 printer systems use a Cartridge Ink or Bag Ink system. Do not open or puncture the Ink Cartridge or Ink Bag in any way other than normal installation.
- Keep all fluids away from open flame and excessive heat, as they may be combustible.
- Avoid prolonged contact with skin. Fluids can be washed with soap and water.
- Do not look directly into the Printhead. If fluids make eye contact, flush immediately with water and receive appropriate medical attention.
- Never pour fluids into sink, sewer, or drain. Dispose of fluids in accordance with all ordinances and regulations pertaining to fluid disposal.

Understanding Safety Notifications

	WARNING: Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
	CAUTION: Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
	ATTENTION: Indicates a hazardous situation which, if not avoided, could result in property damage only.

General Precautions

When installing, operating, and maintaining the CoPilot 500, observe the following precautions.

	WARNING: Health Hazard Some inks and solvents may be a health hazard if exposed for too long. Ensure that the area has adequate ventilation.
	WARNING: Electrical Hazard Do not open cover. No user-serviceable parts inside.
	WARNING: Electrical Ground Hazard Ensure that unit is properly grounded.
	WARNING: Keep Dry Keep the equipment dry and indoors.
	CAUTION: Fire Hazard Inks, cleaners, and flush fluids may be flammable. Use caution and keep away from flame.
	CAUTION: Environmental Hazard Inks, cleaners, and flush fluids may be harmful to the environment. Dispose of properly.

Introduction

General System Description

The CoPilot 500 printing systems consist of a Controller with integrated Touchscreen user interface and up to two Printheads that can use either Cartridge Ink or Bag Ink systems. The CoPilot 500 printing systems are designed to print superior quality high-resolution characters on a variety of porous surfaces.

NOTE: For the purposes of this document, unless a specific differentiation is made:

- **“CoPilot 500”** can refer to a:
 - CoPilot 500 system
 - CoPilot 500 Turbo system
- **“Controller”** can refer to a:
 - CoPilot 500 Controller
 - CoPilot 500 HiSpeed Controller
 - CoPilot 500 Turbo Controller
 - CoPilot 500 High Speed Turbo Controller
- **“Printhead”** can refer to a:
 - CoPilot 500 Oil Printhead
 - CoPilot 500 Solvent Printhead
 - CoPilot 500 HiSpeed Printhead

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area may also cause harmful interference in which case the user will be required to correct the interference at his or her own expense.

Messages for the CoPilot 500 printing systems are created and edited using PC-based Orion™ software. Messages are then loaded onto the Controller through an Ethernet connection or from a USB device. Refer to the *Orion™ Software User Guide* that came with the printer for information on how to create and print messages.

The Controller sends the print messages to the Printhead. If using a Cartridge Ink system, ink flows from the Ink Cartridge down into the Ink Reservoir and through an Ink Line to the Printhead. If using a Bag Ink system, ink comes from an Ink Bag installed in an Ink Pan and


flows through the Ink Line to the Printhead. The ink is then ejected onto the substrate through the Ink Nozzles on the front of the Printhead. Because the system uses capillary action (rather than a motor) to help supply the ink to the Printhead, the CoPilot 500 is referred to as a “passive ink system.”

System Components

- Controller
- Printhead(s)
- Printhead Data Cable(s)
- Photocell (Trigger)
- Encoder (Optional)
- Ink System (Bag or Cartridge)
- Mounting Hardware


IMPORTANT: If you purchased an optional level of Orion™ that allows connecting to multiple Printers, a *Download Instructions* card is included in the shipping carton. **Do not throw this card away.** The card contains the Orion license number required for downloading Orion and connecting the CoPilot 500 printing system. If there is no card, you can still download Orion and connect to a single printer. If there are problems, call Customer Service at 800-877-5658.

Printhead Overview

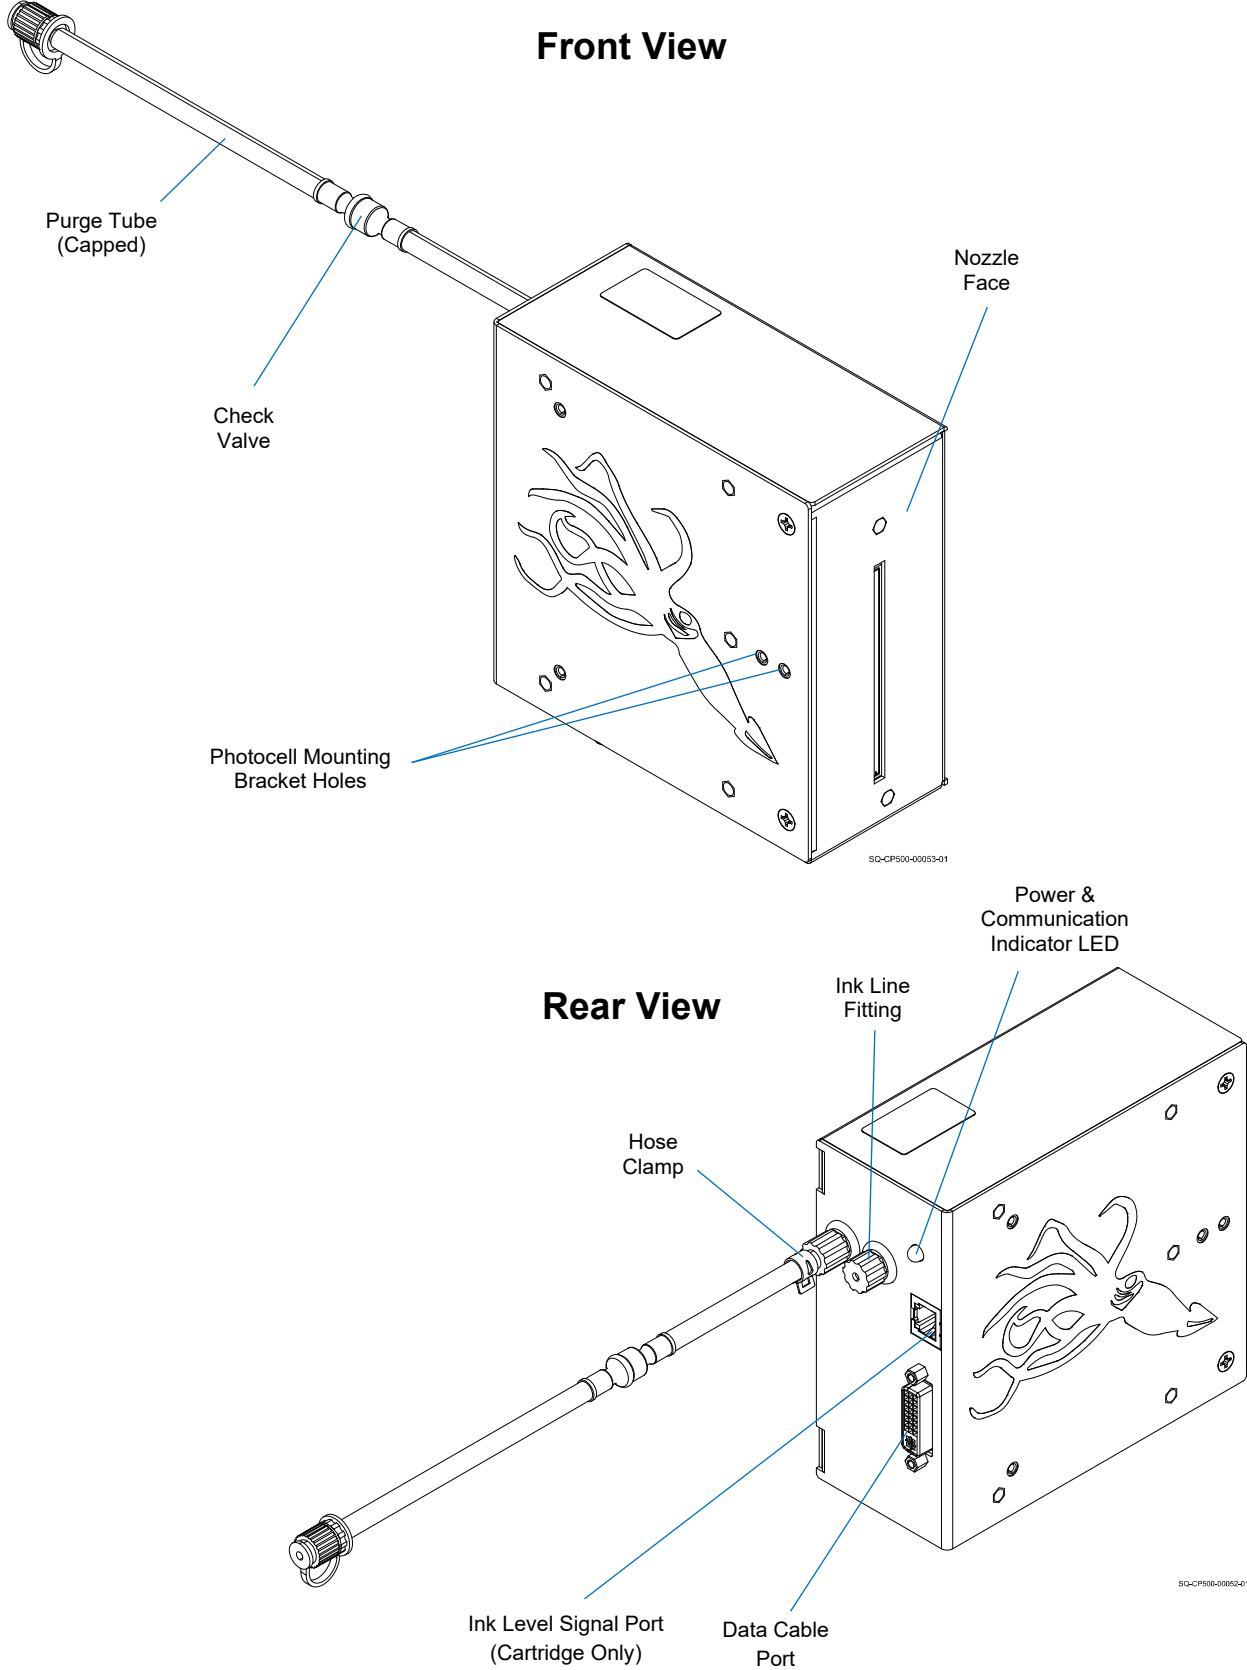


Controller Overview

Front View

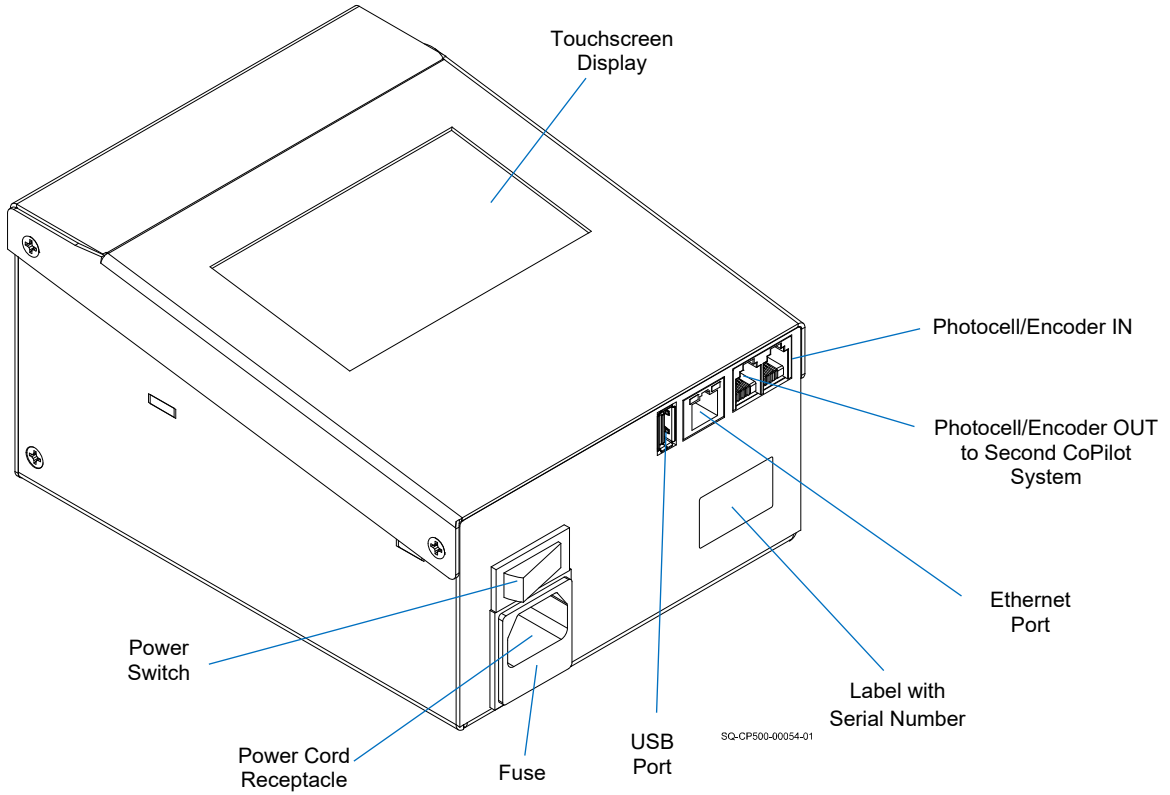

Rear View

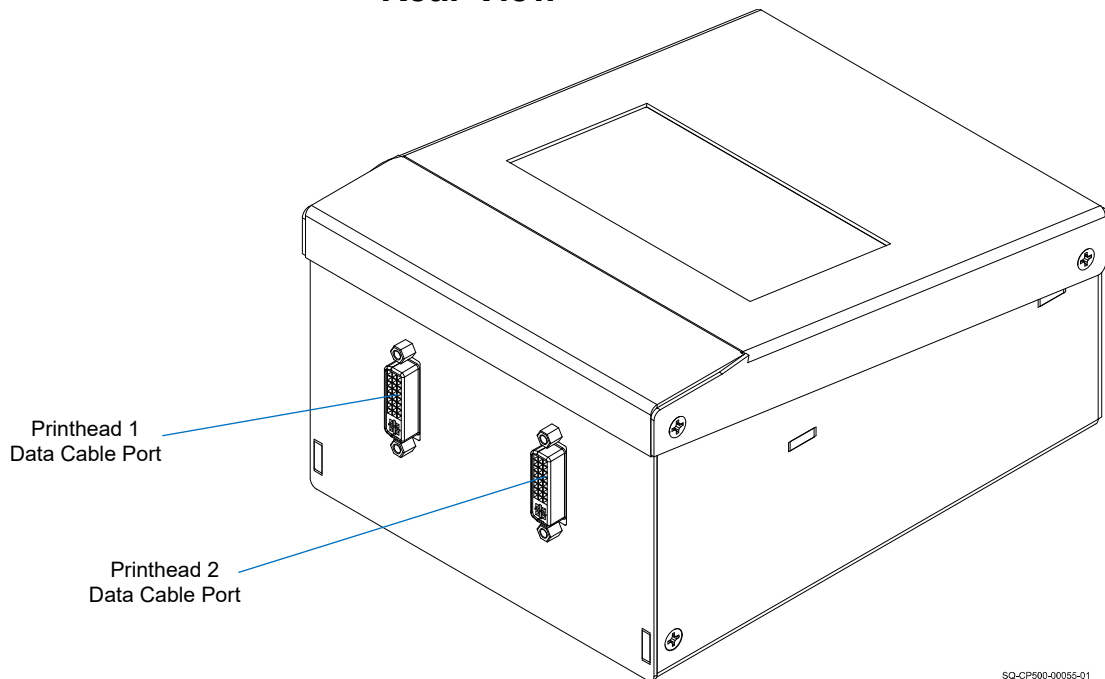

System Specifications

Print Technology	Piezo impulse Printhead technology
Maximum Print Height	2.8" (7.1 cm) per Printhead
Maximum Throw Distance	0.19" (48.3 mm)
Message Length	180" (457.2 cm)
Vertical Print Resolution	185 dpi
Horizontal Print Resolution	205 dpi
Time and Date	Internal real-time clock with battery backup
Product Sensor	External Photocell trigger or optional Encoder
Communication Interface	One USB host and one Ethernet input
Electrical Requirements	100–240 VAC, 50/60 Hz, 65 W maximum
Storage Environment	34 °F (1 °C) - 122 °F (50 °C)
Substrate Capabilities	Porous and non-porous applications
Ink Capabilities	Oil-based or solvent-based, depending on Printhead
Ink System	Passive Ink Control System: Squid Ink Manufacturing 500 ml cartridge or 500 ml Bag Ink systems.
Low Ink Indicator	Message alert on Touchscreen Optional Low Ink Alarm Beacon
Agency Certifications	TUV and CE certified

Specifications That Vary by Model:

Metric	CoPilot 500 Oil Printhead	CoPilot 500 Solvent Printhead	CoPilot 500 HiSpeed Printhead
Controller Compatibility	CP500* CP500 Turbo CP500 HiSpeed Turbo	CP500* CP500 Turbo	CP500 HiSpeed** CP500 HiSpeed Turbo
Ink Compatibility	Oil	Solvent	Oil
Print Speed	Up to 205 fpm (62 m/min) @ 205 dpi	Up to 150 fpm (45 m/min) @ 205 dpi	Up to 300 fpm (91 m/min) @ 205 dpi for static messages. Contact Squid Ink Technical Services at 1-800-877-5658 for dynamic message speed assistance.
Drop Size	60 pL	60 pL	30 pL
Operating Environment	34° F (1° C) to 104° F (40° C)	62° F (17° C) to 100° F (37° C)	34° F (1° C) to 104° F (40° C)

* The CoPilot 500 Controller has been replaced by the CoPilot 500 Turbo Controller.


** The CoPilot 500 HiSpeed Controller has been replaced by the CoPilot 500 HiSpeed Turbo Controller.

Software Specifications

Time and Date	Multiple formats including: 1,2,4, -digit year, 1,2-digit month, 3 letter month, custom month string, 1 letter day of month (Korean), 2-digit day of month, 1-digit day of week, 1,3 letter day of week, 2-digit week of year, 3 digit Julian year, 1 letter hour, (a-x), 2-digit hour 12 or 24, 2-digit minute, 2 digit second, 1,2 letter meridians (A/P, AM/PM), custom week string.
Counters	Supports 16 Counters, one of which can be a daily counter.
Shift Codes	Four programmable shift codes with automated rollover.
Barcodes	Code 39, Interleaved 2 of 5, UPC-A, EAN-8, EAN-13, Code 128, UCC-128, SCC-14 ITF, SCC-14 28, SSCC-18, MSI, DataMatrix, QR, MicroQR and PDF417 bar codes standard.
Fonts	Arial (regular and bold), Courier, Tahoma (regular and bold), and Lucida resident fonts for use in variable data elements. Static elements in any Windows® font.
Printing Features	Reverse, Rotate, Repeat, Invert
Message Storage Capacity	1024 Messages. There is capacity to store more than 1024 messages based on the message complexity up to 1 GB free space.
Message Length	Limited by substrate length up to 180"
Logos and Graphics	Orion™ Graphical Interface Software supports almost any type of image file.
Languages	English, Spanish, German, Chinese, Japanese, Korean, Russian, and Polish.


Component Dimensions

Printhead

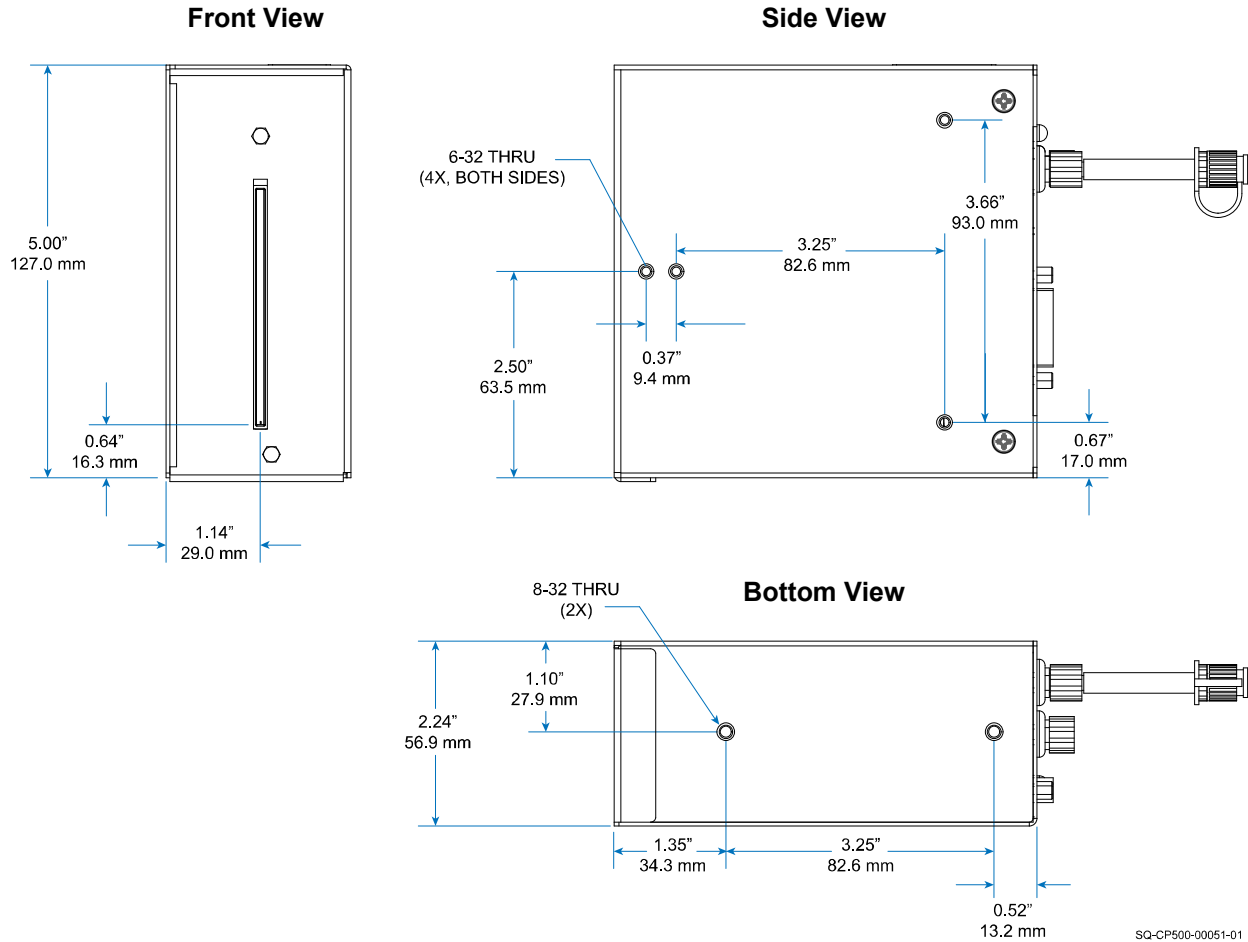


Controller


Top View

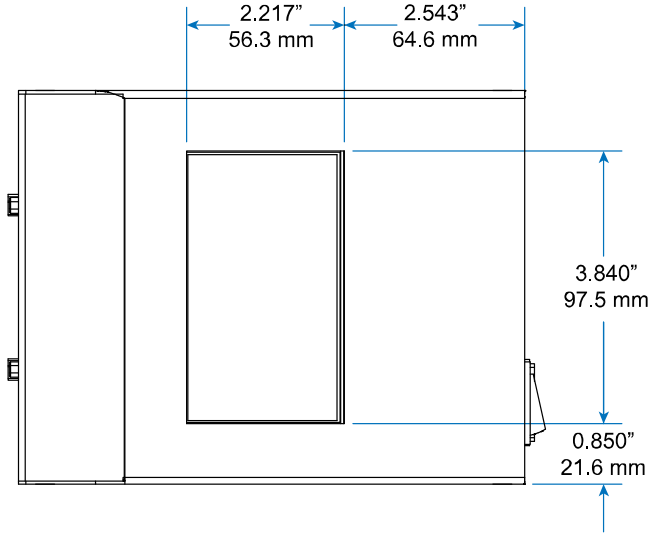


Side View

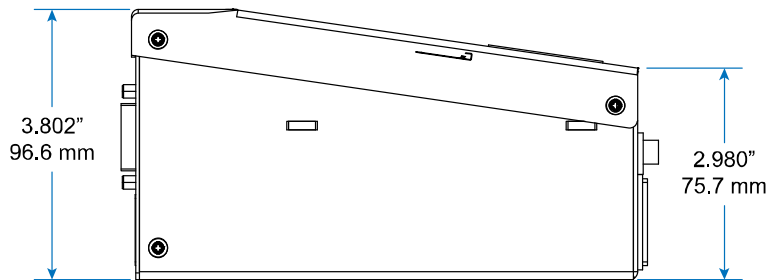

Front View

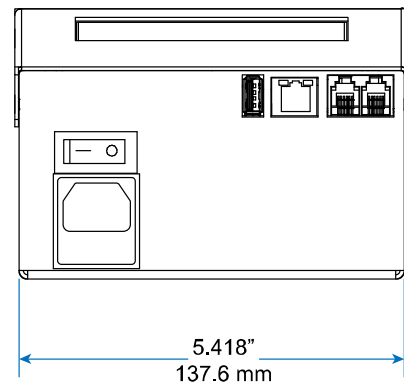

Bottom View

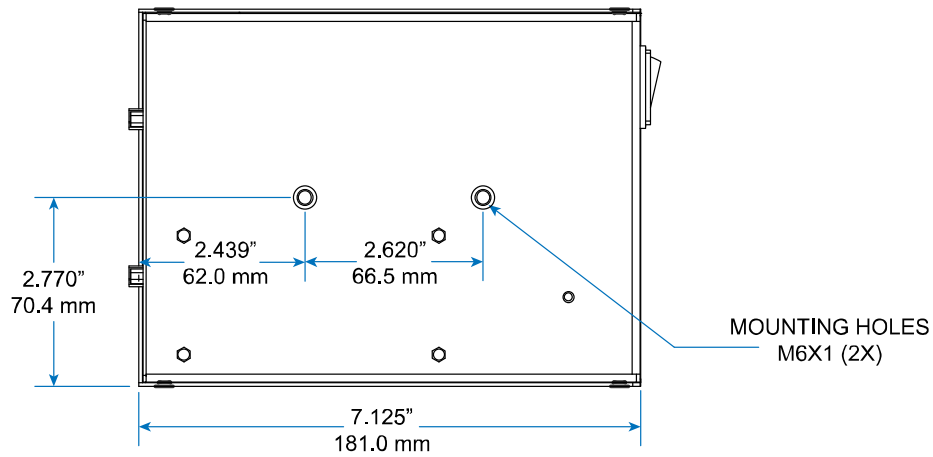


SQ-CP500-00056-01

Options

Part Number	Description	Purpose
Dependent on ink	Starter Kit	Includes ink, cleaner and flush, Printhead wipes, hand cleaner, and latex gloves.
1604177	Encoder Assembly Kit	For operation with variable-speed Conveyors.
2004194	Barcode Laser Scanner	Allows scan and print message retrieval.
2004570	Spring-Loaded Printhead Bracket	Prevents Printhead from being accidentally bumped by products on Conveyor.
2003927	Low-Ink Alarm Beacon Assembly	Alerts when ink levels become low.
2003975	Audible Low-Ink Warning Assembly	Alerts when ink levels become low.

Spring-Loaded Printhead Bracket

(Part Number 2004570)

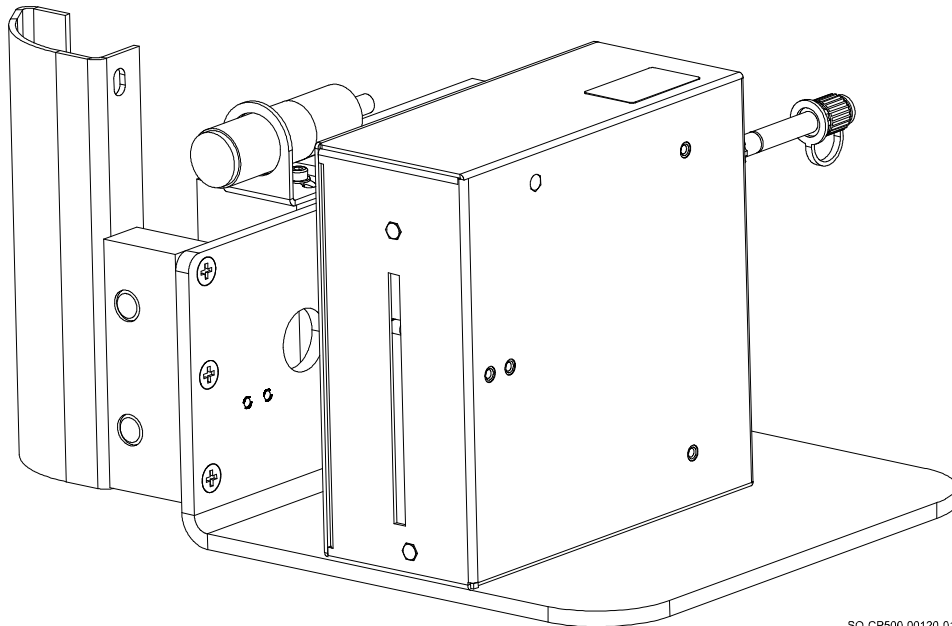

SQ-CP500-00120-01


Mounting Hardware

Squid Ink offers a variety of Floor Stands and Conveyor Mounts for a range of unique situations (see “Replaceable Parts” on page 129). Floor Stand Mounts isolate the CoPilot 500 from vibrations and movements of the Conveyor. Conveyor Mounts attach directly to the Conveyor. Contact your Squid Ink distributor for guidance on which stand best suits your needs, and follow the mounting instructions for the mounting system that you choose.

NOTE: Stands and mounts do not come with CoPilot 500 Controllers or Printheads.


Floor Stand

(Part Number 2004940)

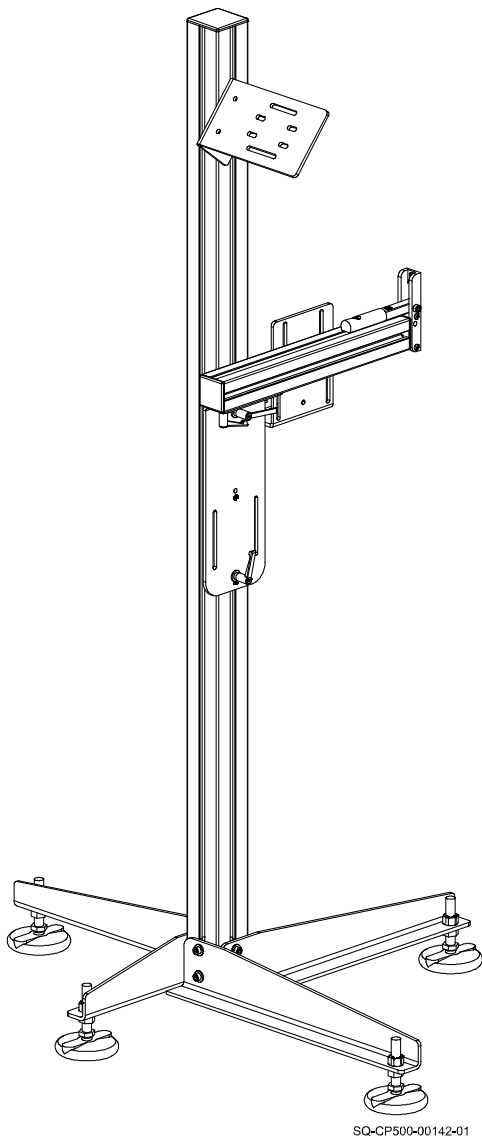

Conveyor Mount

(Part Number 2004943)

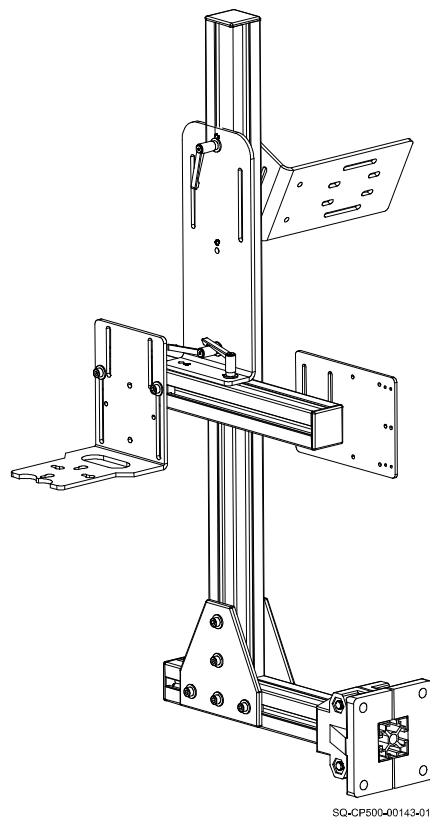


The “Floor Stand Assemblies” and “Conveyor Mount Assemblies” sections, starting on page 131, have complete lists of available Floor Stands and Conveyor Mounts.

Installation and Setup

General Recommendations

Material Handling

The most critical item for consistently superior quality printing is material handling. This is an area controlled by the customer and the installer. Always use adequate Conveyor Product Guides, and ensure that they are installed and maintained properly. Incorrect or inconsistent product handling will cause print quality problems, maintenance problems, and could lead to Printhead damage. The customer is responsible for maintaining proper material handling equipment.

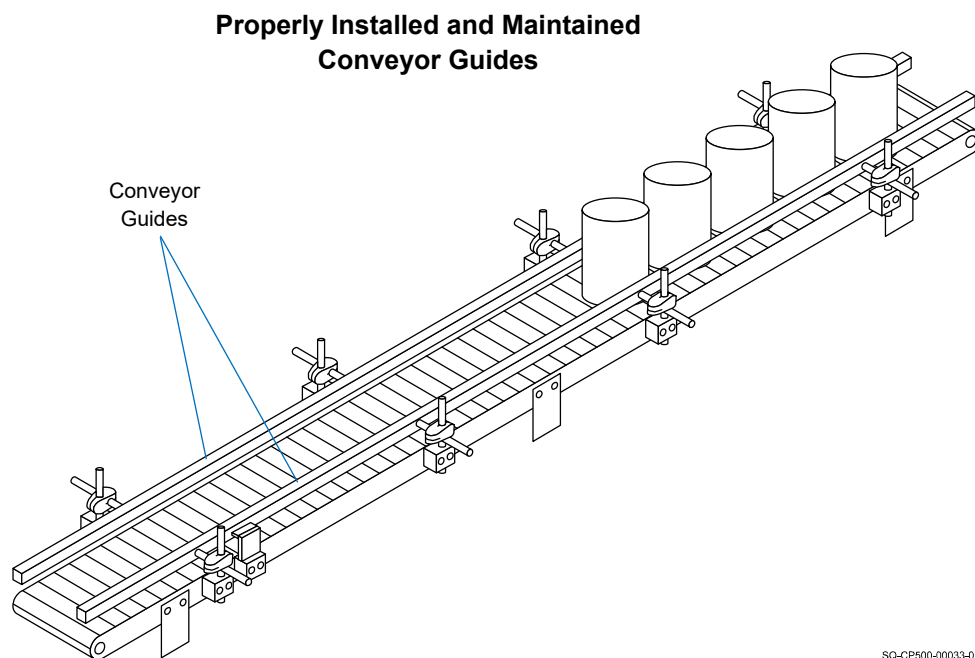

Grounding

Always ensure that the power source is properly grounded before using. To further improve print quality and protect the system from static electricity, install a 0.25" (or wider) Ground Braid (Part Number 2005024) between the Printhead Controller and earth ground.

AC Power

In some locations where the printing system is installed, AC power may be subject to line noise, brownouts, and blackouts. If line noise, brownouts, or blackouts occur on a regular basis, a good-quality line conditioner or Uninterruptible Power Supply (Part Number 2004199) should be installed to ensure data integrity. In many cases, these devices may not be necessary; it is acceptable to start an installation without them. However, if system lockups or occasional distorted print occurs, the first corrective measure should be to isolate and clean up the AC power.

Work Area

A Printhead may occasionally require priming, purging, or flushing due to environmental contaminants collecting on the Nozzle Face. Priming, purging, and flushing require the use of clean, non-abrasive, lint-free wipes (Part Number 2005470) that will become soiled with ink during use. A small cabinet or box near the Printer to store the wipes and to keep them clean is recommended. A small waste receptacle is also recommended for soiled wipe disposal.

Vibration


CoPilot 500 Print Engines do not de-prime easily. They are tolerant of being bumped by passing products and normal Conveyor vibrations. However, sustained, long-term vibration may lead to erratic print performance. In cases where the Conveyor is especially vibration-prone, the entire printing system should be mounted on an optional Floor Stand available from Squid Ink.

Maintenance Access


When planning the installation, allow for easy access to the Printheads so that priming and cleanup can be done conveniently.

Mounting

Each installation is unique, and Squid Ink Manufacturing cannot anticipate customer requirements for attaching Mounting Brackets to the production line. Several mounting systems are available for the CoPilot 500 printing system. Follow the instructions for the specific mounting system ordered with your Printer.

	ATTENTION: Use only the supplied Mounting Screws to attach the Printhead and Controller to the Mounting Brackets. Using Mounting Screws other than those supplied by Squid Ink Manufacturing can result in damage to the Printhead or the Controller.
---	--

Main Components on Mounting Bracket

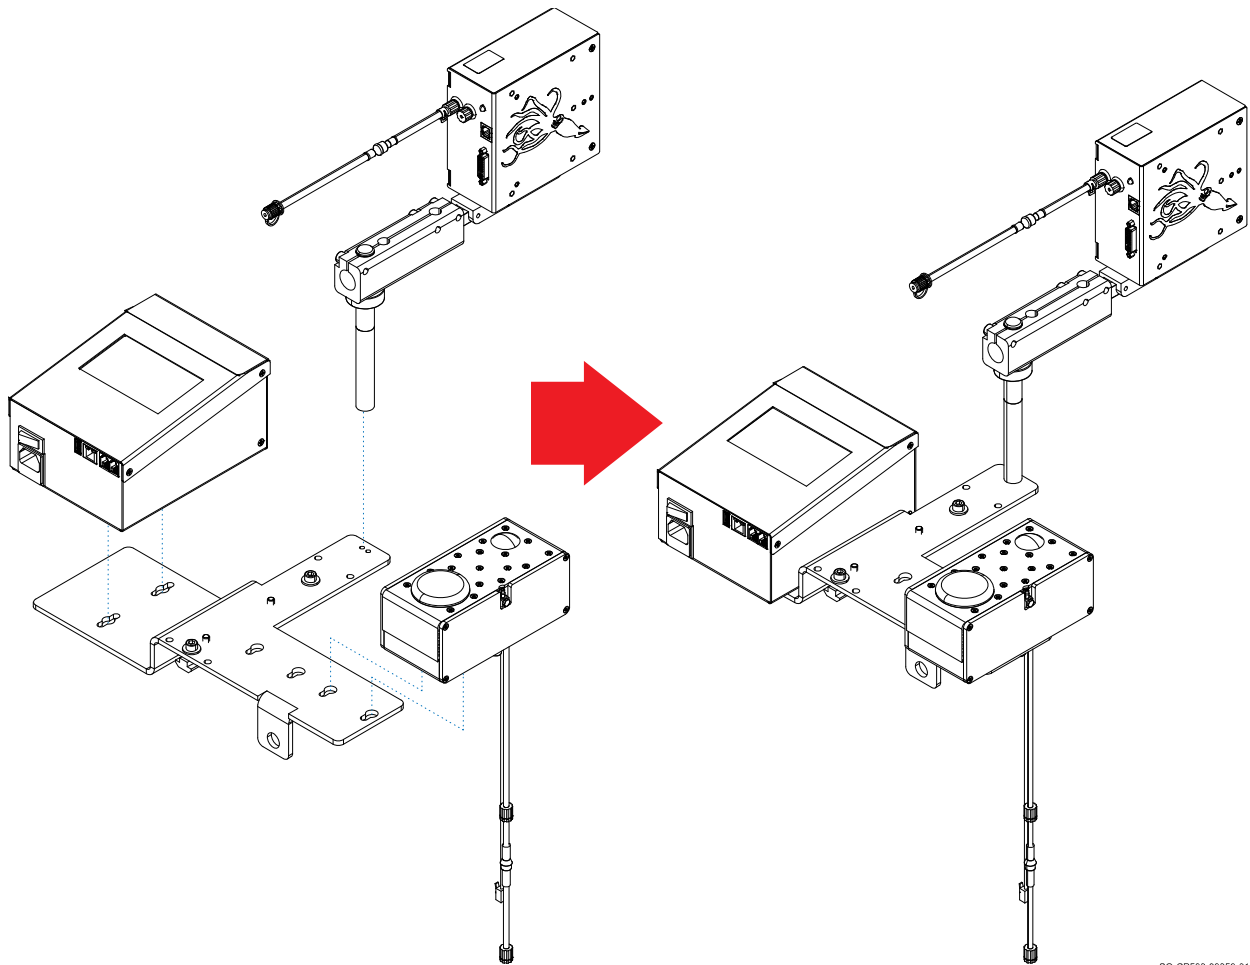

SG-CF500-00059-01

Mounting the Controller

The Controller is attached to the Mounting Bracket by inserting the two supplied Mounting Screws into the two M6 mounting holes located on the bottom of the Controller.

VIDEO: Mounting the Controller

To see a video of this procedure, click this link:

<https://youtu.be/zSjTfhCmU8M?t=49>


Or scan the QR code at right using the camera app on your mobile device.

View Time: 0:49 – 2:38



EQ-CP500-00059-01
Mounting the Controller
https://youtu.be/zSjTfhCmU8M?t=49
04/02/20


Attaching the Controller

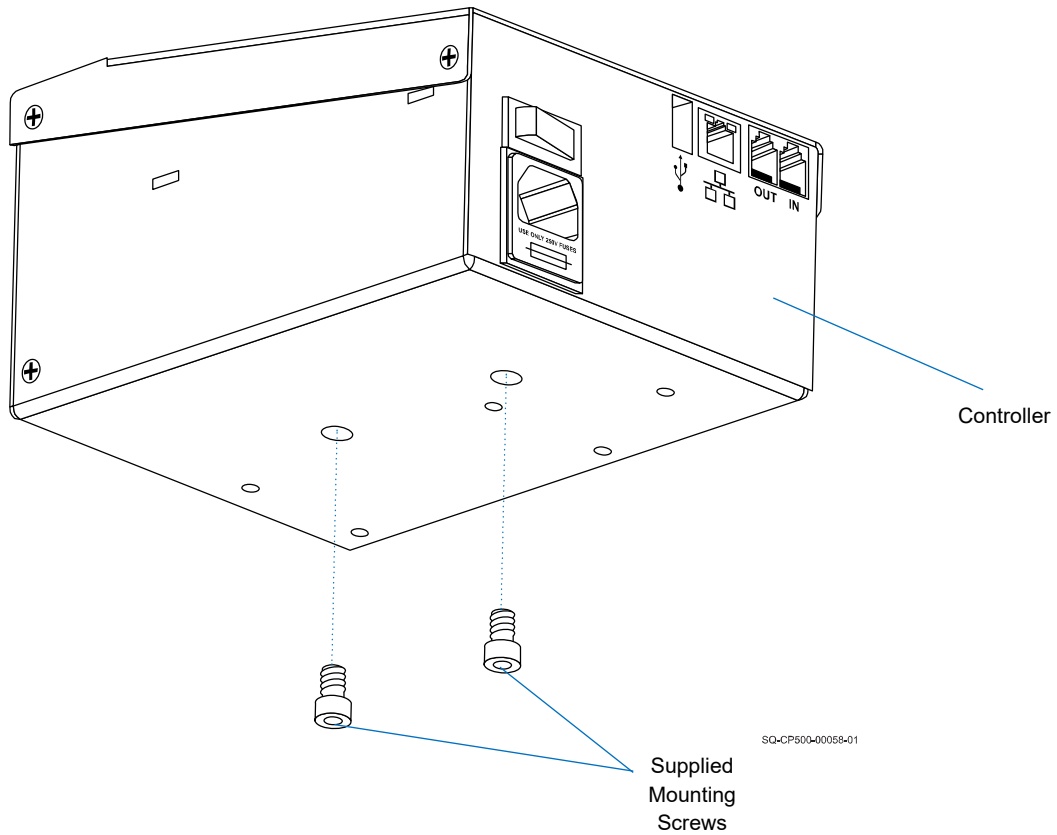

Mounting Printhead(s)

Printhead mounting varies by situation. This section lays out some general principles for Printhead mounting. A Mounting Bracket is necessary when the Printhead is going to be printing in any direction other than straight ahead.

Attaching a Mounting Bracket to the Printhead

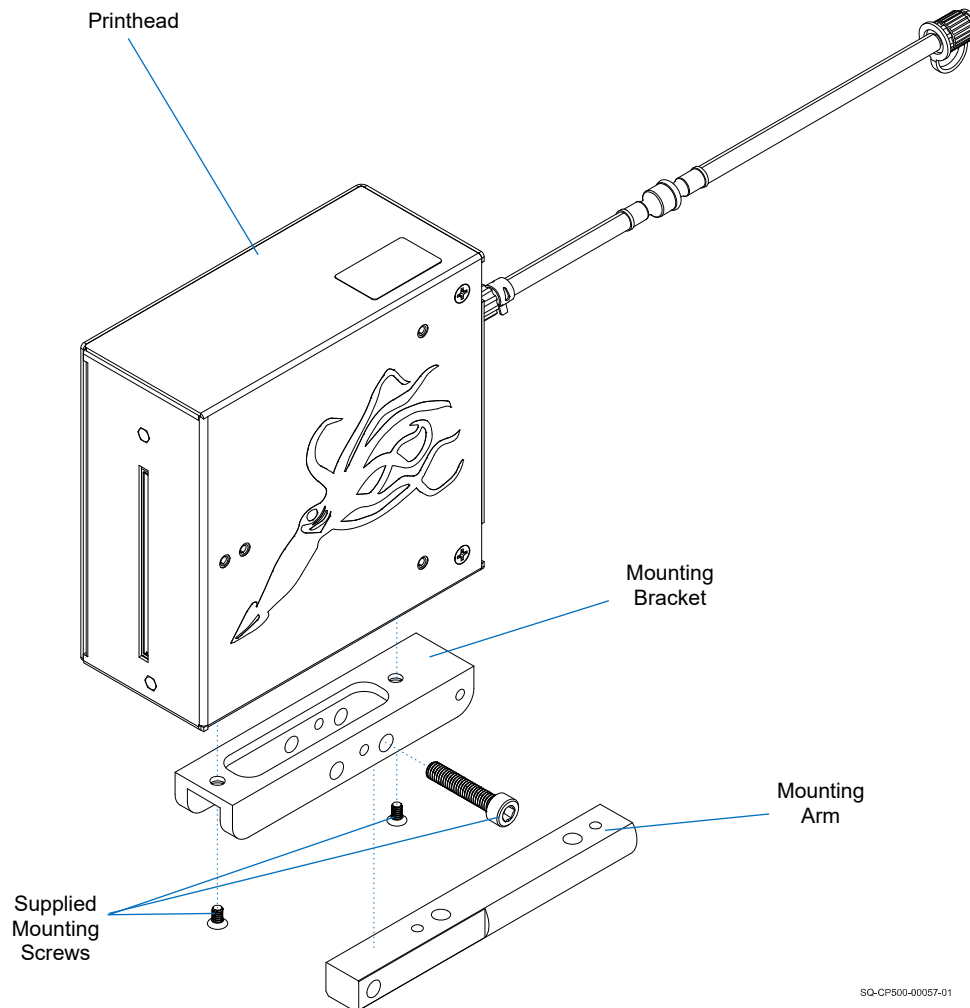

If printing straight ahead, the Printhead can be attached directly to a Floor Stand or Conveyor Mount (see “Replaceable Parts” on page 129).


VIDEO: Mounting the Printhead

To see a video of this procedure, click this link:

<https://youtu.be/zSjTfhCmU8M?t=251>

Or scan the QR code at right using the camera app on your mobile device.

View Time: 4:11 – 6:10

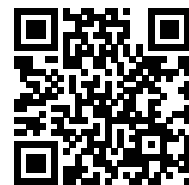


SQ-CP500-00057-01
Mounting the Printhead
https://youtu.be/zSjTfhCmU8M?t=251
4/11/10

To Mount a Printhead on a Conveyor Mount or Floor Stand:


1. Use the supplied Screws to attach the Mounting Bracket to the downstream side of the Printhead.

**Attaching the Printhead to a Conveyor Mount or Floor Stand
(Left-to-Right Product Flow)**

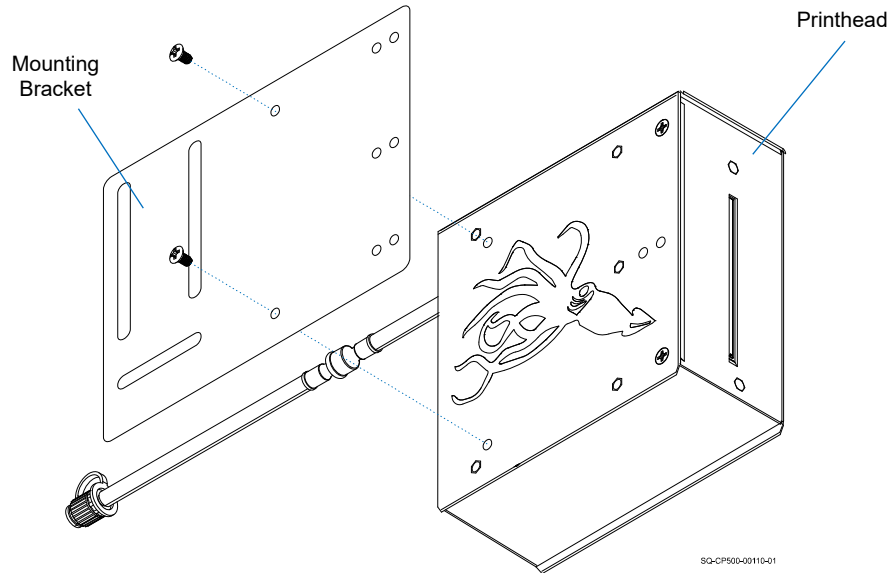

2. Use the T-Nuts and accompanying Screws to attach the Mounting Bracket (through the two vertical slots) to the Mounting Arm, and then tighten the T-Nuts.

Attaching the Mounting Bracket to the Mounting Arm

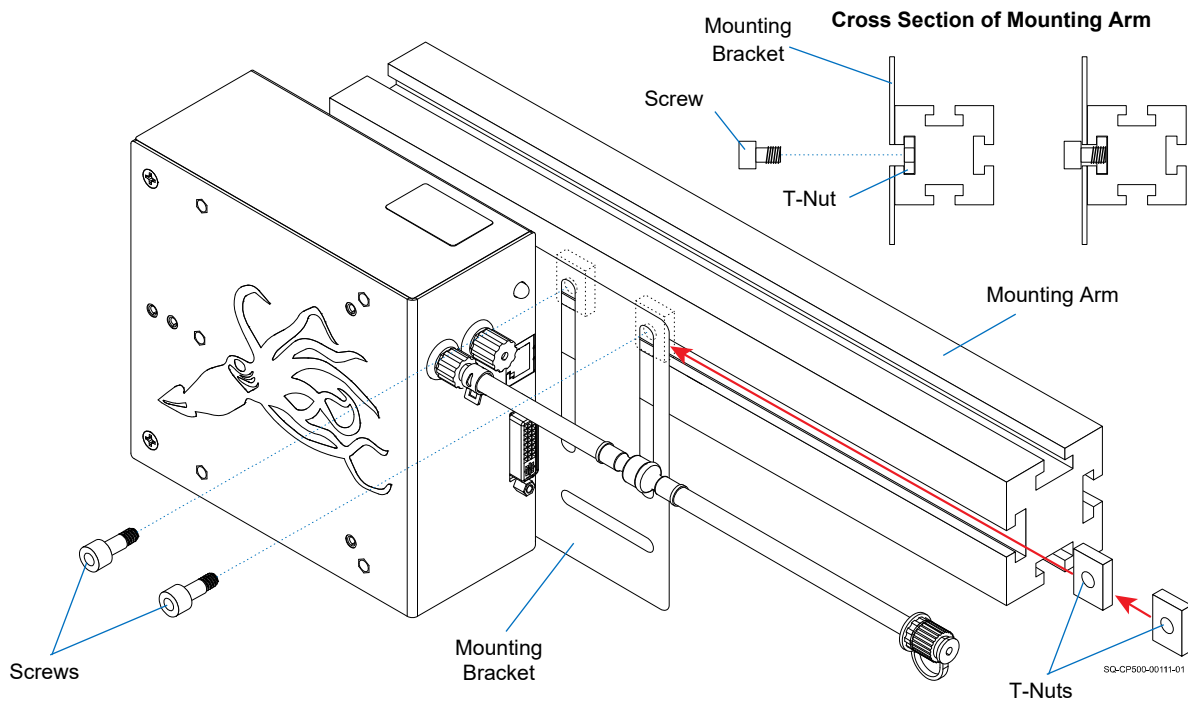

Mounting the Ink System

Because the CoPilot 500 uses a passive ink system that relies on a specific relationship between the height of the Printhead and the Ink System, both of these items should be attached to the same Mount, whether that is a Conveyor Mount or Floor Stand.

Cartridge Ink System


VIDEO: Mounting the Ink System

To see a video of this procedure, click this link:

<https://youtu.be/zSjTfhCmU8M?t=370>

Or scan the QR code at right using the camera app on your mobile device.

View Time: 6:11 – 6:44

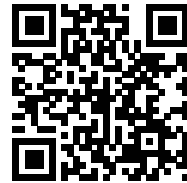


50CP500-00102-01
Mounting the Ink System
<https://youtu.be/zSjTfhCmU8M?t=370>
© 2016/04

Items Needed to Mount a Cartridge Ink System:

- Alan Wrench
- Phillips Head Screwdriver


To Mount a Cartridge Ink System:

1. Use the supplied Screws to attach the bottom of the Ink Reservoir to the L-shaped Ink System Mounting Bracket.

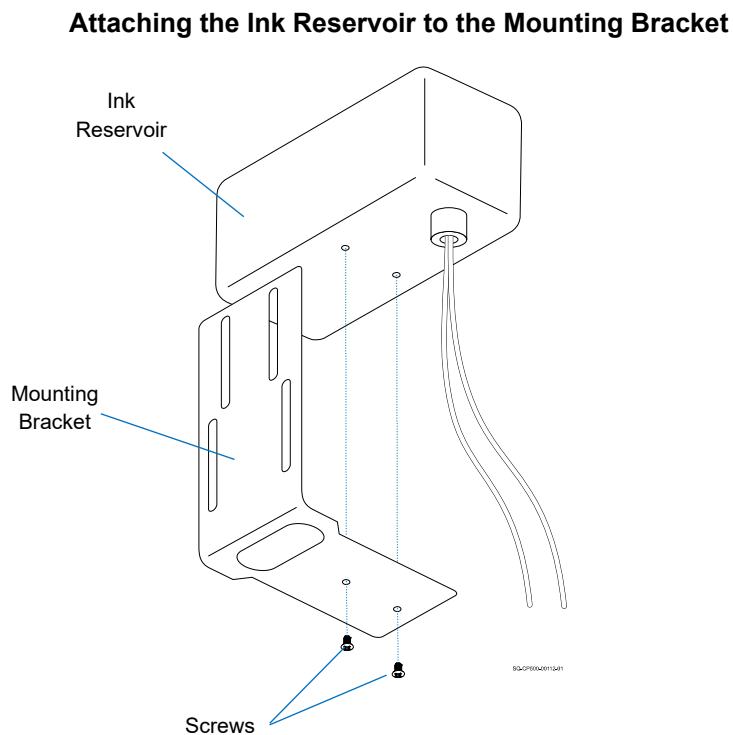

2. Use the T-Nuts and accompanying Screws to attach the Mounting Bracket (through the two vertical slots) to the Mounting Arm, and then tighten the T-Nuts.

Attaching the Mounting Bracket to the Mounting Arm

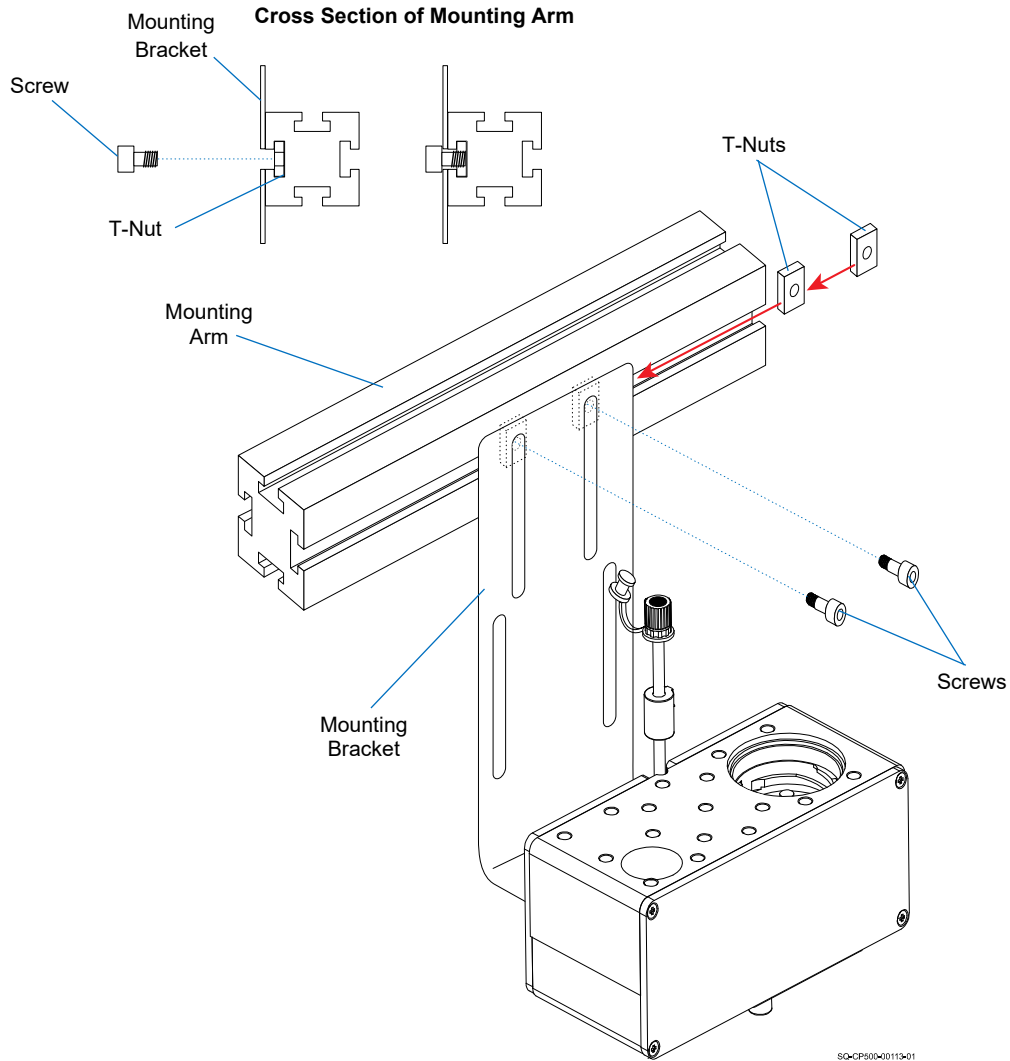

Bag Ink System


Items Needed to Mount a Bag Ink System:

- Alan Wrench
- Phillips Head Screwdriver

To Mount a Bag Ink System:

1. Use the supplied Screws to attach the side of the Ink Tray to the Ink System Mounting Bracket.

Attaching the Ink Tray to the Mounting Bracket

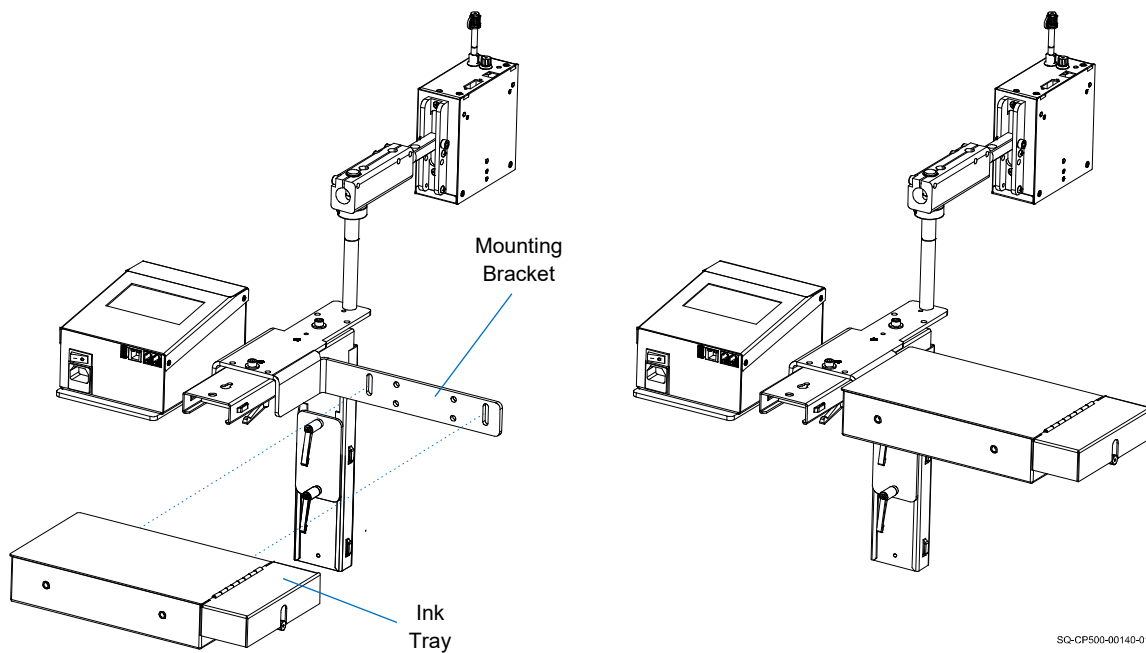

SQ-CP500-00140-01

Mounting a Photocell

A Photocell triggers printing when a product passes in front of it. The Photocell can be mounted directly to the Printhead using the supplied Mounting Bracket and Screws. The Photocell should be mounted on the upstream side of the Printhead so that it will “see” the product before the product passes in front of the Printhead.


VIDEO: Mounting a Photocell

To see a video of this procedure, click this link:


<https://youtu.be/zSjTfhCmU8M?t=548>

Or scan the QR code at right using the camera app on your mobile device.

View Time: 9:08 – 10:25

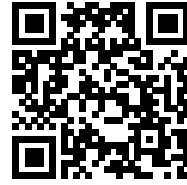


548-CP500-00065-01
Mounting a Photocell
<https://youtu.be/zSjTfhCmU8M?t=548>
9:08-10:25

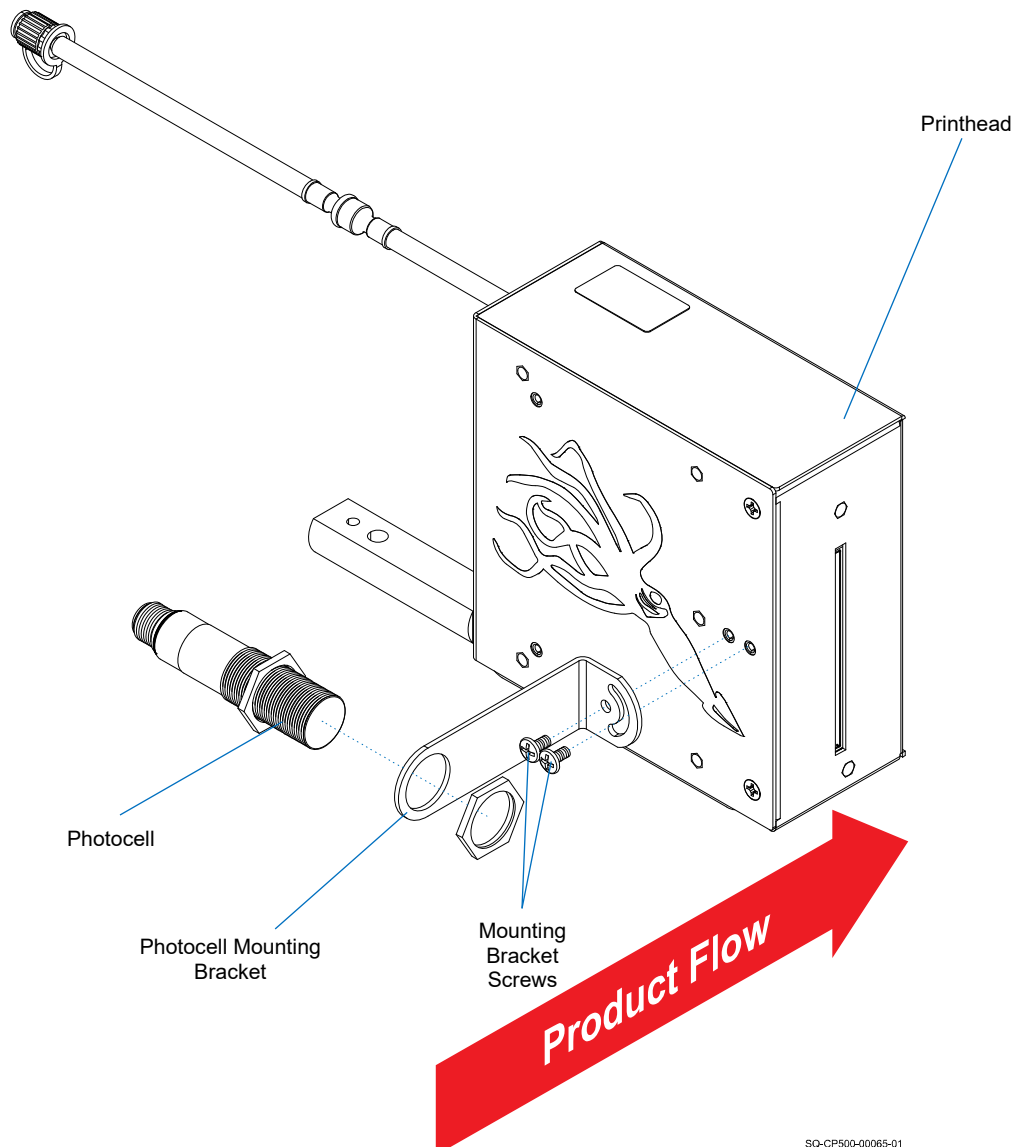


SQ-CP500-00065-01

Distance from Substrate

Generally, the closer the Printhead is to the surface to be printed (substrate), the better the print quality. Squid Ink recommends keeping the printed surface within 1/8" (3.2 mm) from the Nozzle Face. While throw distances greater than 1/8" (3.2 mm) are possible, print quality may be affected.

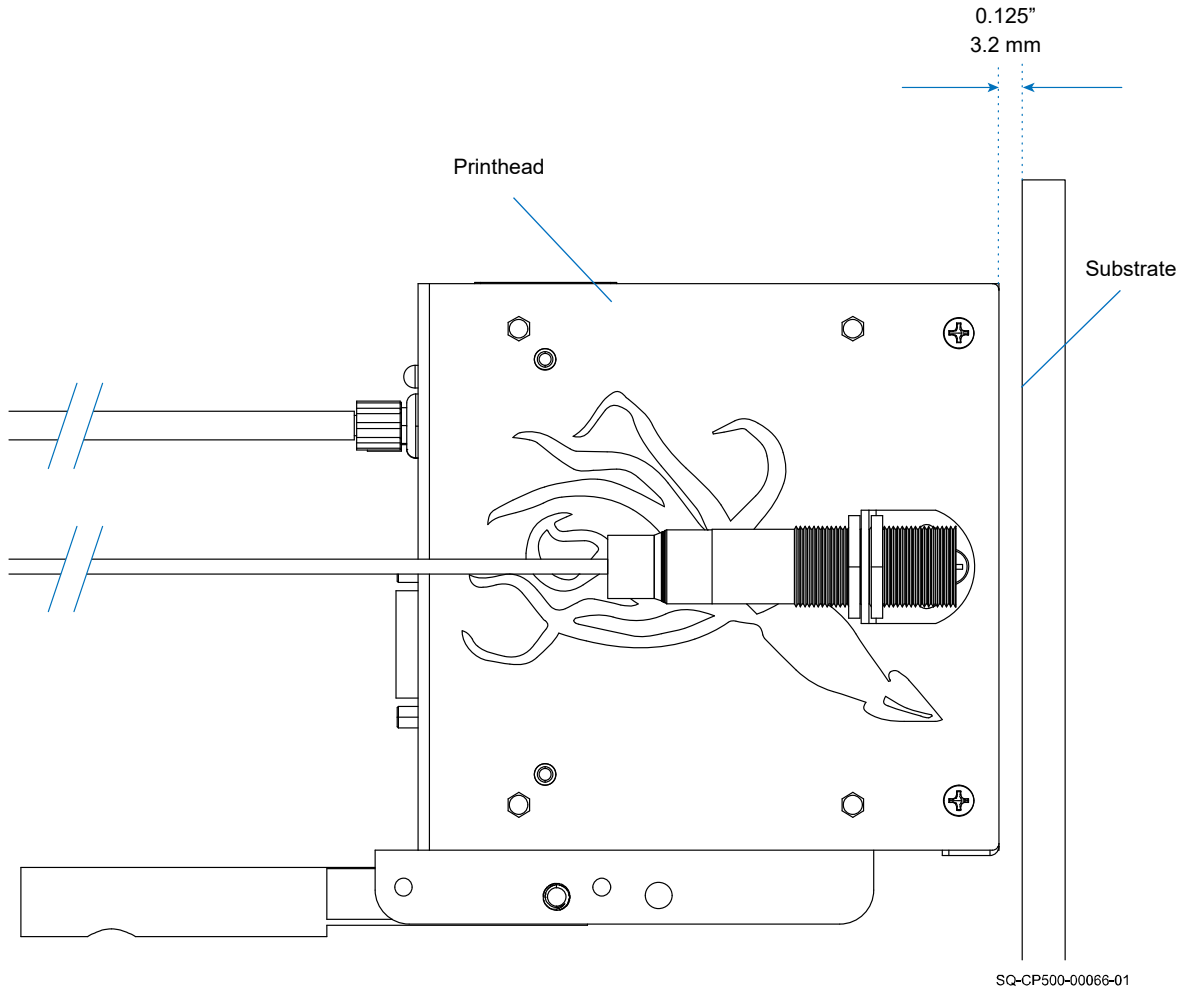


Dual Printheads with Bag Ink System Mounted on Floor Stand

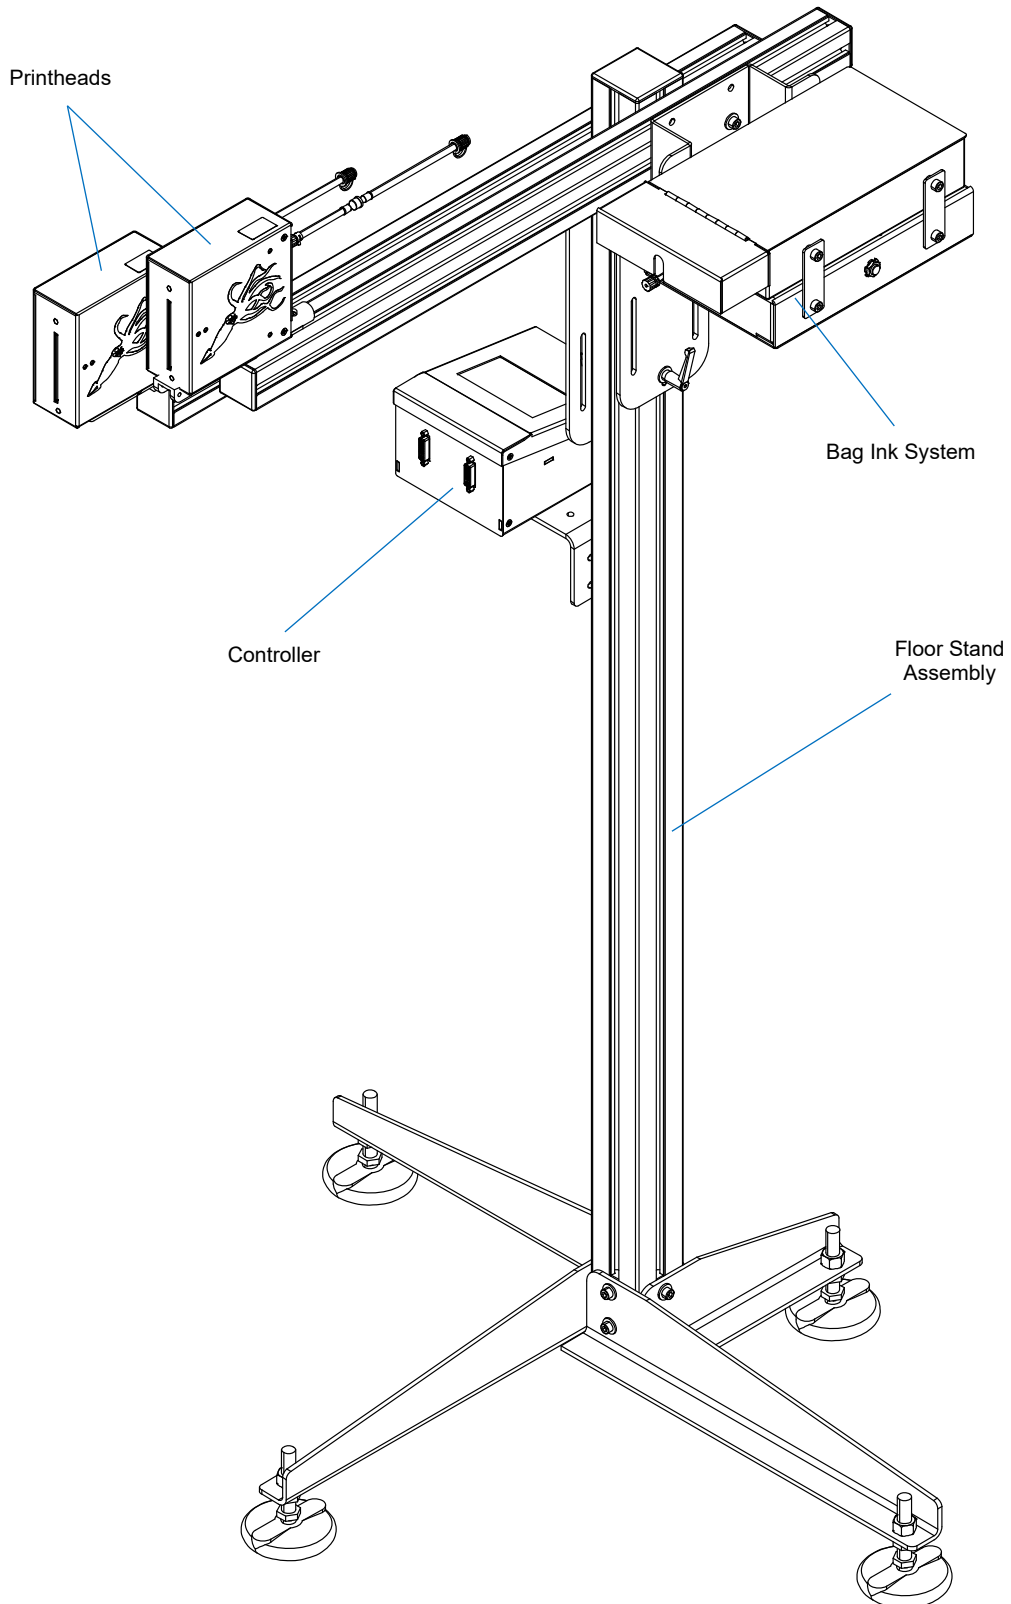

SQ-CP500-00067-01

Printhead with Cartridge Ink System Mounted on Floor Stand

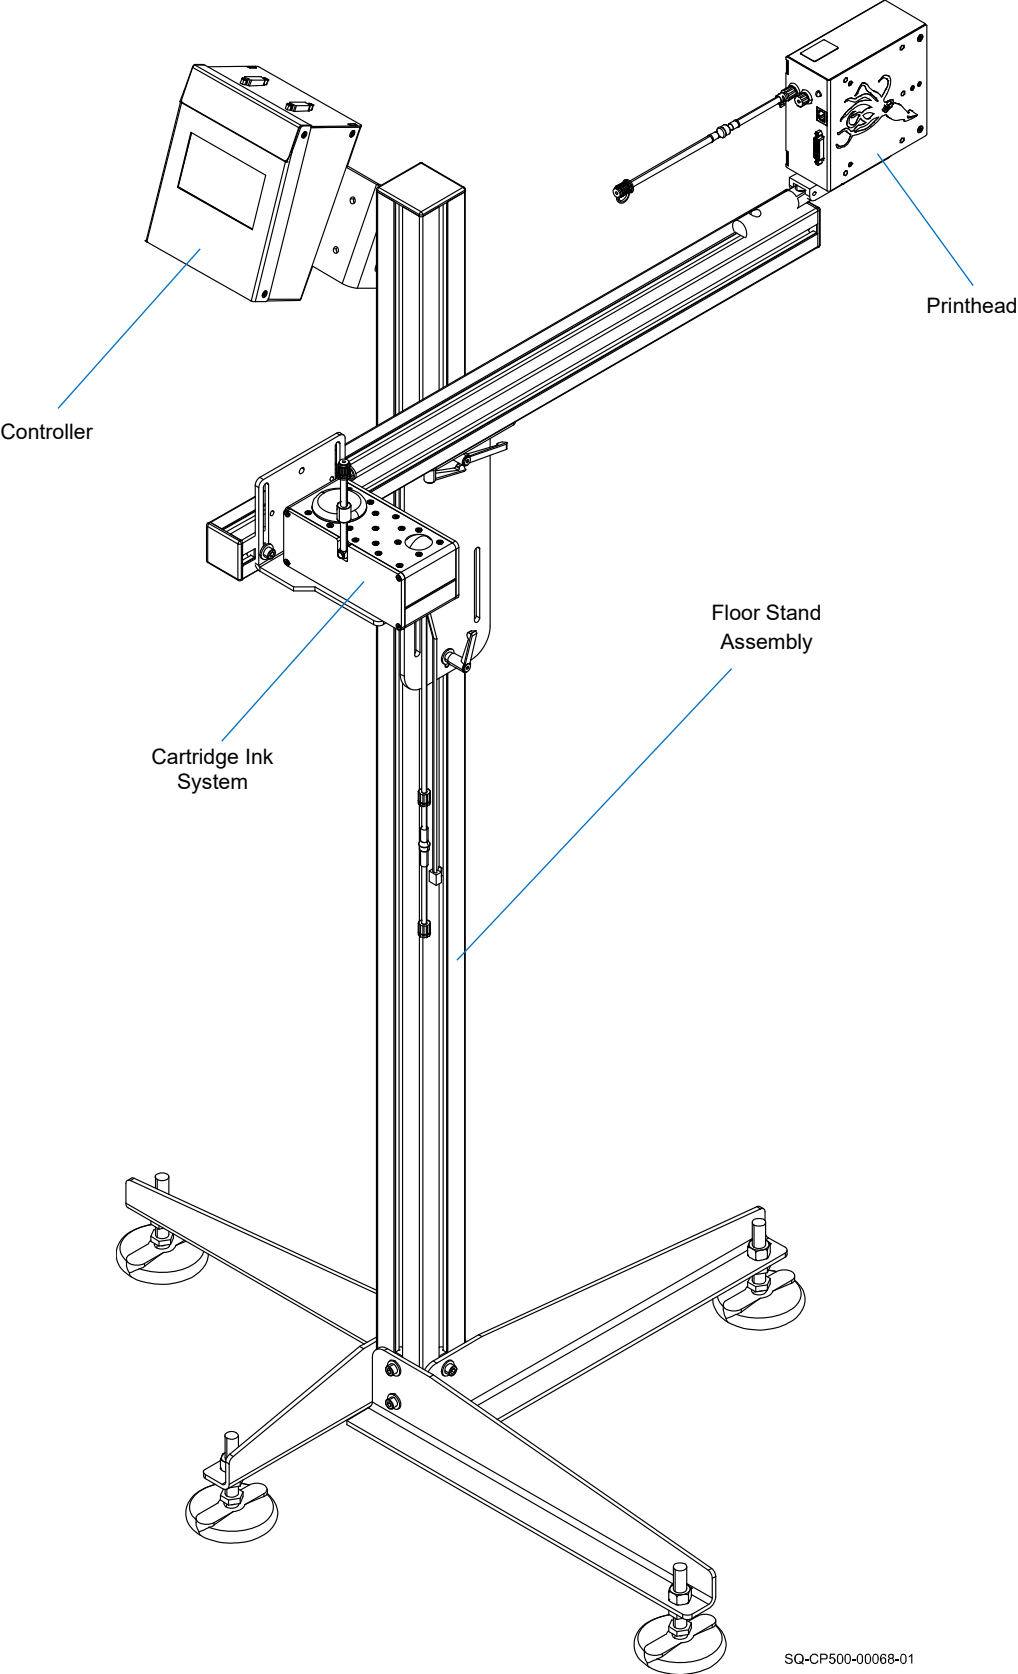

SQ-CP500-00068-01


Rotating or Tilting the Printhead

The Printhead can be mounted in a rotated or tilted orientation. This is useful when printing on an incline Conveyor or vertical Web.


The Printhead can be rotated 90° clockwise or counter-clockwise (sideshooter position) when viewed from behind the Printhead.

The Printhead can be tilted from 0° (straightshooter position) to 90° pointing down (downshooter position). **The printer will not print pointing up.**

Sideshooter Position

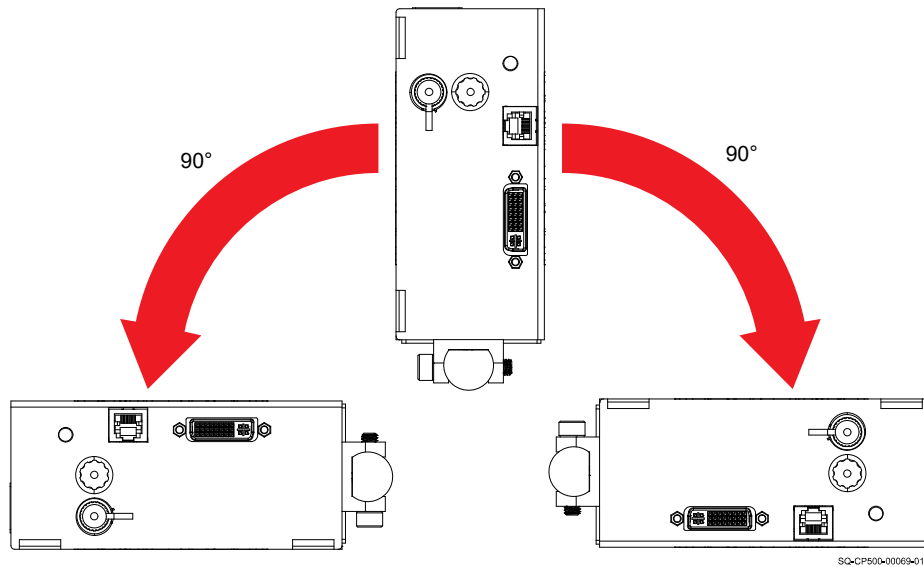

Downshooter Position

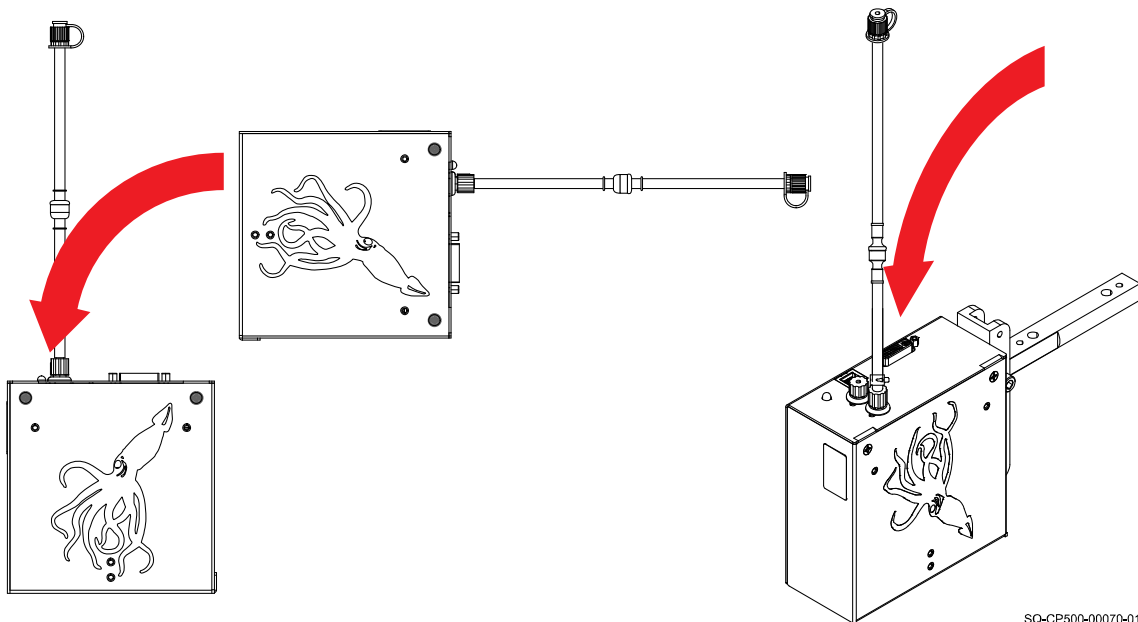

Connecting the Ink Supply

Ink and fluids are supplied to the Printhead with a Cartridge Ink or Bag Ink system. Normally, an ink system (Cartridge or Bag) will be needed for each installed Printhead. However, one ink system (Cartridge or Bag) can supply two Printheads if they are mounted at the same height.



ATTENTION: Use only Squid Ink approved fluids for cleaning or flushing the Nozzle Face. Use only the appropriate cleaning or flushing fluid for the specific ink being used (see “Inks and Fluids” on page 133).



ATTENTION: Never operate the Printhead without ink. Doing so can cause overheating and damage the Printhead, and will void the warranty.

Cartridge Ink System Setup


VIDEO: Installing an Ink Cartridge

To see a video of this procedure, click this link:

<https://youtu.be/zSjTfhCmU8M?t=712>

Or scan the QR code at right using the camera app on your mobile device.

View Time: 11:52 – 13:43

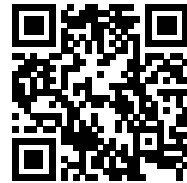


52-CP950-0105-01
Ink Reservoir Ink Cartridge
https://youtu.be/zSjTfhCmU8M?t=712
11/20/13

To Set Up a Cartridge Ink System:

1. Remove the Shipping Cover from the Ink Reservoir by pulling it upward and off. Save the Shipping Cover for future use.


Removing the Shipping Cover from the Ink Reservoir

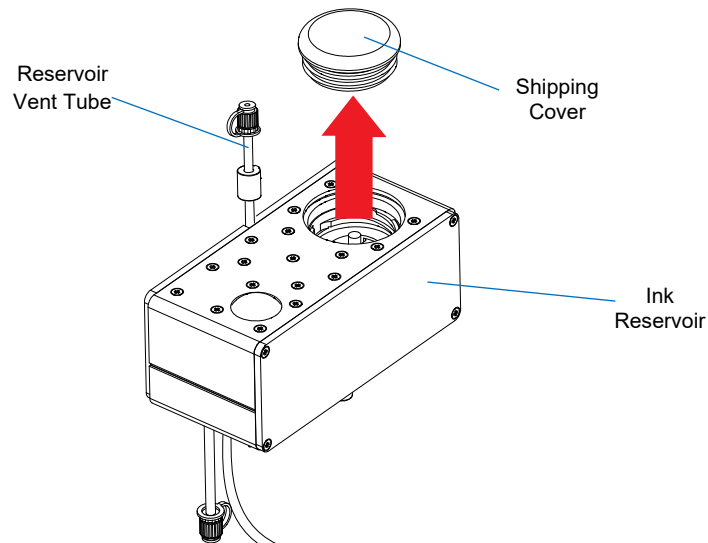

2. Ensure that the Printhead is properly aligned to the Ink Reservoir (see “Printhead Height Relative to Ink Reservoir or Ink Pan” on page 47).
3. Ensure that the Ink Reservoir Vent Tube is uncapped for printer operation.
4. Ensure that the Ink Reservoir O-Ring (Part Number 2006088 for Oil, 2006094 for Solvent) is in place to complete the seal between Ink Cartridge and Ink Reservoir.

NOTE: If the O-Ring is missing, the Printhead will have difficulty staying primed, resulting in poor print quality, and will leak profusely.


O-Ring Placement

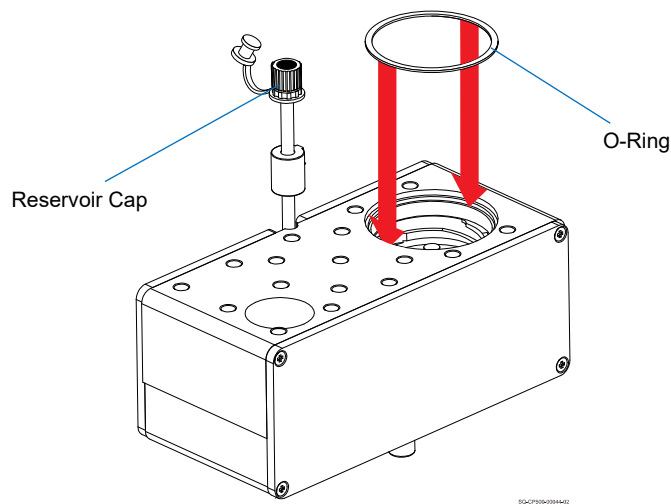

5. Install a new Ink Cartridge onto the Ink Reservoir
 - a. Use a sharp knife to remove the foil seal from the center section of the new Ink Cartridge so that the Ink Release Valve operates properly.


NOTE: It is important to remove all foil from the opening of the Ink Cartridge so that the Printhead receives the correct amount of ink.

Removing the Foil Seal

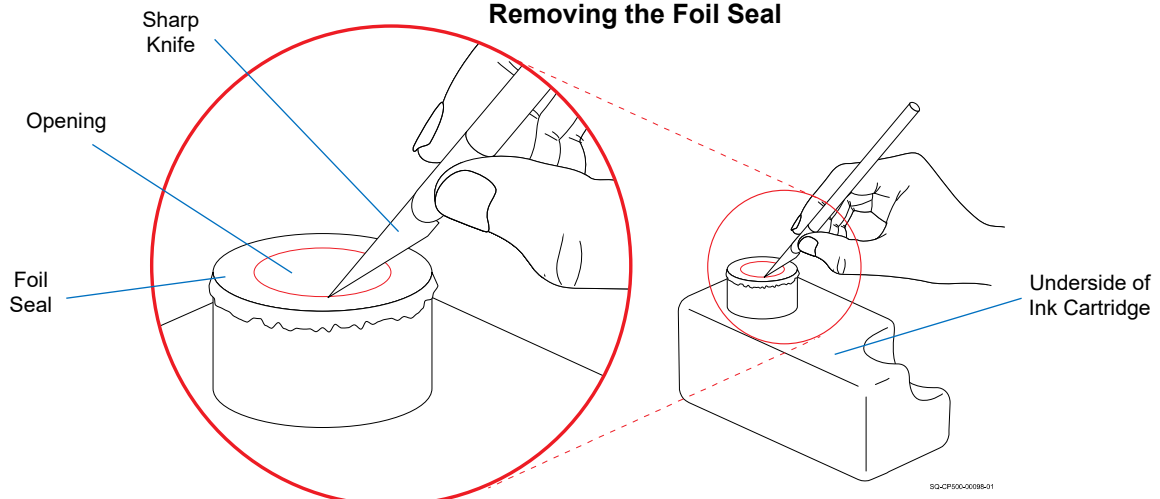


- b. Aligning the Cartridge at a right angle to the Ink Reservoir, lower the Ink Cartridge onto the Ink Reservoir.

Lowering the Ink Cartridge onto the Ink Reservoir

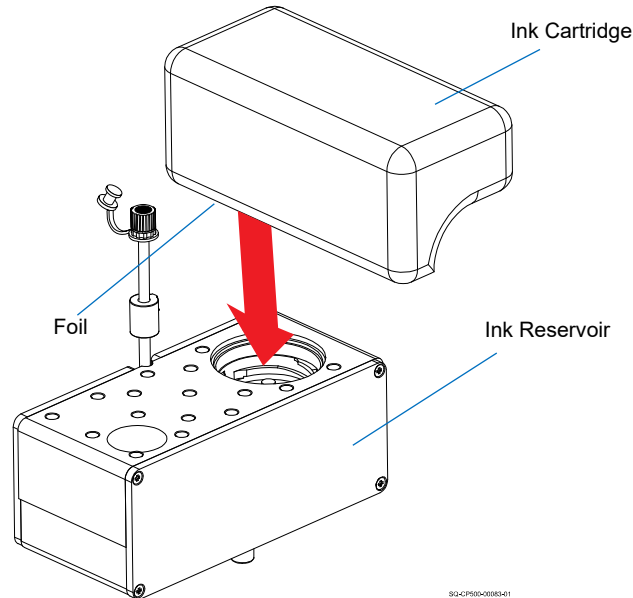

- c. Rotate the Ink Cartridge 90° clockwise to thread it down into the seat of the Ink Reservoir.

Rotating the Ink Cartridge

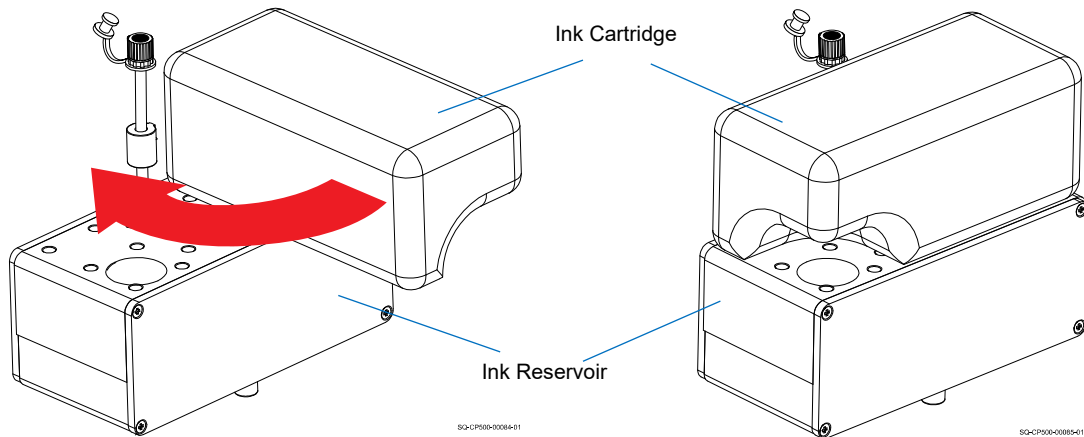

- d. Once the Ink Cartridge is properly in position, ink will fill the Ink Reservoir.

6. Connect the Printhead and Ink Reservoir, making sure that the Inline Check Valve (Part Number 2002057 for Oil, Part Number 2002058 for Solvent) is attached snugly to the Printhead and Ink Supply Line.


VIDEO: Connecting an Ink Cartridge

To see a video of this procedure, click this link:

<https://youtu.be/zSjTfhCmU8M?t=159>

Or scan the QR code at right using the camera app on your mobile device.

View Time: 2:39 – 4:11

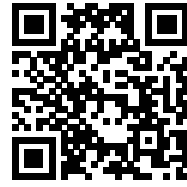

SQ-CP500-010041
Connecting an Ink Cartridge
https://youtu.be/zSjTfhCmU8M?t=159
2/26/18


VIDEO: Connecting the Ink Lines

To see a video of this procedure, click this link:


<https://youtu.be/zSjTfhCmU8M?t=405>

Or scan the QR code at right using the camera app on your mobile device.

View Time: 6:45 – 9:07

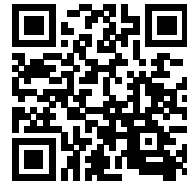

SQ-CP500-010041
Connecting the Ink Lines
https://youtu.be/zSjTfhCmU8M?t=405
6/4/17

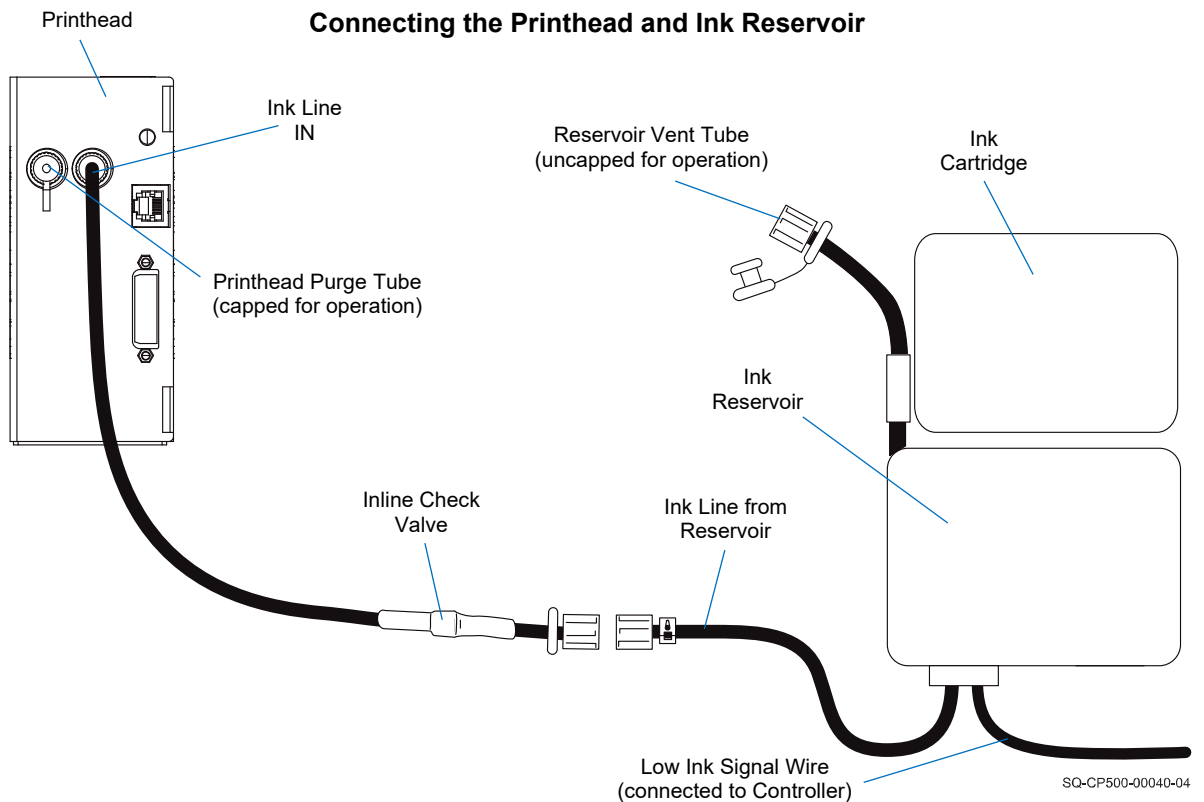

7. Make sure that the Reservoir Vent Tube (Part Number 2001069 for Oil, Part Number 2001070 for Solvent) is uncapped for operation.

NOTE: The Reservoir Vent Tube must be uncapped during operation to allow air to flow into the Ink Reservoir. However, when the system is not in use, the Reservoir Vent Tube should be capped to prevent debris from entering the system. It should also be capped when moving the system to prevent ink from escaping.

8. Make sure that the Printhead Purge Tube is capped for operation.
9. Connect the Low Ink Signal Wire to the RJ-12 Ink Level Signal Port on the back of the Printhead.
10. Correctly position the Printhead relative to the substrate (see “Distance from Substrate” on page 35).



ATTENTION: Do not position the Printhead where it can be hit by products passing on the Conveyor, as this can damage the Printhead.


Bag Ink System Setup

To Set up a Bag Ink System:

1. Attach the Ink Tray to the mounting hardware according to the mounting instructions.

NOTE: Squid Ink offers several mounting systems. Mounting and installation may vary depending on the mounting system used. Contact your authorized Squid Ink distributor for guidance on the best mounting system for your needs.


Ink Tray Attached to Mounting System

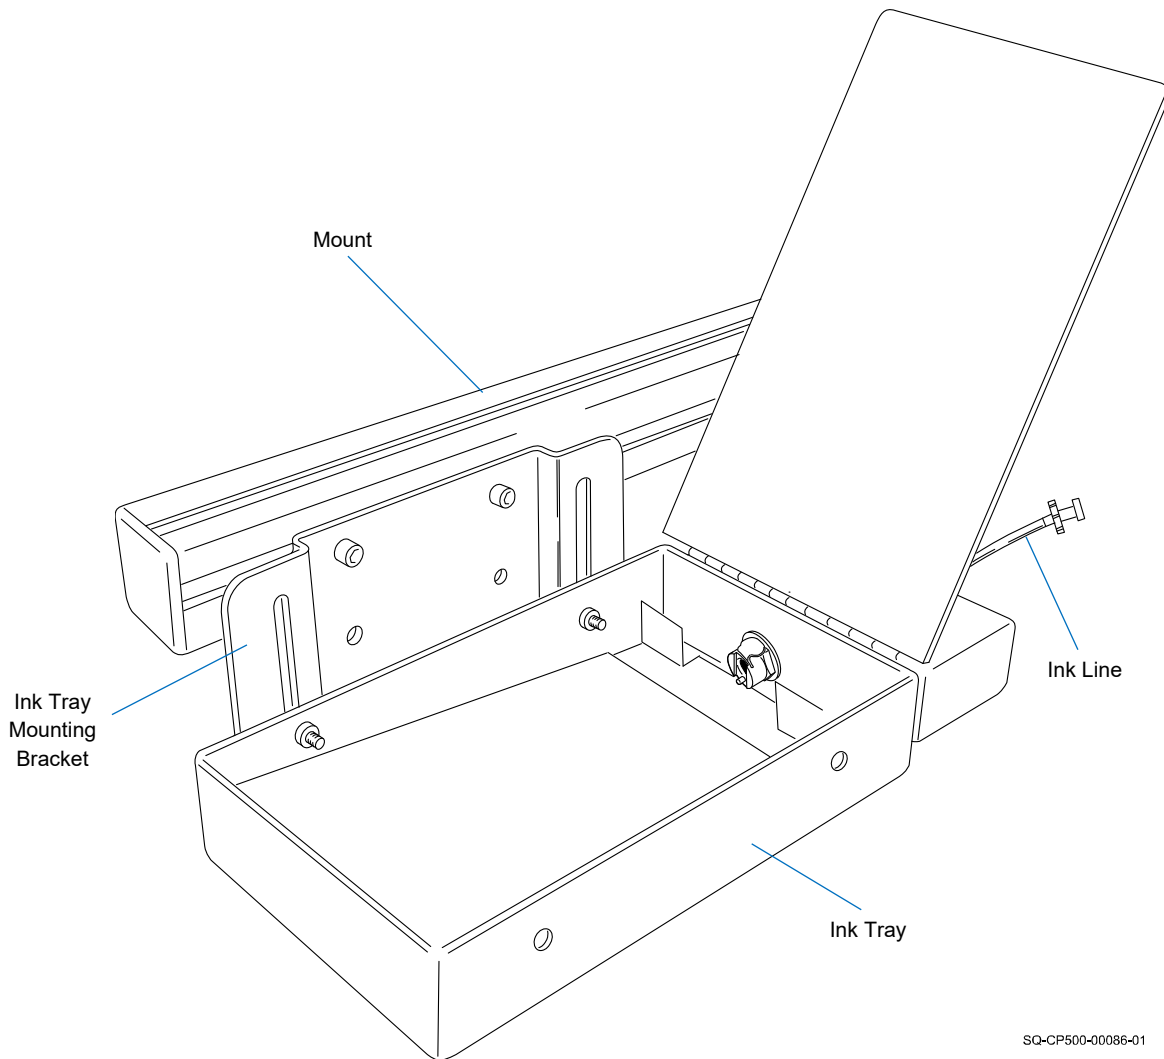

SQ-CP500-00086-01


2. Ensure that the Printhead is properly aligned to the Ink Reservoir (see “Printhead Height Relative to Ink Reservoir or Ink Pan” on page 47).
3. Fabricate an Ink Line with female Luer fittings on each end using the supplied tubing and fittings.

Fabricating an Ink Line

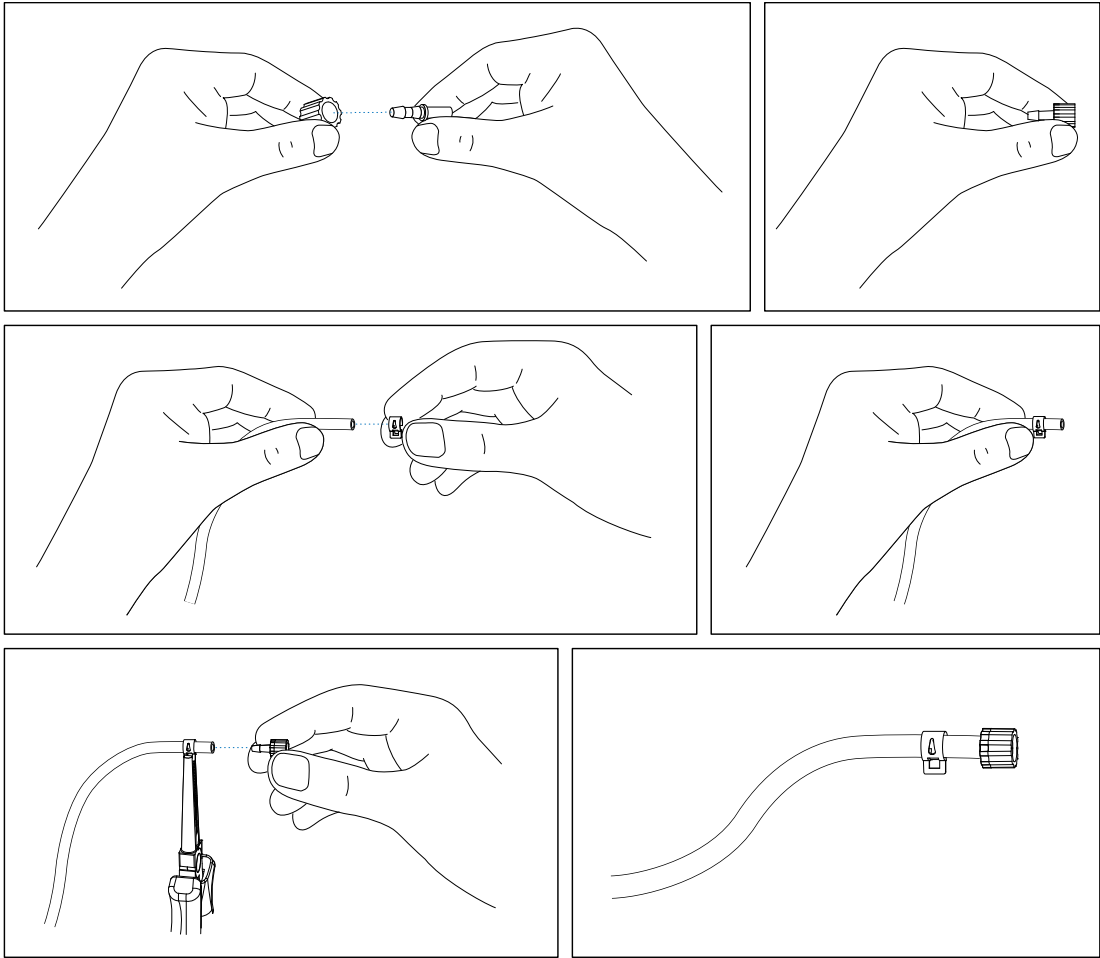

SQ-CP500-00187-02

- 4. Attach one end of the fabricated Ink Line to the Ink Tray Nozzle and attach the other end to the Ink Line IN on the back of the Printhead.

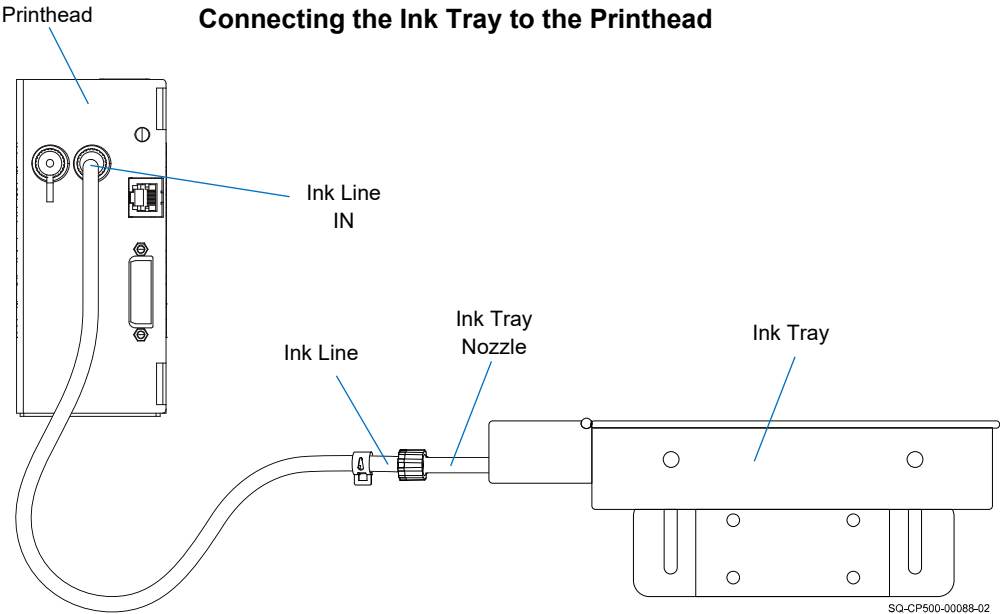

SQ-CP500-00088-02

5. Connect the Ink Bag to the Ink Bag Connect Fitting in the Ink Tray.




WARNING: Do not squeeze the Bag like a sponge. Doing so is very hazardous, can potentially lead to personal injury, will likely damage the Print Engine, and will void the warranty.

IMPORTANT: Twisting, pulling, or bending the Bag material can cause small cracks at the sealed joints, leading to leaks.

IMPORTANT: As the Bag becomes nearly empty (<25% full), the Pressure Plate may need to be removed to generate an effective purge, but be very careful not to apply much pressure, twist, or strain the Bag connection.

Installing the Ink Bag

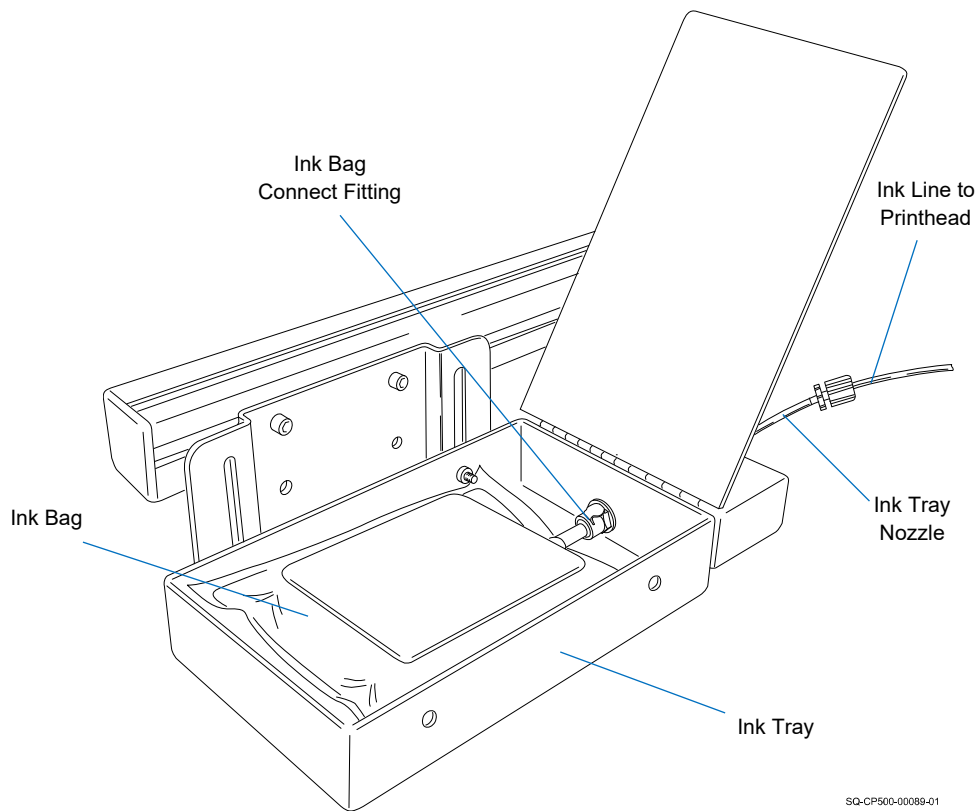

SG-CP500-00089-01

Printhead Height Relative to Ink Reservoir or Ink Pan


The following Printhead-to-Ink Bag or Reservoir height drawings are a starting point or guideline. The heights may need to be adjusted slightly if the following problems occur:

- If the Bag or Reservoir is too high, the Printhead will flood with ink and the print will start to disappear, and possibly drip ink.
- If the Bag or Reservoir is too low, the Printhead will be “starved” for ink, and the print will begin missing jets.

Oil-Based Systems




For oil-based systems, the lowest surface of the Printhead should be at the same level as the top of the Ink Reservoir (Cartridge Ink system) or Ink Pan (Bag Ink system).

Oil Printhead with Cartridge System

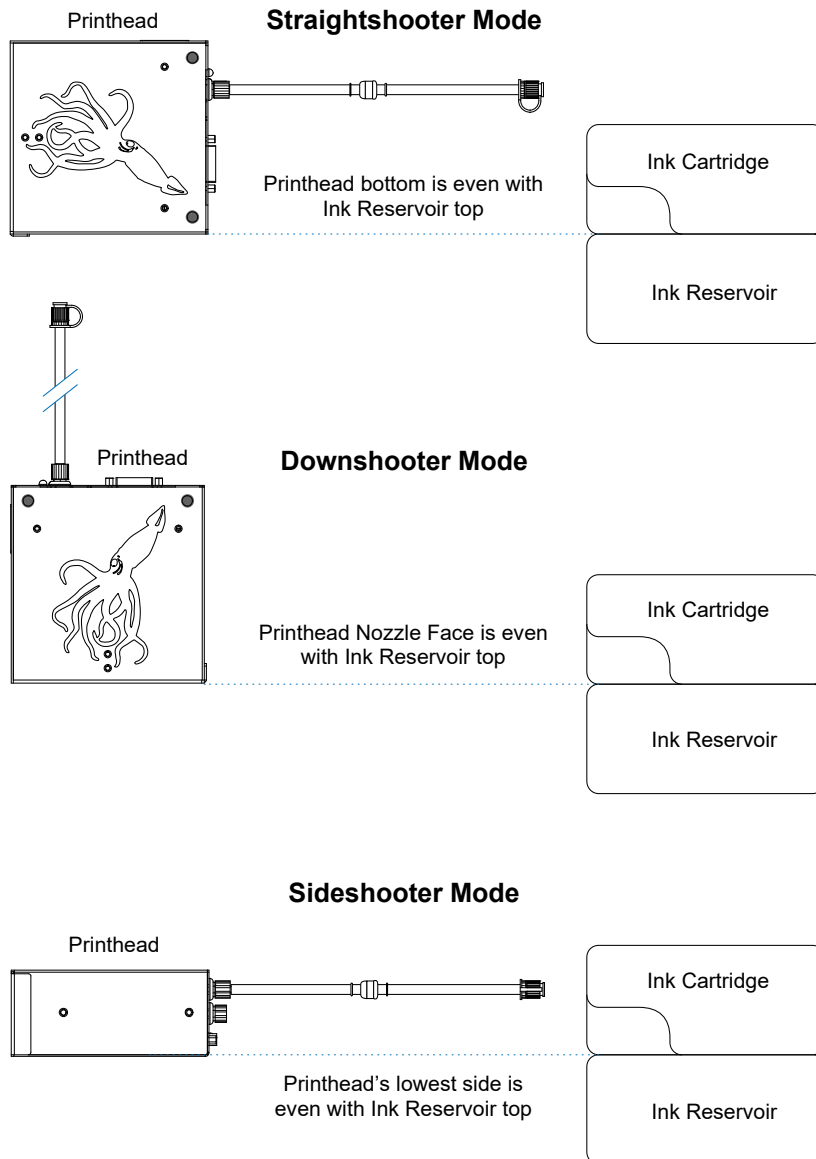

SQ-CP500-00061-01

Oil Printhead with Bag System

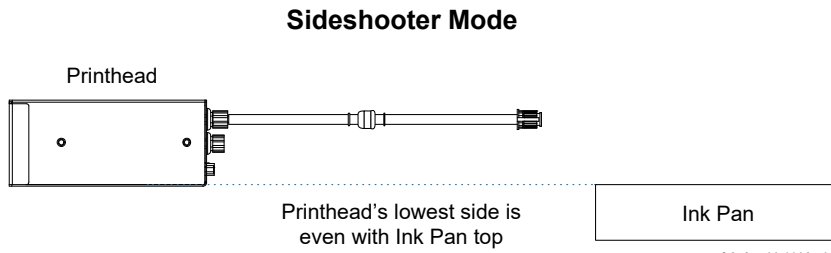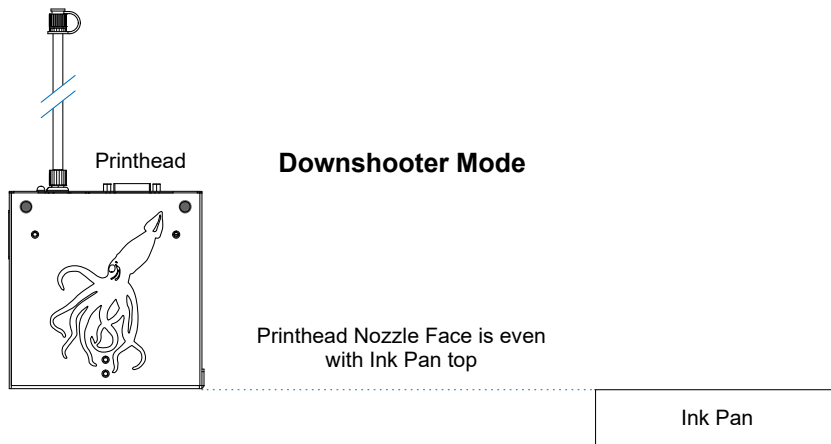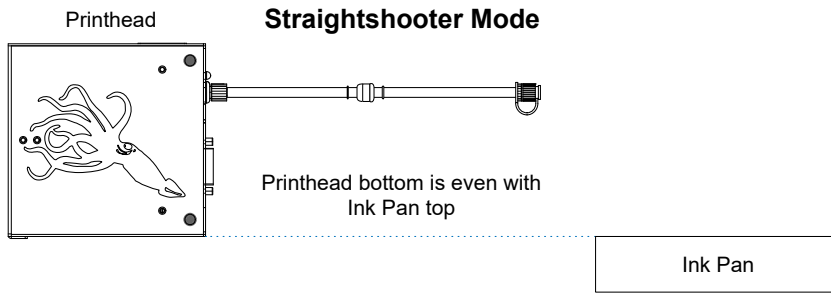


SQ-CP500-00064-01


Solvent-Based Systems

For solvent-based systems, the lowest surface of the Printhead should be 2" (50.8 mm) higher than the top of the Ink Reservoir (Cartridge Ink system) or Ink Pan (Bag Ink system).

Solvent Printhead with Cartridge System

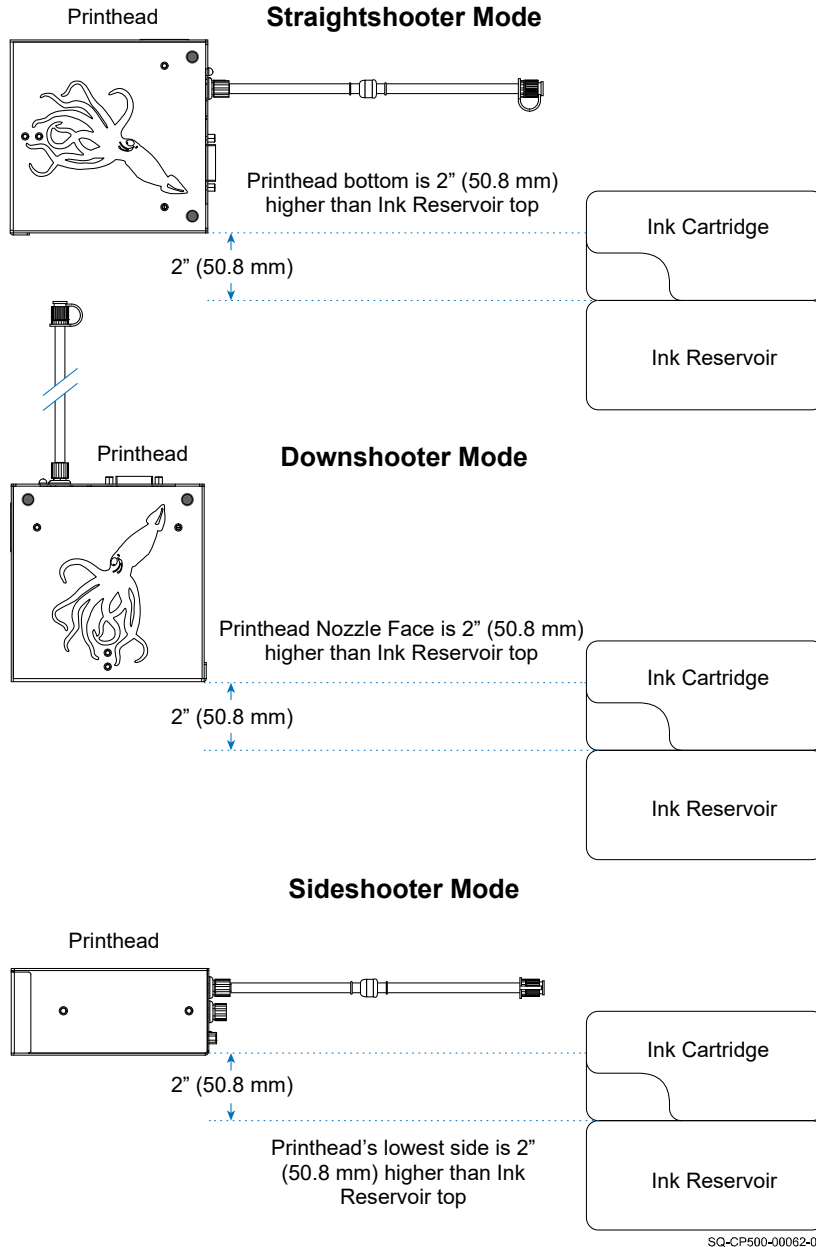


Solvent Printhead with Bag System

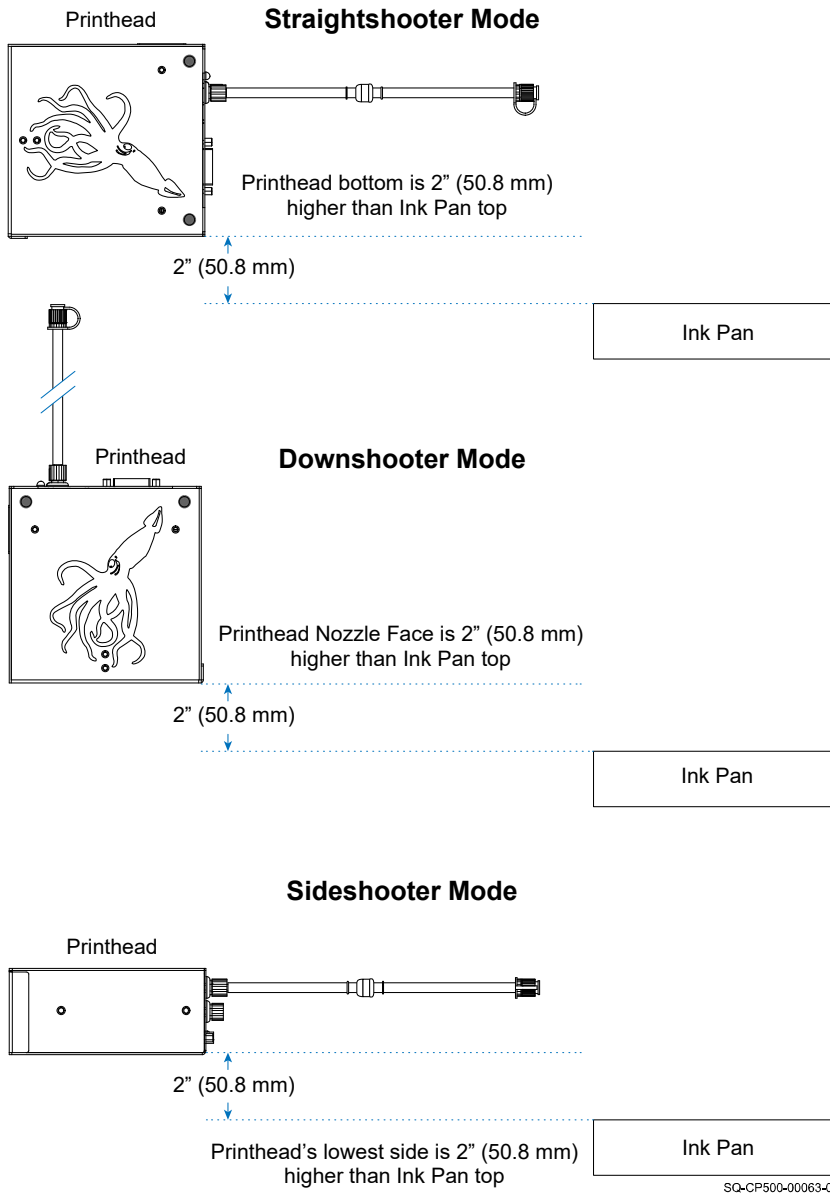

Cable Connections

Connecting Photocell Trigger to Controller

Connect the Photocell Signal Cable to the "IN" Port on the back of the Controller.

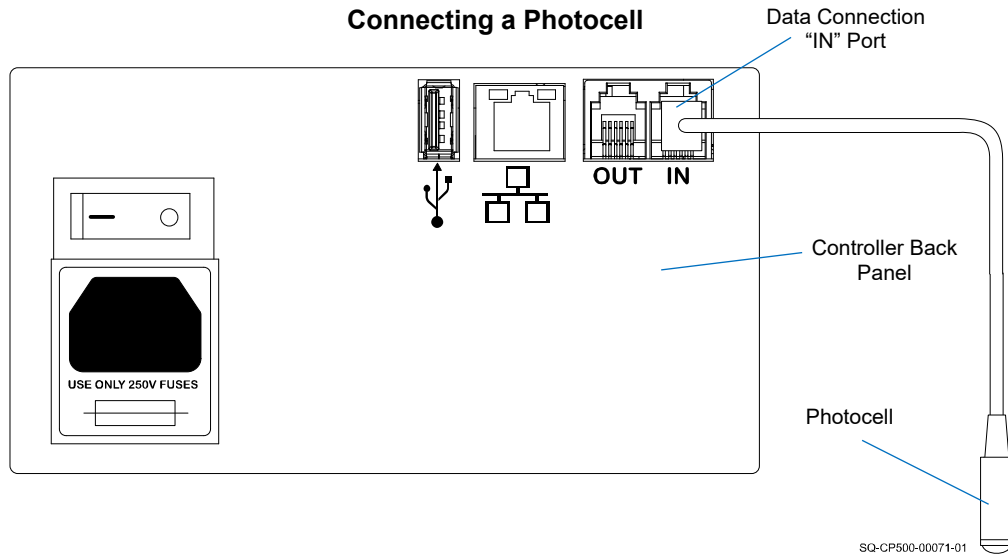

Connecting an Optional Encoder to Controller

Connect the optional Encoder and Photocell trigger to the RJ12 Adapter Cable. Connect the Adapter Cable to the “IN” Port on the back of the Controller.


VIDEO: Mounting and Connecting an Encoder

To see a video of this procedure, click this link:


<https://youtu.be/zSjTfhCmU8M?t=626>

Or scan the QR code at right using the camera app on your mobile device.

View Time: 10:26 – 11:51

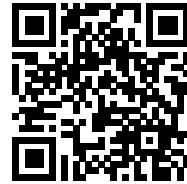


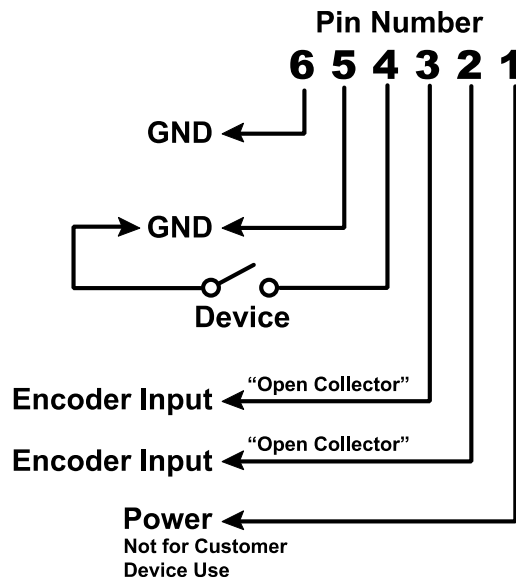
8QCP500/0156-01
Mounting and Connecting an Encoder
100-1000-1000-1000-1000
10/26/11/11

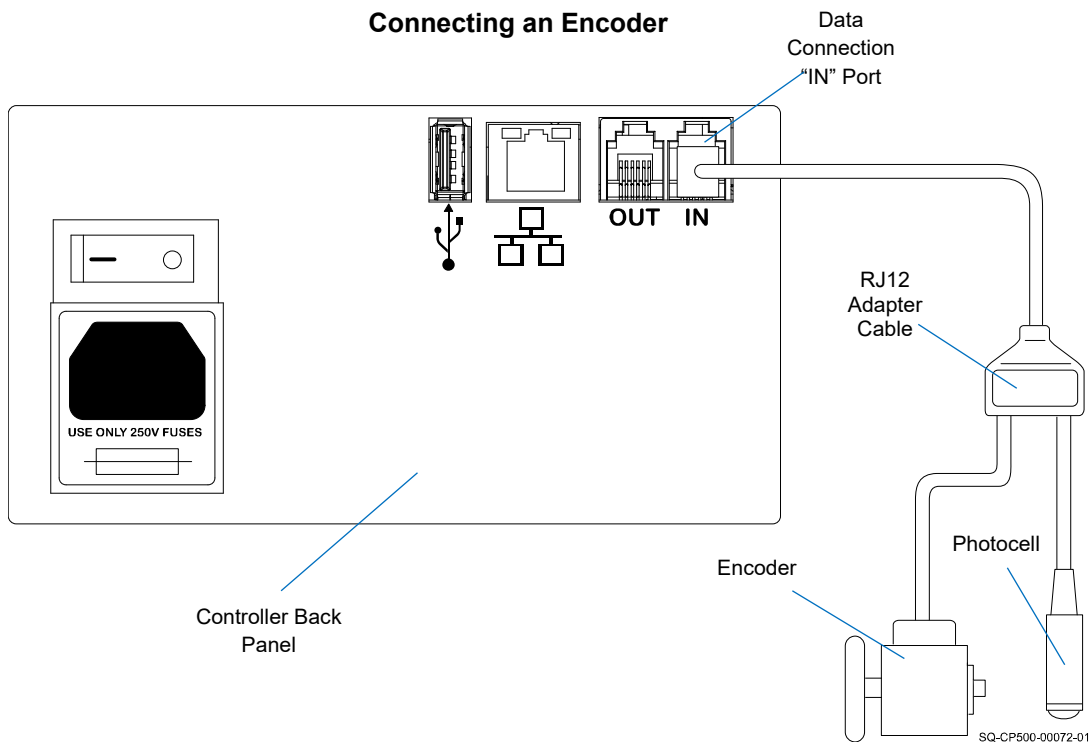


Custom Triggering Device

Some applications may require the use of a site-specific triggering device. Use the following Pin Assignments on the RJ12 Connector to install a custom triggering mechanism.

	<p>ATTENTION: Site-specific or unusual devices should only be connected by trained and qualified personnel. Please contact your authorized Squid Ink distributor to discuss device compatibility before connecting.</p>
---	--



On the RJ12 Input Connector, connect Pin 4 to an NPN sinking open-collector output with Pin 5 acting as ground. When using a relay, connect the relay across Pins 4 and 5. The relay should be normally open, and should close when activated.

	<p>ATTENTION: Do not apply external voltage to any Pin on the RJ12 Connector.</p>
---	--

Printhead Data Cable



WARNING: Ensure that the Controller Power Switch is turned **OFF** and the Controller is disconnected from the power source when connecting a Printhead.


VIDEO: Connecting the Data Cable

To see a video of this procedure, click this link:

<https://youtu.be/zSjTfhCmU8M?t=1064>

Or scan the QR code at right using the camera app on your mobile device.

View Time: 17:44 – 18:32

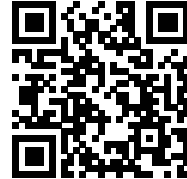


SG-CP500-00074-02
Connecting the Data Cable
https://youtu.be/zSjTfhCmU8M
17:44-18:32

On the front of the Controller, there are Data Connections for two Printheads. They are labeled “PRINthead 1” and PRINthead 2”.

Connect a Data Cable to “PRINthead 1”. Connect the other end of the Data Cable to the Printhead that will be designated “Printhead 1.”

NOTE: A single printer setup **MUST** always connect to the PRINthead 1 Port, as the system will not work if nothing is plugged into the PRINthead 1 Port.

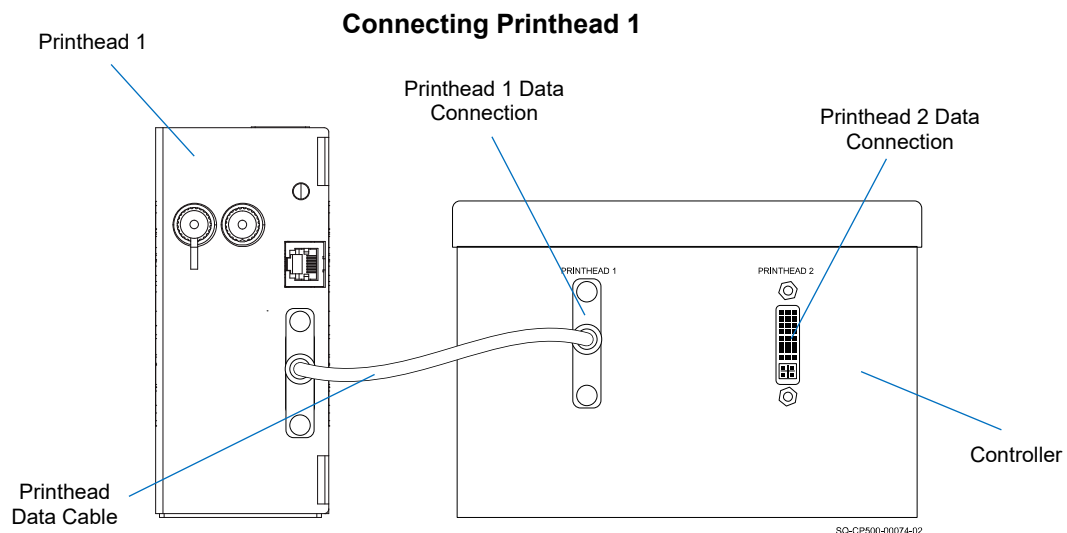

The Data Cable also carries power from the Controller to the Printhead. There is no Power Switch on the Printhead. The Printhead will power up when the Controller is turned on.


Connecting a Second Printhead



WARNING: Ensure that the Controller Power Switch is turned **OFF** and the Controller is disconnected from the power source when connecting a second Printhead.

To connect a second Printhead, connect the Printhead Data Cable to PRINTHEAD 2 Port on the Controller, and connect the other end to the Printhead that will be designated “Printhead 2.”

Connecting a Second Printhead

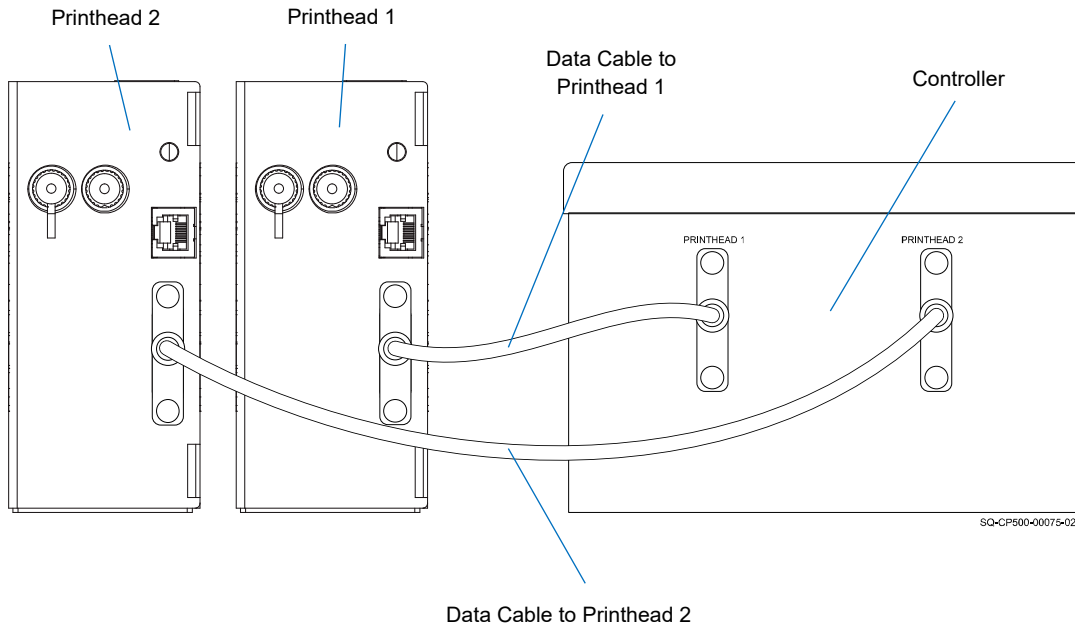


Connecting a Second CoPilot 500 Printing System

Connecting a second CoPilot 500 system allows two different messages to be printed on the same box at the same time – for example, when printing on both sides of a box. If using a second CoPilot 500 printing system, connect an RJ12 Sensor Cable between the first and second CoPilot 500 Controllers. Connect the Sensor Cable from the “OUT” Connection Port on the first Controller to the “IN” Connection on the second Controller.



ATTENTION: Do not connect the “IN” and “OUT” Ports to the Ethernet Port. The “IN” Port of the second Controller must be connected to the “OUT” Port on the first Controller.

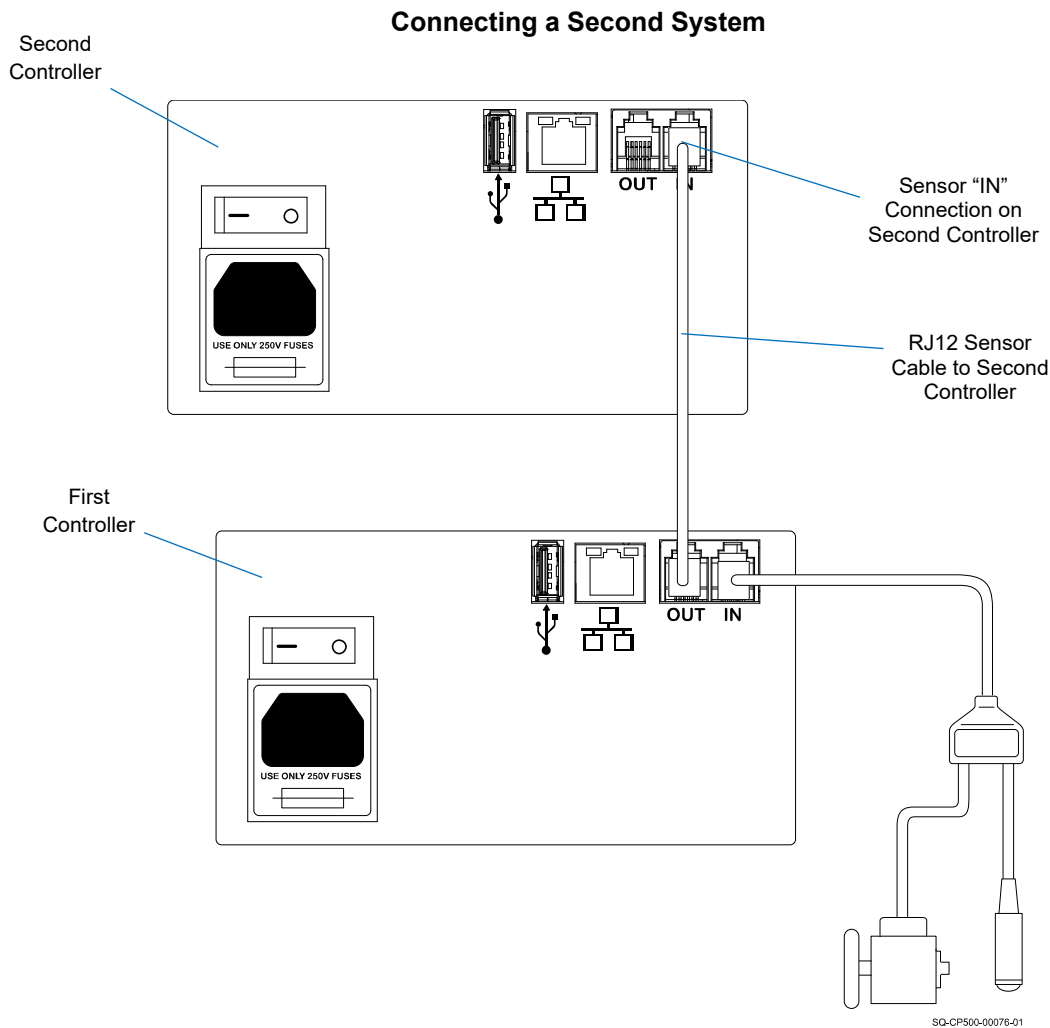


NOTE: Theoretically an infinite number of CoPilot 500 printing systems can be attached using the “IN” and “OUT” Data Connection Ports. However, the number of printers chained through a single triggering device would be limited by the specific installation and use. Other Squid Ink printing systems can also be connected downstream from the controller. For example, there could be a CoPilot, AutoPilot, and an SQ-2 printing system all attached to a single triggering device.

Connecting an Optional Low Ink Warning Beacon

An optional Low Ink Warning Beacon (Part Number 2003927) can be connected to the Controller. An optional Audible Warning Beacon (Part Number 2003975) is also shown). The Low Ink Warning Beacon is useful for alerting operators that ink is running low before missed prints or Printhead damage occurs due to the printer running out of ink.

Connecting a Warning Beacon

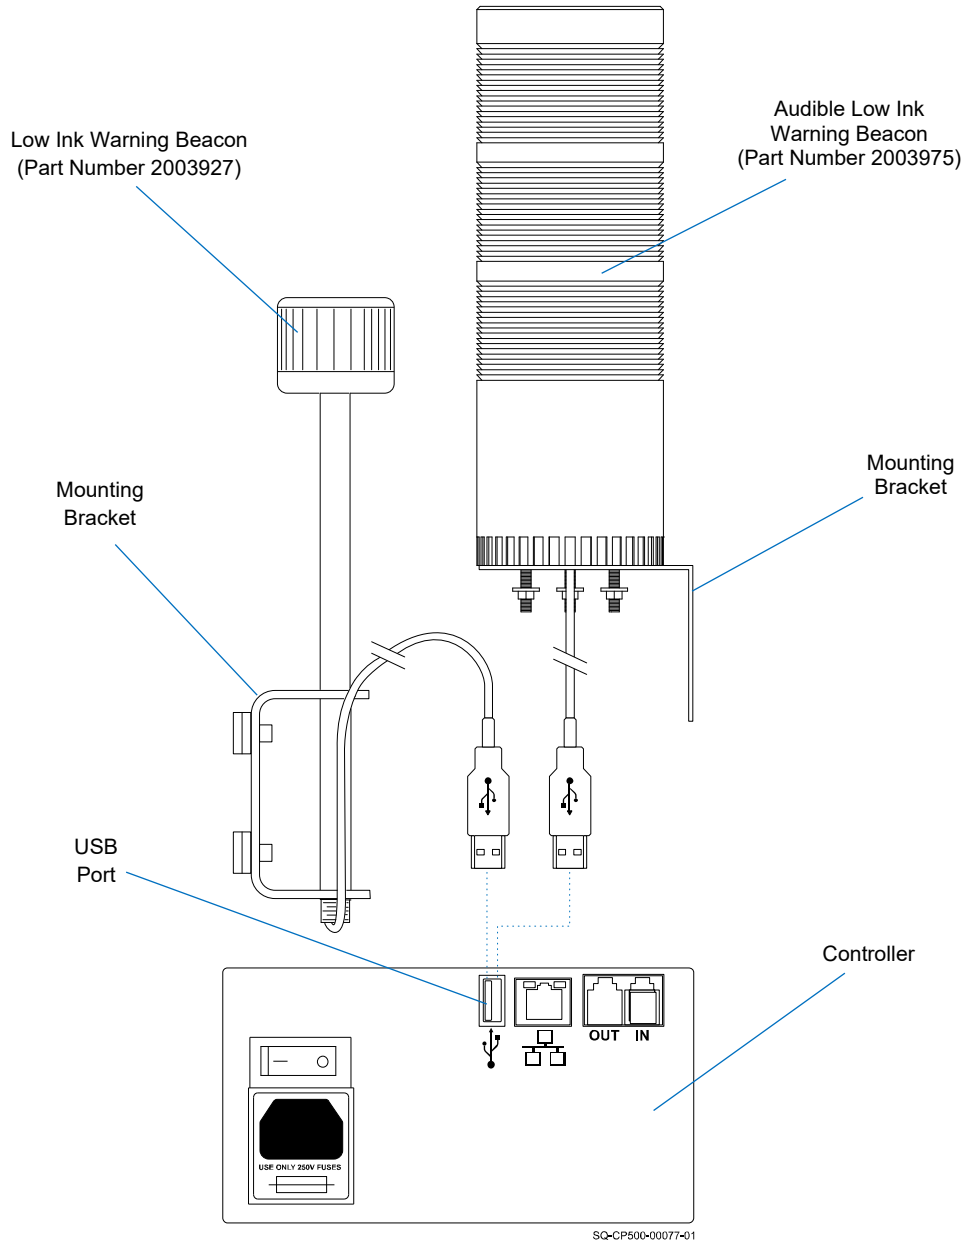


Since each installation is unique, Squid Ink cannot anticipate an ideal location for the Low Ink Warning Beacon. The Beacon has a generic Mounting Bracket attached to it. Mount the Warning Beacon within 5' (1.5 meters) from the Controller.

Connecting to a Desktop PC


To connect to a desktop PC, connect an Ethernet Cable to the Ethernet Port on the Controller and into the Ethernet Port on the PC.

Connecting to a PC

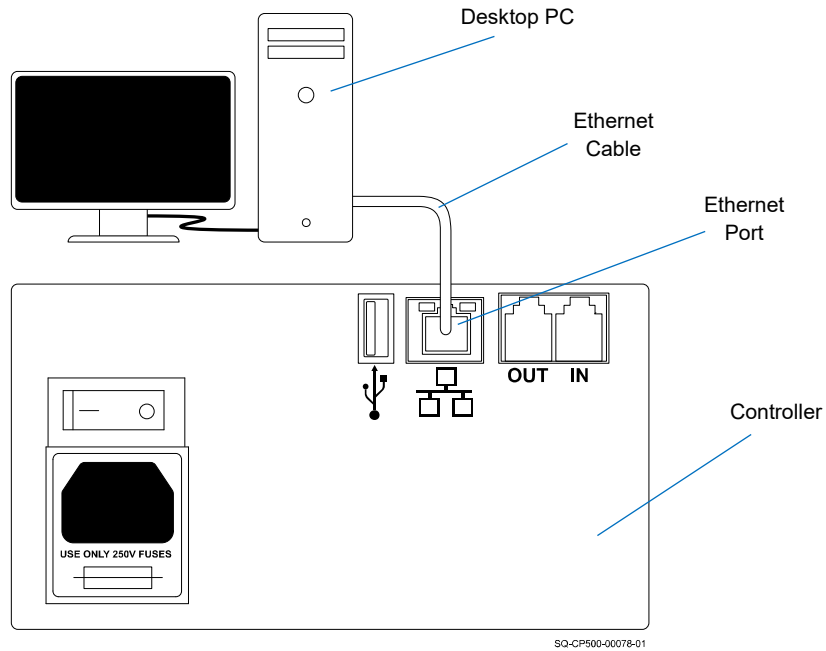

Connecting to a Local Area Network


The network connection is located on the Controller. To connect to a local area network, plug the Ethernet Cable into the Ethernet Port on the Controller and into the Ethernet Port on a connected PC.

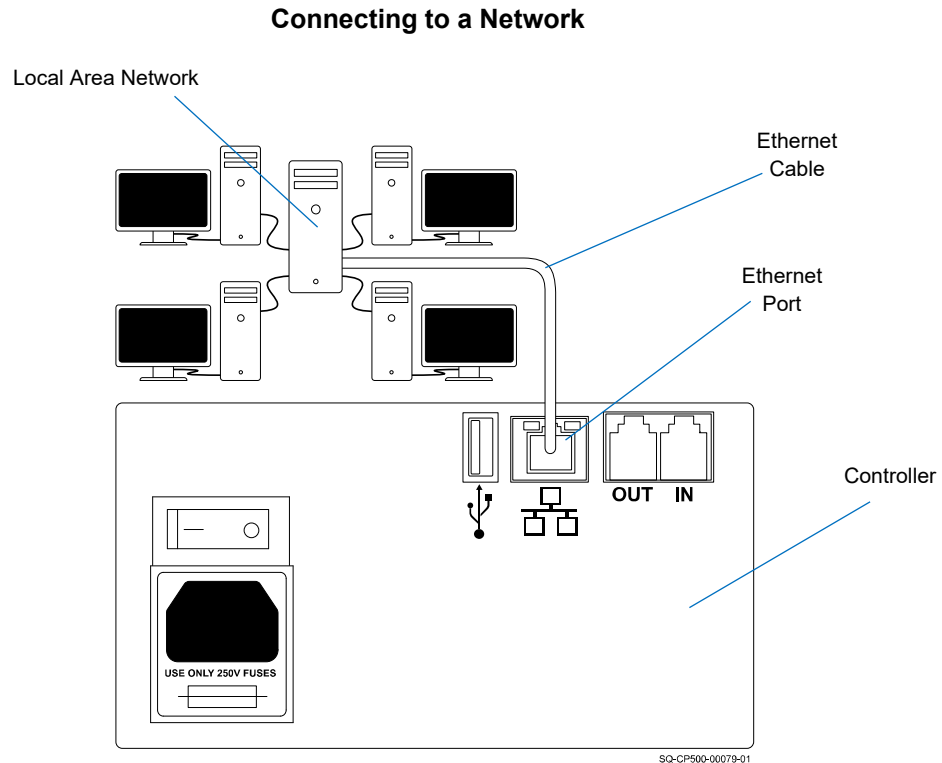

USB Port

There is a USB Port on the back of the Controller. The USB Port can be used for a variety of USB-supported devices such as a WiFi Adapter Antenna, Low Ink Warning Beacon, Scanner, or removable USB Drive.

Locating the USB Port

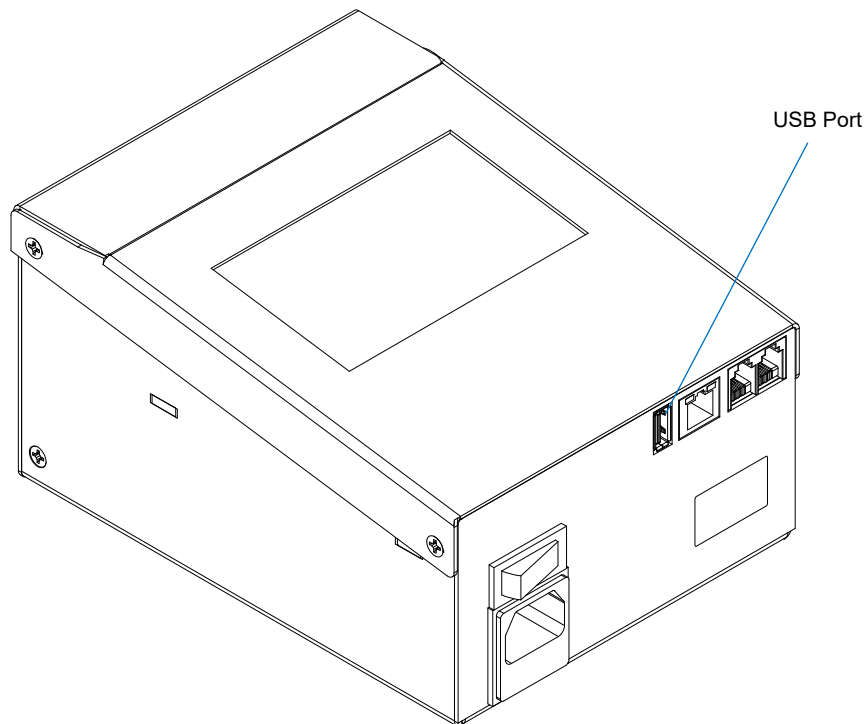

SQ-CP500-00054-01

A removable USB Drive can be used to load messages from the Orion™ message creation software package and to install printer firmware and software updates.


The **USB Button** in the **Settings Screen** will be disabled if there is no USB device present. The **USB Load Screen** will automatically open if a USB Drive is plugged in during power up.

NOTE: USB format must be FAT32 or NTFS.

Optional Four Port USB Hub

There is only a single USB Port on the Controller. However, the CoPilot 500 is not limited to a single USB device. The optional Four Port USB Hub (Part Number 2004242) can provide three points of entry for USB devices.

Connecting Multiple USB Devices

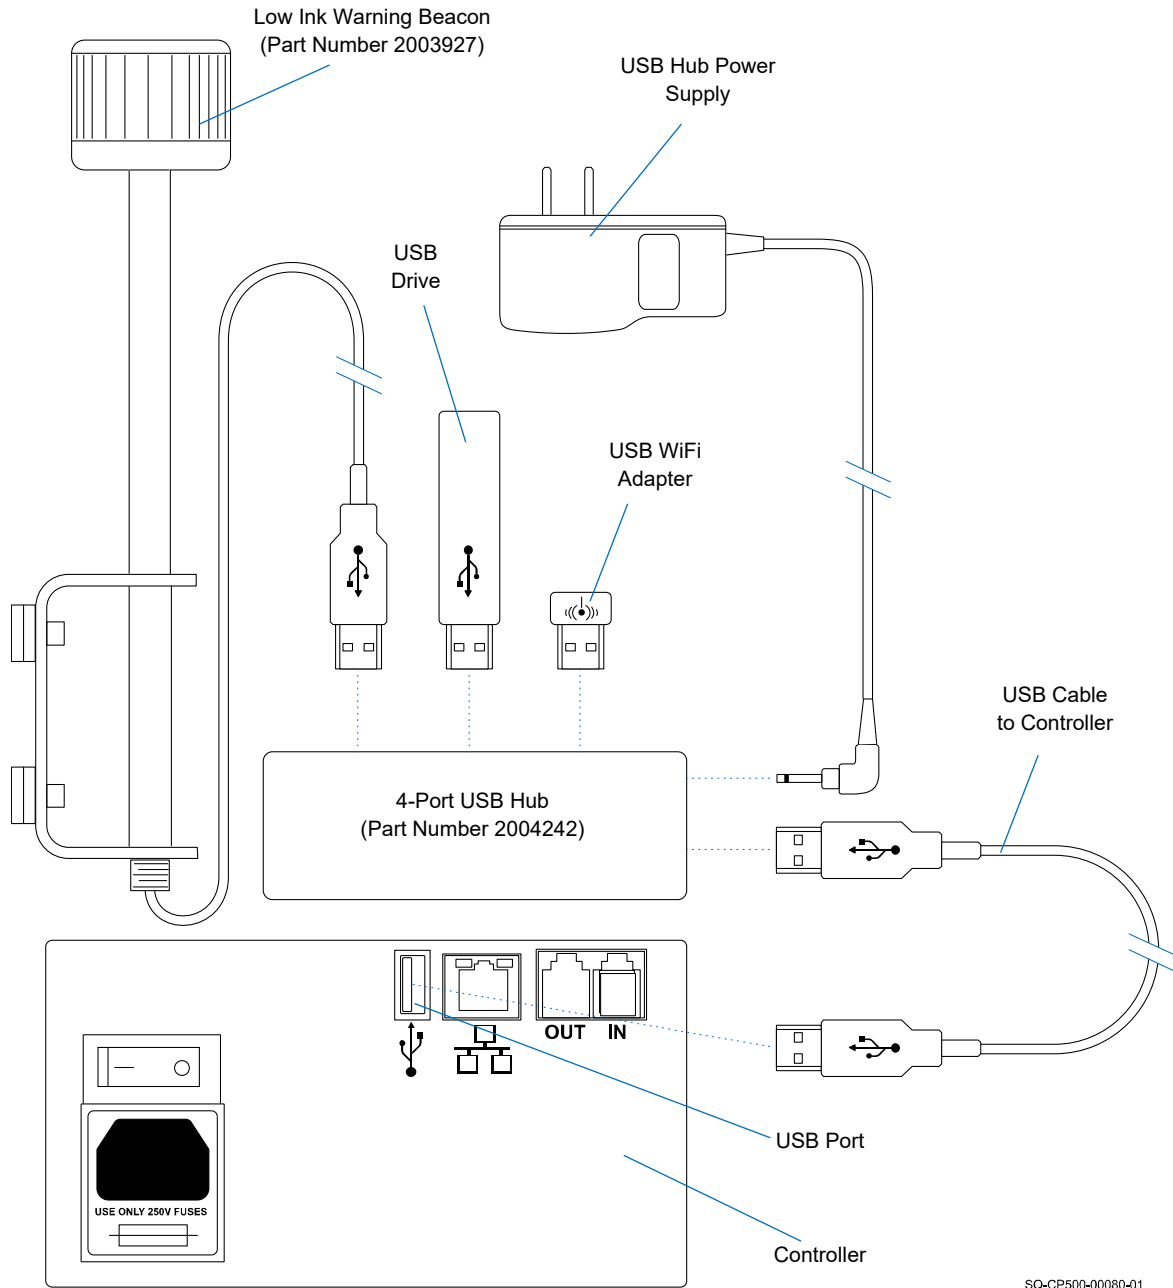


SQ-CP500-00080-01

Power Supply

The Power Cord Receptacle is located on the back of the Controller. Plug the supplied Power Cord into the Power Cord Receptacle, **making sure the Power Switch is in the OFF position**, and plug the other end of the Power Cord into a properly wired and grounded electrical outlet.

Plugging in the Power Cord

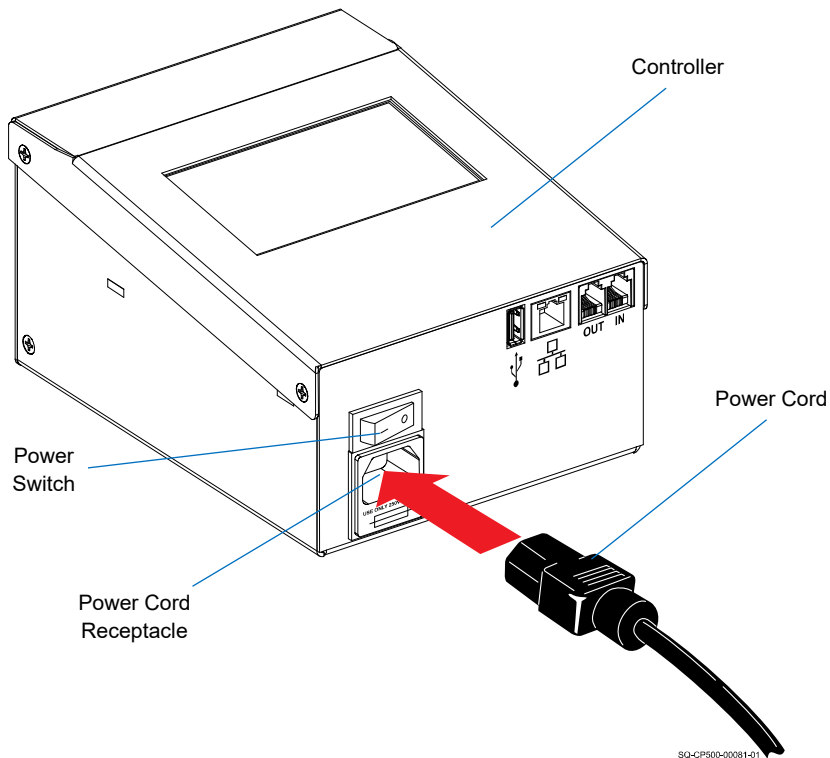

Commissioning the Printhead

If the printing system is new or has been idle for an extended period, the Printhead must be commissioned (primed) to remove potential air bubbles from the Printhead Nozzles. Air bubbles can lead to dropouts or poor print quality.



ATTENTION: To avoid scratching the Printhead Faceplate, use only non-abrasive lint-free wipes (Part Number 2007021). Wear protective gloves when commissioning the Printhead. Ensure that nothing is covering the Nozzle Face before priming or printing.

Commissioning an Ink Cartridge System


VIDEO: Priming the Printhead

To see a video of this procedure, click this link:

<https://youtu.be/zSjTfhCmU8M?t=824>

Or scan the QR code at right using the camera app on your mobile device.

View Time: 13:44 – 17:43

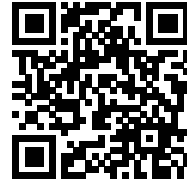


80-CP900-0101-01
Priming the Printhead
https://youtu.be/zSjTfhCmU8M?t=824
13:44:17:43

Items Needed to Commission the Printhead:

- Nonabrasive lint-free wipes (Part Number 2007021)
- Container to collect discharge ink
- Protective gloves


To Commission the Printhead:

1. Place a container suitable for capturing ink under the Printhead Purge Tube.
2. Remove the Cap from the Printhead Purge Tube.
3. Verify that the installed Ink Cartridge is properly seated in the Ink Reservoir.
4. Verify that the Reservoir Vent Tube is uncapped.

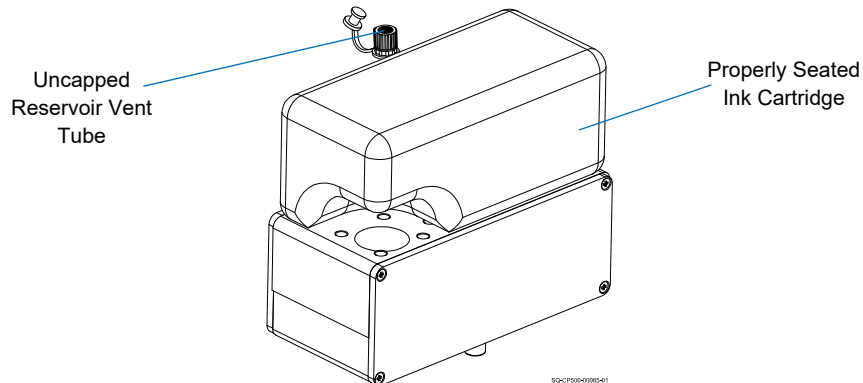


5. Fold a non-abrasive, lint-free wipe and place it below the front of the Nozzle Face to catch any excess ink.

Preparing to Prime the Printhead

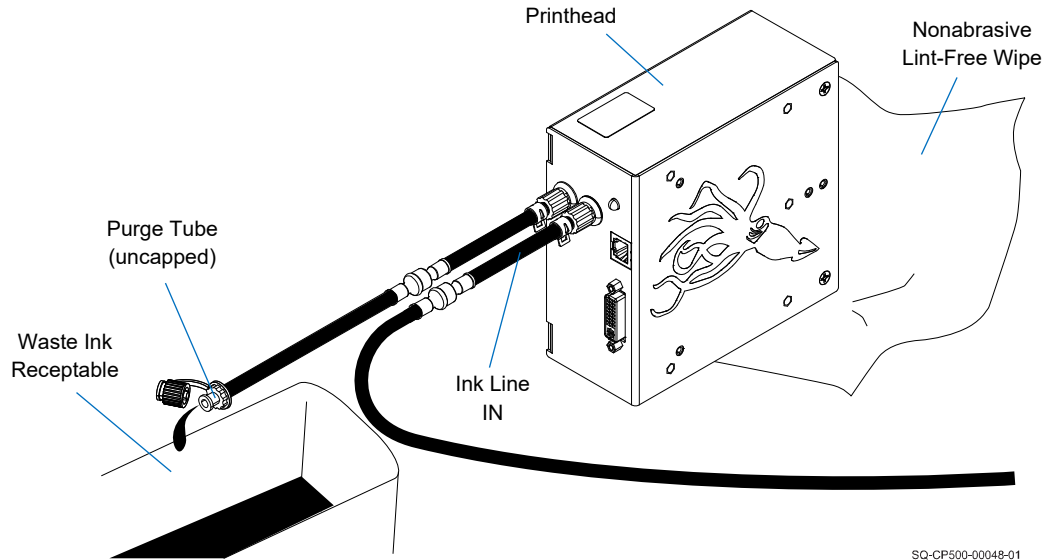


6. On the rear of the Ink Reservoir, press the Priming Bulb repeatedly until ink exits the Drain Tube and the Nozzle Face. A slow drip out of the Printhead is required for an effective purge. Continue to press the Priming Bulb until ink comes out of the Purge Tube without air bubbles.

Pressing the Priming Bulb

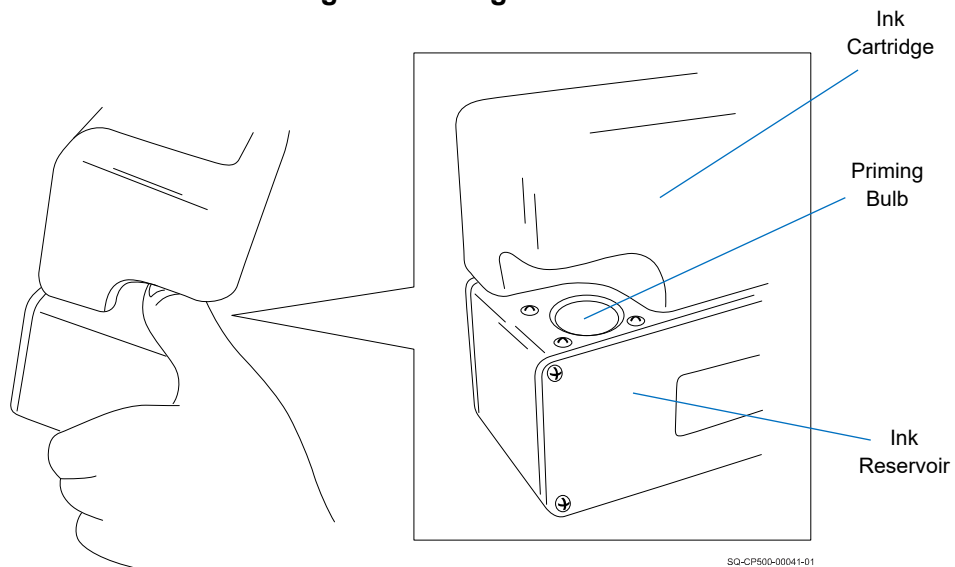

7. Replace the Cap on the Purge Tube. This seal must be tight for the printer to function.

Capping the Purge Tube

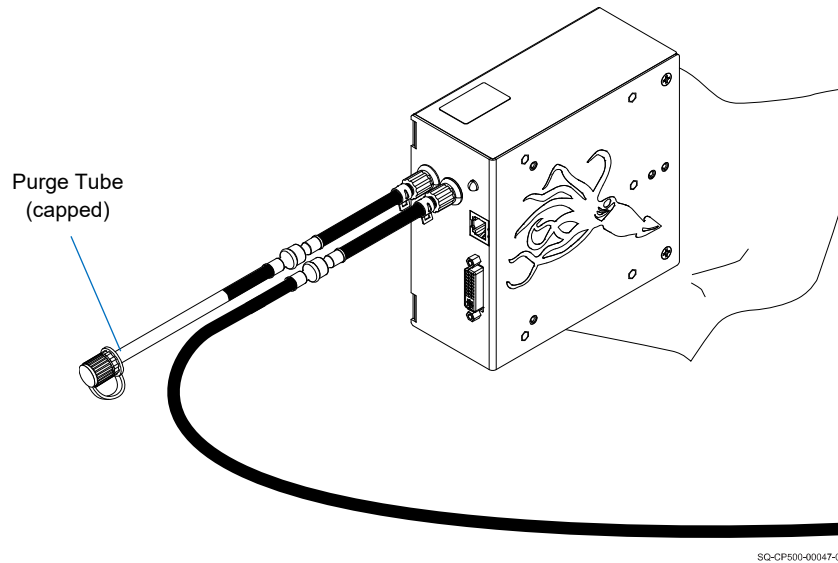

- 8.** Fold a non-abrasive, lint-free wipe and hold it against the lower part of the Nozzle Face.
- 9.** Press the Priming Bulb repeatedly until bubble-free ink comes out of all the Printhead Nozzles.
- 10.** When finished purging, gently wipe excess ink from the Nozzle Face.

The Printhead is now commissioned and ready to print.

Commissioning a Bag Ink System

After the Ink Bag is attached, the ink system must be commissioned (primed) to get the ink flowing into the Printhead.


Items Needed to Commission the Printhead:

- Nonabrasive lint-free wipes (Part Number 2007021)
- Container to collect discharge ink
- Protective gloves

To Commission the Printhead:

1. Place a container suitable for capturing ink under the Printhead Purge Tube.
2. Remove the Cap from the Printhead Purge Tube.
3. Fold a lint-free, non-abrasive wipe and hold it gently against the front of the Nozzle Face.

Preparing to Prime the Printhead

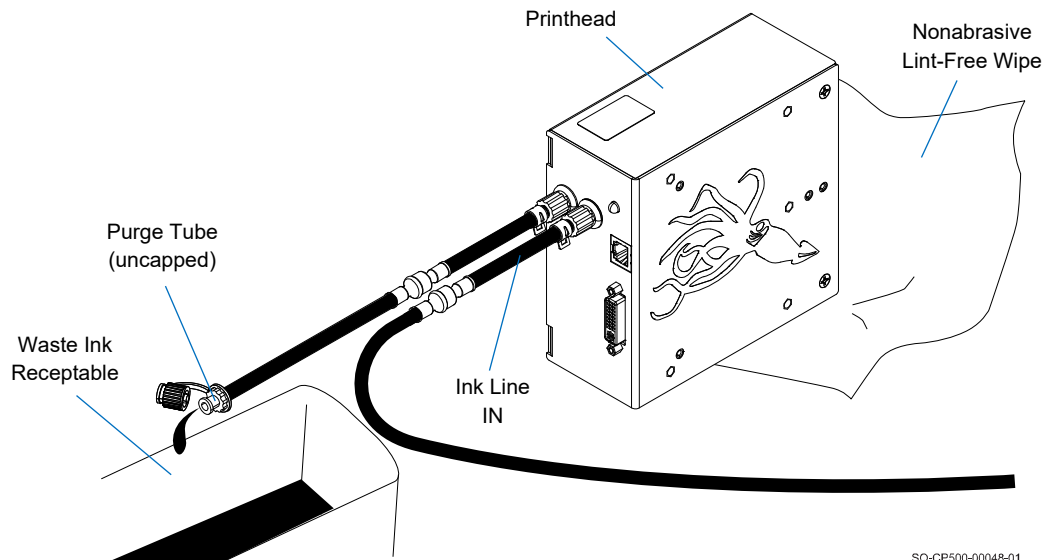


SQ-CP500-00048-01

4. Gently but firmly press down on the Ink Bag until ink exits the Purge Tube and the Nozzle Face. Continue to press the Ink Bag until ink comes out of the Purge Tube without air bubbles.

IMPORTANT: Be sure to have the wipe in place before applying pressure to the Ink Bag, and be sure to release the pressure before removing the wipe.


Pressing the Ink Bag

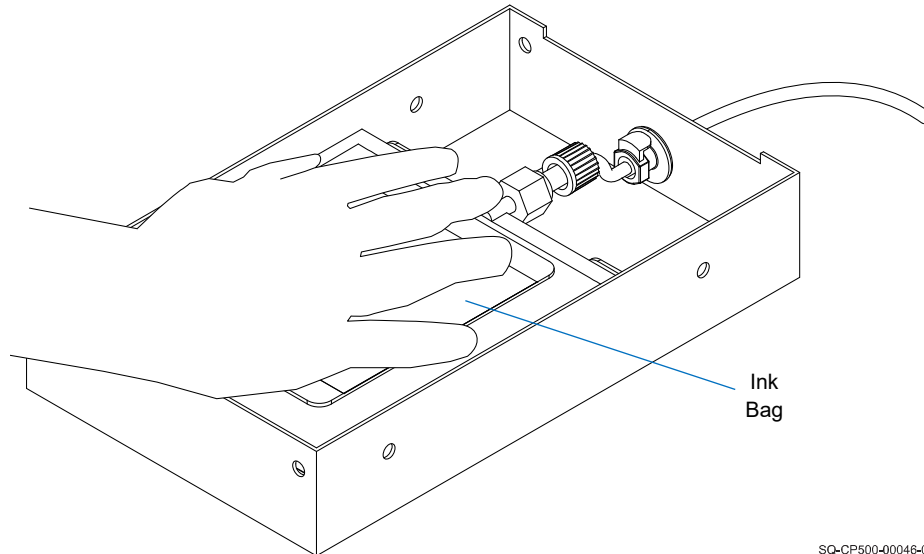

SQ-CP500-00046-02

5. While continuing to press gently but firmly on the Ink Bag, replace the Cap on the Purge Tube. This seal must be tight for the printer to function.

Capping the Purge Tube

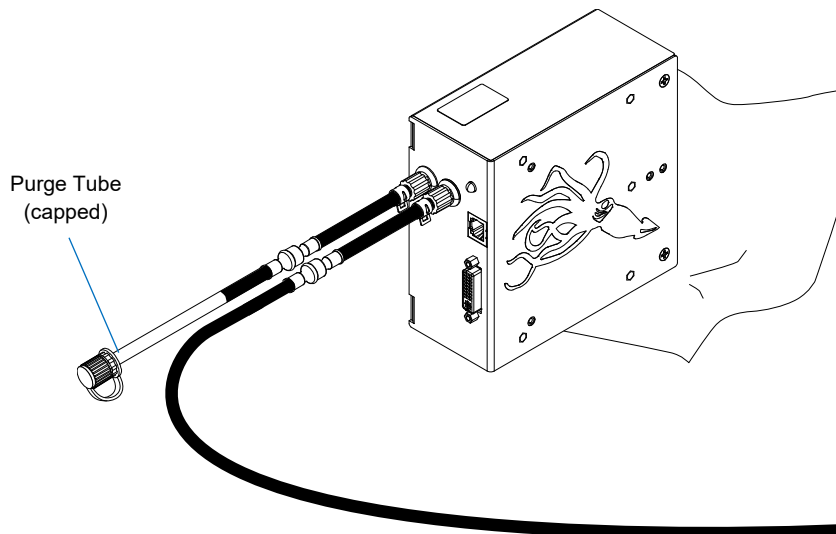

SQ-CP500-00047-01









6. Press the Ink Bag repeatedly until bubble-free ink comes out of all the Printhead Nozzles.
7. When finished purging, gently wipe excess ink from the Nozzle Face.















The Printhead is now commissioned and ready to print.



















Software Interface



















Interface Button Overview






IMPORTANT: GUI response time may be negatively impacted when printing at high speeds. If this occurs, stop printing before attempting to modify any other settings.

Button	Function
<p>Start or Stop Printing</p>  	<p>Select Start to start printing. Select Stop to stop printing.</p>
<p>Zoom Screen</p> 	<p>Select the Zoom Screen to view the message at an enlarged or reduced size. Note: The Zoom Screen is disabled on messages longer than 42".</p>
<p>Message Screen</p>     	<p>Select the Message Screen to display a list of messages available for printing.</p> <p>Delete message.</p> <p>Scroll Up.</p> <p>Scroll Down.</p> <p>Apply current settings and values.</p>

Button	Function
Settings Screen 	Select the Settings Screen to configure Printer settings.
	Return to the Home Screen .
	Return to previous screen.
	Switch between the Settings Page One Screen and the Settings Page Two Screen .
	Information.
	Set line speed.
  	Set distance from Printhead to trigger (Photocell). Show distance in inches. Show distance in centimeters.
  	Set print direction. Set print direction: left to right. Set print direction: right to left.
 	Encoder settings. Reset the Encoder.

Button	Function
   	<p>Repeat and Squid Connect trigger settings.</p> <p>Select Photocell as trigger</p> <p>Select screen as trigger</p> <p>SquidConnect Dongle Active</p>
	<p>Open the Counters Screen.</p>
  	<p>Spit settings.</p> <p>Selects Printhead 1.</p> <p>Selects Printhead 2.</p>
	<p>Barcode validation.</p>
    	<p>Connect to USB: only enabled if a USB Drive is present.</p> <p>A USB Drive is connected.</p> <p>Copy messages and fonts from USB to Controller.</p> <p>Copy messages and fonts from Controller to USB.</p> <p>USB Debug Report: Copies the current message and configuration to a Zip file on a connected USB Drive to help diagnose any printer problems.</p>
	<p>Eject the USB Drive.</p>
  	<p>Reset production counter to zero and ink supply to “full.”</p> <p>Reset ink supply to “full.”</p> <p>Reset production counter to zero.</p>

Button	Function
	Printhead temperature.
   	<p>Open the Wireless Connect Screen.</p> <p>Access or dismiss the on-screen keyboard.</p> <p>Disconnect from WiFi.</p>
  	<p>Open the Bluetooth Connect Screen.</p> <p>Access or dismiss the on-screen keyboard.</p>
	Recalibrate the Touchscreen.
 	<p>Access a remote database server.</p> <p>Search the remote database.</p>
	Show or change the current date.
	Show or change the current time.
 	<p>Select the Peak Encoder Speed Screen.</p> <p>Reset the peak Encoder speed.</p>
  	<p>Select the Custom Keyboard Screen.</p> <p>Select standard keyboard.</p> <p>Select custom keyboard.</p>


Button	Function
	Select the Language Screen .
	Use a static IP address.
<p>Sleep</p> 	<p>Select the Sleep button to place the Printer into Sleep Mode. This is a soft shutdown. Sleep is useful for long periods of idle time. Touch the Controller Touchscreen to restart.</p> <p>If the Spit Mode is turned on, the Printer continues to spit ink while in Sleep Mode (see “Spit Settings” on page 87), reducing the chance of some types of ink drying in the Print Nozzles.</p>
<p>User Data</p> 	If the current message contains user data, the User Data button is available to open the User Data Prompt Screen .
<p>GUI Refresh</p> 	Graphic User Interface Refresh. Used to turn GUI Refresh off on messages over 42" long. This significantly helps GUI response time.

Home Screen

The **Home Screen** contains the following:

- A preview of the current message
- The name of the current message
- Product count
- Ink status
- Printing status


If a USB Drive is plugged into the USB Port at startup, the Touchscreen will automatically display the **USB Load Screen**. To go the **Home Screen**, select **Back**.

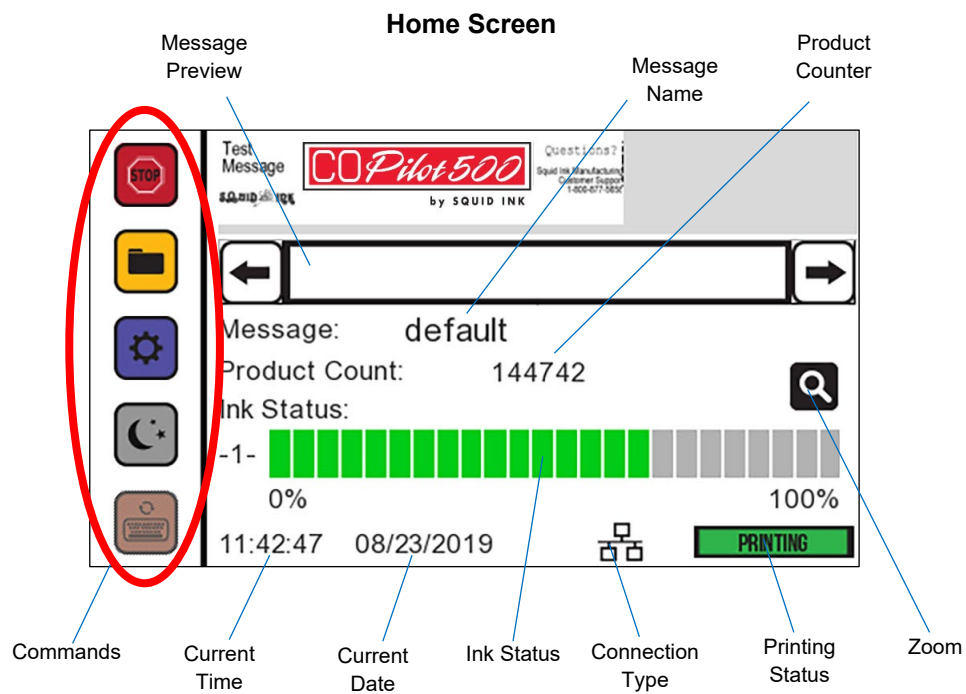

Zoom Screen




The **Zoom Screen** enables the user to view the print message at a larger size on screen. Zooming does not affect the print size of the message.

To access the **Zoom Screen** from the **Home Screen**, select the **Zoom** button  on the right side of the screen. The **1** and **2** buttons indicate the active Printhead.

Select **Full Message Width** , **75%**, and **100%** to zoom in and out of the message. The current zoom setting button is available.

Zoom Screen

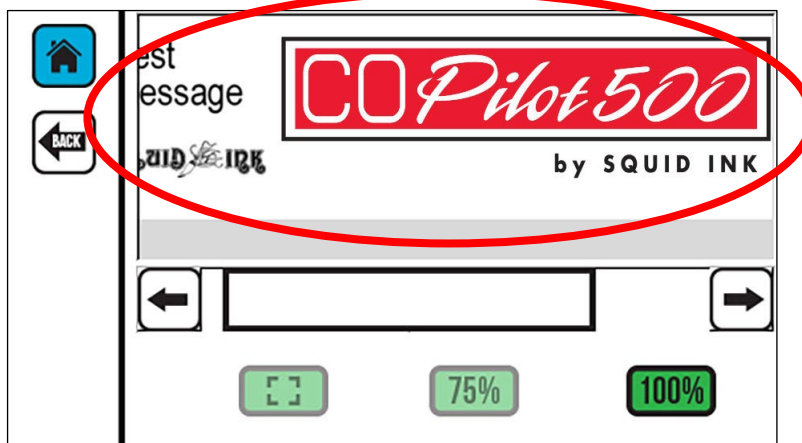


Message Screen



The **Message Screen** contains a list of available messages. Refer to the *Orion Software User Guide* for information about creating messages on a PC and downloading them to the Controller.

Use the **Up** and **Down** arrows or drag the scroll bar to view the list of available messages. To select a message for printing, choose the desired message and then select **APPLY**.

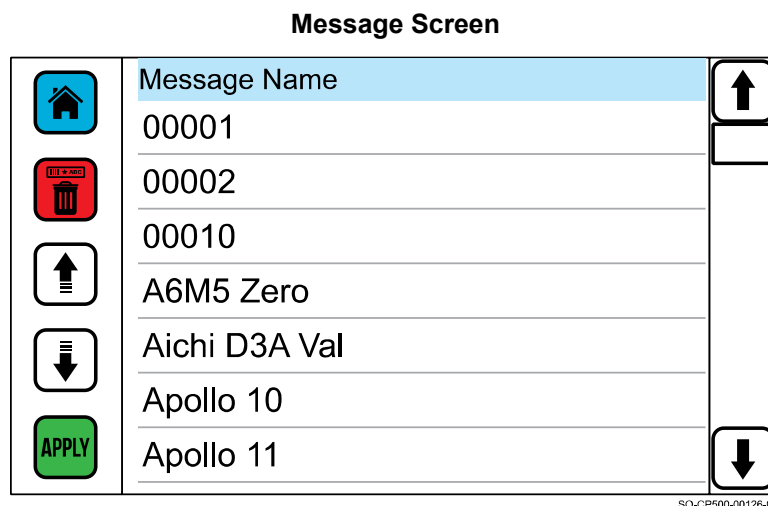

Delete



The **Delete** button removes a selected message from the Controller.




Deleting the message only deletes the message copy in the Controller. It does not delete the message from Orion.

NOTE: A message cannot be deleted if it is currently open.

Message Screen Remote Server

If the Printer is using a remote database server to load messages for printing, use the keyboard on the Touchscreen to enter a message ID. Select **APPLY** to load the message for printing. When the message is loaded, a green checkmark is briefly displayed in the lower right corner of the screen. If the connection fails, an error message is briefly displayed. The Printer returns to the **Home Screen**.

Message Screen with Remote Server

	Enter Message ID														
	Message ID														
1	2	3	4	5	6	7	8	9	0	-	=	\	'		
q	w	e	r	t	y	u	i	o	p	[]	BackSpace			
Caps	a	s	d	f	g	h	j	k	l	;	'				
Shift	z	x	c	v	b	n	m	,	.	/	Shift				
Alt											←	→			

Settings Screen





The **Settings Screen** contains two pages of Printer configuration settings. Select  to switch between **Settings Page One Screen** and **Settings Page Two Screen**.

Settings Screen – Page 1



Settings Screen – Page 2

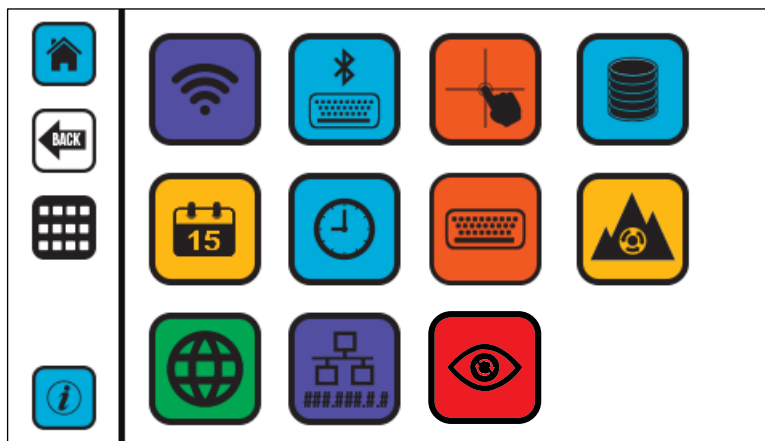

Following describes the settings accessible through the **Settings Screen**  and what their functions are.

Line Speed




The **Line Speed Screen** sets a static line speed for the Printer in feet per minute (fpm).

To set the line speed, use the **Plus (+)** or **Minus (-)** buttons to increase or decrease the line speed, or move the scroll bar in either direction. Maximum line speeds are:

Maximum Line Speed for Each CoPilot 500 Controller Model			
CP500	CP500 HiSpeed	CP500 Turbo	CP500 HiSpeed Turbo
205 fpm 62.5 m/min	300 fpm 91.4 m/min	205 fpm 62.5 m/min	300 fpm 91.4 m/min

Line Speed Screen

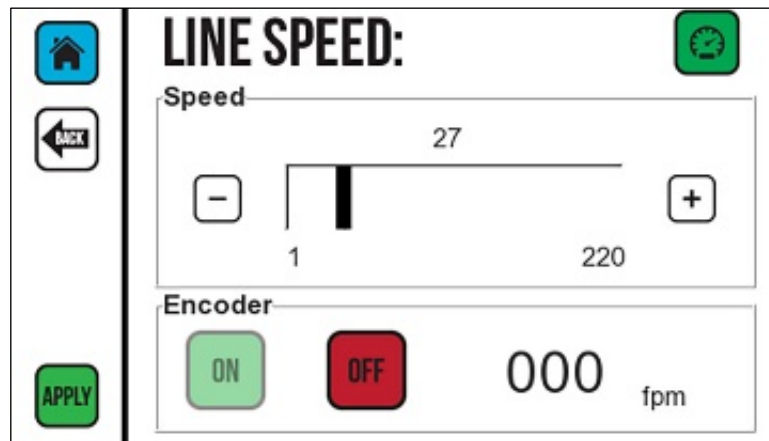


Encoder Timeout

The Encoder Timeout (upper half of screen) is the amount of time in seconds that the Printer waits for a signal after the Encoder Wheel stops spinning. This number should be set to significantly higher than the normal pauses that the Conveyor makes while operating. If the Conveyor stops for a period longer than the “Encoder Timeout” time while printing a message or between messages, the Printer stops looking for an Encoder signal, and the message must be restarted.

Use the **Plus (+)** or **Minus (-)** buttons or the slider to increase or decrease the amount of time. The default setting is 15 seconds. The maximum setting is 86400 seconds (24 hours). The amount of time is displayed in hours, minutes, and seconds.

Line Speed Using an Encoder

To use an Encoder to control line speed, select **ON**.

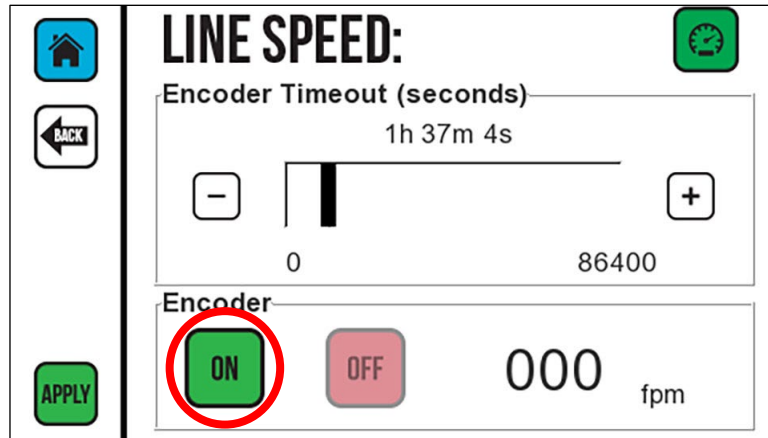

Select **APPLY** to save changes.

Select **BACK** to return to the previous screen.

Distance to Trigger




Distance to Trigger is the amount of distance between the trigger (usually a Photocell) and the Jets on a Printhead. Squid Ink recommends mounting the Photocell approximately 6" (15 cm) upstream from the Printhead, and setting the "Distance to Trigger" to that distance. Distance to Trigger can be set in inches or centimeters.


To Change the Distance to the Trigger:

1. To set the unit of measure for the distance:
 - a. Select **IN** to set the print delay in inches.
 - b. Select **CM** to set the print delay in centimeters.
2. Use the **Plus (+)** button or **Minus (-)** button or the slider for the selected Printhead to increase or decrease the distance Printhead and trigger.
3. Select **APPLY**.

Distance to Trigger Screen

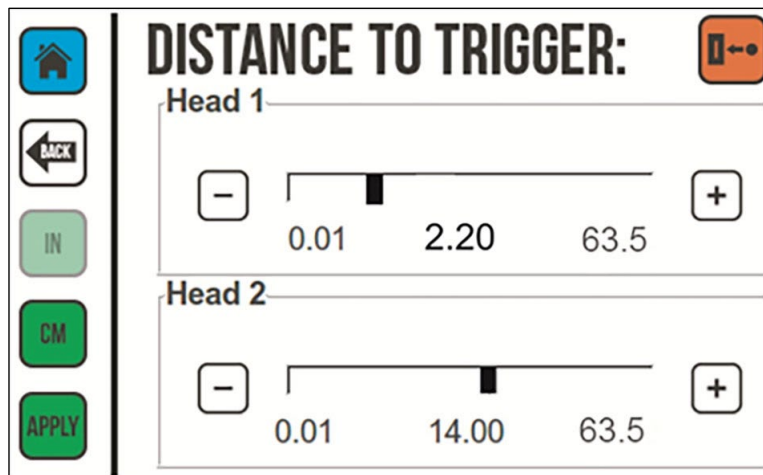

Print Direction

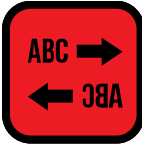


Print Direction is the direction of the Conveyor flow relative to the position of the Printer when viewed from behind the Printhead.

To Set the Print Direction for the Selected Printhead:

1. Select the button that corresponds to the direction of the Conveyor flow.
2. Select **APPLY** to set the print direction. Select **BACK** to return to the previous screen.

Print Direction

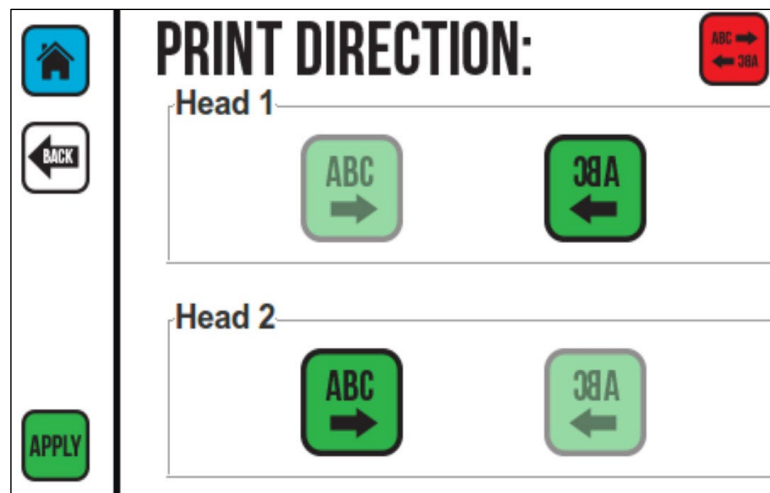


Encoder



The **Encoder Divider Screen** sets the divider value if an optional Encoder is installed. The encoder divider value sets the horizontal scale of the printed message based on the number of pulses from the Encoder during a given time period. Use the **Plus (+)** or **Minus (-)** buttons or the slider to increase or decrease the Encoder Divider value.

Encoder Screen

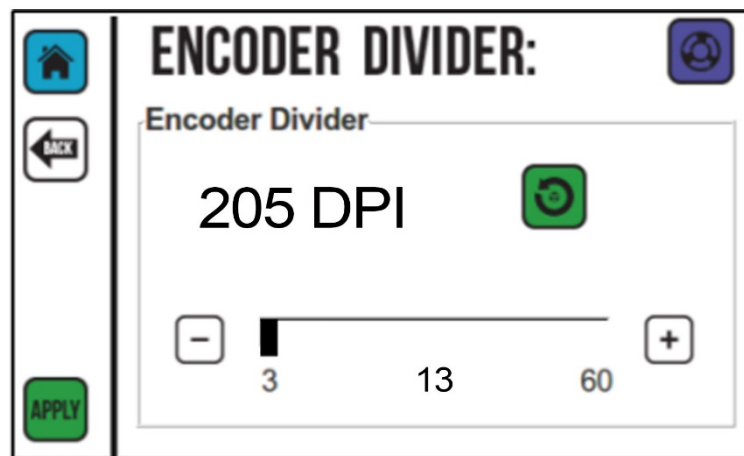

Encoder Reset

The Encoder Reset button resets the Encoder Divider to the default value of 3 (300 dpi).




Select **APPLY** to save changes to the Encoder settings. Select **BACK** to return to the previous screen.


Repeat and Squid Connect Trigger Settings




The **Repeat Trigger** is for printing a repeating message on each single product. It controls whether SquidConnect printing is active or inactive using SquidConnect Pin 6. Refer to the *SquidConnect User Guide* for more information. If the SquidConnect Dongle is not installed, this option is not available. If SquidCheck is active, this option is not available.

To use "Repeat Trigger," the message created in Orion must have "Repeat Mode" checked.

If using a Photocell or Switch Box to activate the trigger, select **Photocell** .

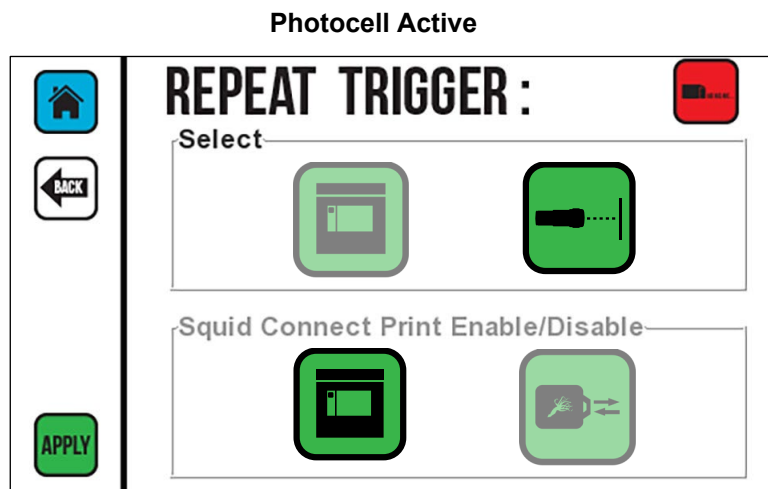


When using the GUI interface to Start and Stop Repeat printing, select **Screen** .

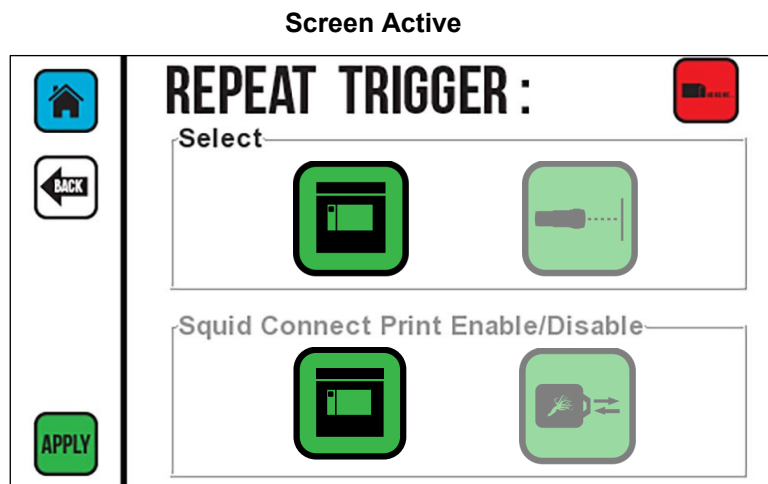


SquidConnect provides non-barcode electronic information regarding the operational status of a CoPilot printer. The outputs can be used to enable or disable the Printhead, or notify the user or PLC when the printer is ready or actively printing, when the ink supply is low or almost empty.

SquidConnect Inactive

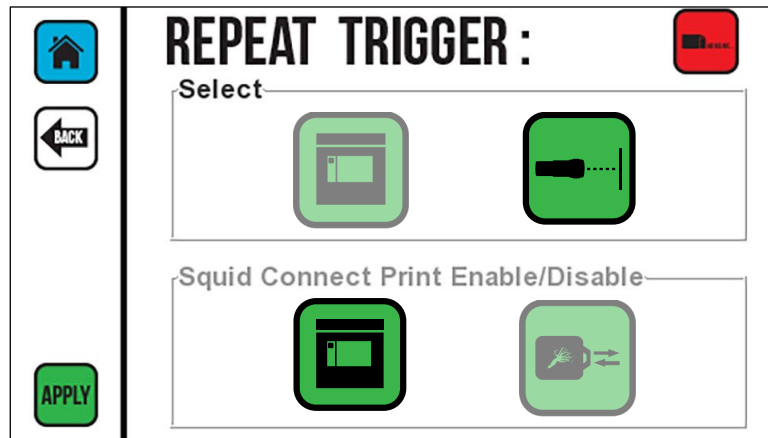

SquidConnect Dongle Active

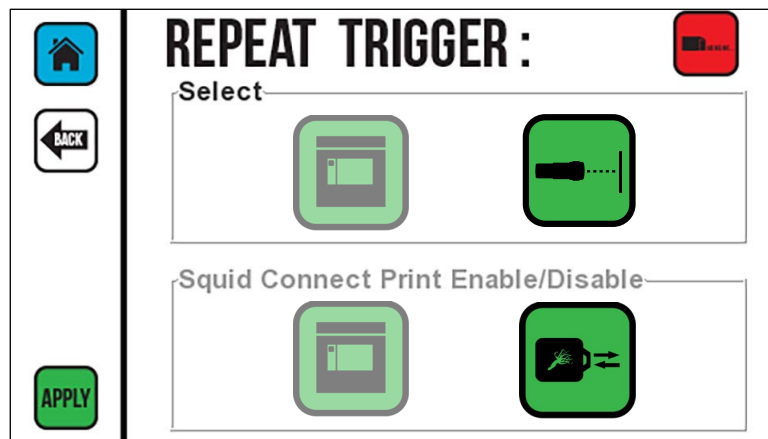


Counters



Counters can be used to track many items, such as the number of boxes or pallets printed on. Use the **Counters Screen** to set the current value of each printer counter in the current message.

Counters Screen

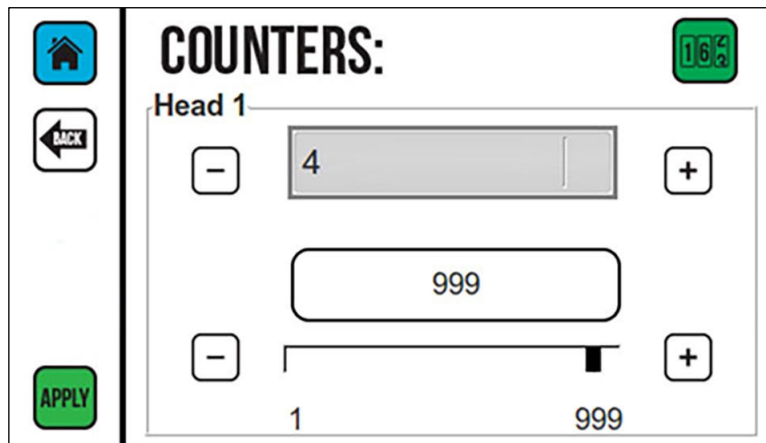

To change the counter value, use the **Plus (+)** or **Minus (-)** buttons or the slider to increase or decrease the counter.

Select to open the mini keyboards.




Select **APPLY** to set the current counter value.

Spit Settings



When Spit Mode is active, the Printhead spits a small quantity of ink at predetermined intervals. The spit function is useful when printing with fast-drying solvent-based inks because it keeps the ink from drying and clogging in the Ink Nozzles. Use the **Spit Settings Screen** to configure settings for Spit Mode. The Spit Mode is not used with oil-based inks on the CoPilot 500.

Spit Settings Screen

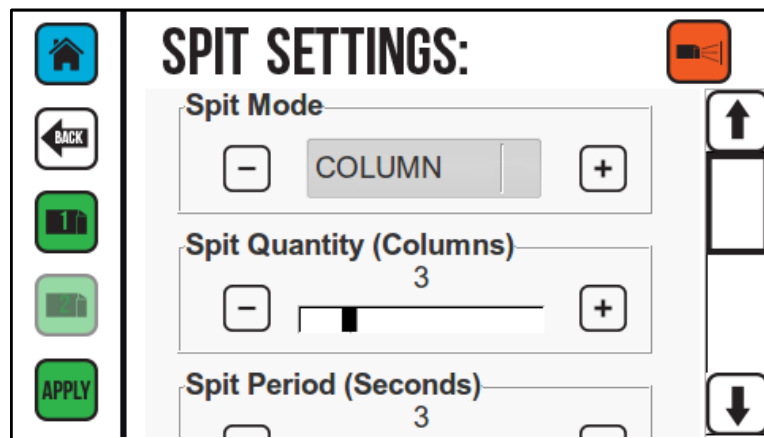

Spit Mode

There are four Spit Modes:

OFF: If selected, turns the Spit Mode off. When printing with oil-based ink, always set the Spit Mode to OFF.

COLUMN: Spits a column of ink the entire height of the Printhead at selected time periods.

GHOST ALL: Spits a small amount of ink (not enough to impact print appearance) through all the Printhead Nozzles at set time intervals, even during printing. This is useful when printing with very fast-drying inks.

GHOST: Spits a small amount of ink through the Printhead Nozzles when not printing. This is useful if a long message only uses some of the Nozzles in the Printhead.

Spit Quantity (Columns)

The quantity of the Spit Mode based on the number of columns the Printhead will spit each time.

Spit Period (Seconds)

The time between spits in seconds.


Spit Delay (Milliseconds)

The time in milliseconds between when the message stops printing and the spit begins.

Spit Timeout (Seconds)

The time in seconds that the Printer continues to spit after the last trigger. This is important if the Printer is idle for a long period such as overnight or after a long break. The Printhead will continue to spit throughout the idle period to reduce the likelihood of ink drying and clogging the system.

Spit Settings Screen

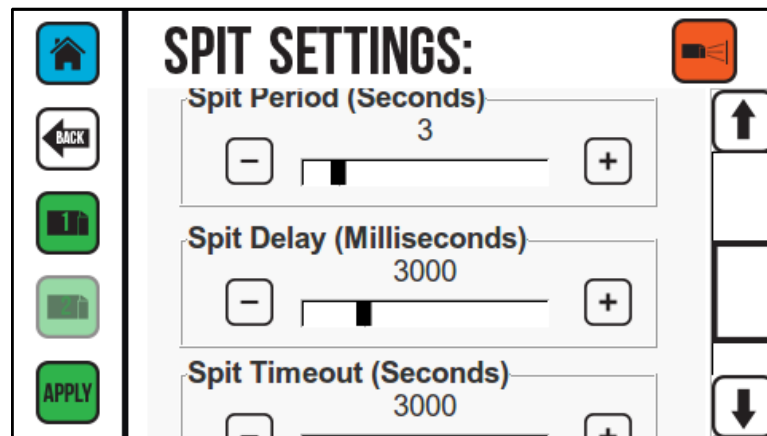

If using solvent-based inks, contact your Squid Ink distributor for guidance on the appropriate Spit Mode settings to use.

Barcode Validation




An optional SquidCheck™ Print Validation System (Part Number 2003850) can be used to validate bar codes and ensure that they are present, scannable, and accurate. For details on connecting the SquidCheck Print Validation System, please refer to the SquidCheck manual.

USB Load



This button is not available if no USB Drive is connected. The **USB Load Screen** provides functions for data management and system updates. The **USB Load Screen** opens automatically when a USB device is connected.

NOTE: The USB format must be FAT32 or NTFS.

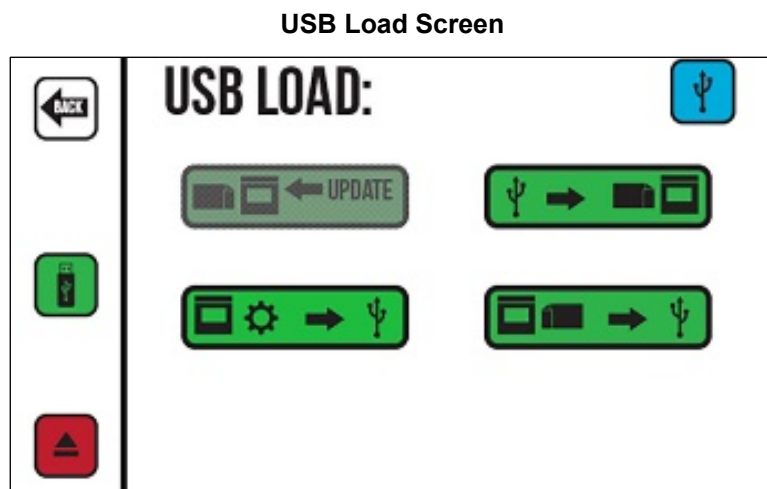

If system updates are available on an installed USB Drive, this button becomes active. Select this button to install the updates.



Copies all installed messages and fonts from the Controller to a connected USB Drive.



USB Debug Report: Copies the current message and configuration to a Zip file on a connected USB Drive to help diagnose any printer problems. If the correct flag from Orion is on the USB Drive, the button to access the **Reset Screen** also appears below the “USB Debug Report” button.



Copies messages and fonts from a connected USB Drive to the Controller. All messages and fonts in the printer specific folder, or the generic printer folder if the specific folder does not exist will be copied.




Ejects a connected USB Drive before physically disconnecting the USB Drive.



Reset



The **Reset Screen** resets the production counter to zero and/or resets the ink level to full. A supervisor might wish to reset the production counter to zero at the beginning of a new shift, for example, to track the number of products labelled each shift.

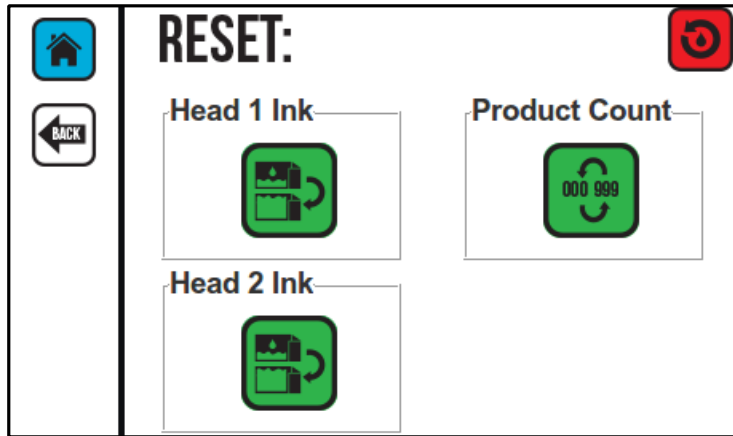Reset Screen



1. Select the **Reset Ink Printhead** button  to reset the ink supply to full.
2. On the **Reset Screen**, select Head 1 or Head 2.
3. Select the **Counter Reset** button  to reset the production counter to zero.


NOTE: The Counter Reset function only resets the onscreen production counter to zero. It does not reset any counters that might be included in the message.

Printhead Temperature




The **Printhead Temperature** button is used to display the current temperature for the Printhead in Fahrenheit or Celsius.

Printhead Temperature - Fahrenheit

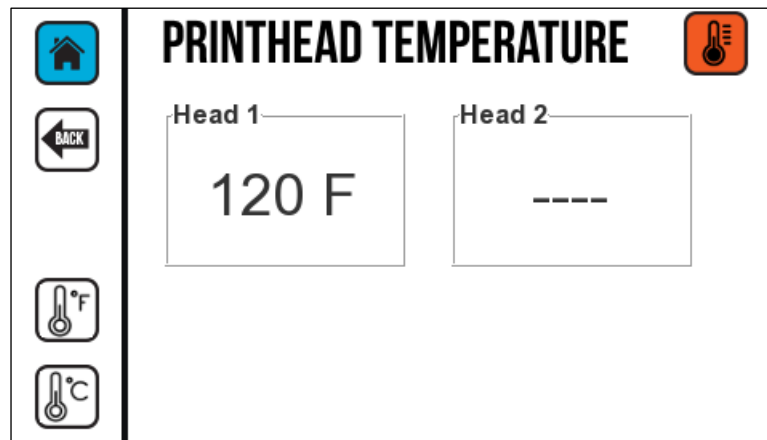

Printhead Temperature - Celsius

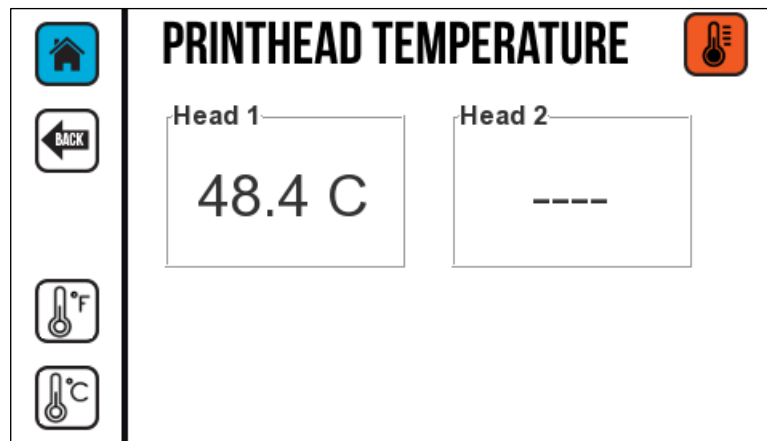

The appropriate environmental temperature range for the Printhead during operation is 34 - 104 °F (1 - 40 °C). If the Printhead temperature reading fails (likely because the Printhead is busy printing), the reading will default to 32 °F (0 °C).

Calibrating the Touchscreen



If the buttons on the Touchscreen no longer activate the corresponding functions or are unresponsive, recalibration may be necessary. Select this button to calibrate the Touchscreen.

To Recalibrate the Touchscreen:

1. On the **Settings Screen**, select the **Calibrate Screen** button.
2. In the **Calibrate Screen**, select the **Calibrate** button.
3. In the Calibrate utility, touch the center of each small box in turn as they appear.
4. After the center box has been touched, a “Calibration Completed” message is displayed. The Controller returns to the **Settings Screen**.
5. Restart the Controller for calibration results to take effect.

NOTE: If the screen is out of calibration and cannot be recalibrated using the Controller, select **Reset Calibration** on the Printer Configuration **Tools** tab in Orion. Refer to the *Orion Software User Guide* for more information.



Remote Database Server



The **Remote Database** function allows the Controller to connect to a remote database. Refer to the *Orion Software User Guide* for more information on creating database messages.

Select the **Database** button to open the **Remote Database Screen**.

Remote Database Server Screen

Remote Mode													
 		<input type="button" value="ON"/> <input type="button" value="OFF"/>											<input type="button" value="APPLY"/>
Start/Stop				Remote Server					Multicast				
1	2	3	4	5	6	7	8	9	0	-	=	\	'
q	w	e	r	t	y	u	i	o	p	[]	BackSpace	
Caps	a	s	d	f	g	h	j	k	l	;	'		
Shift	z	x	c	v	b	n	m	,	.	/		Shift	
Alt										←	→		


Start/Stop Tab

The **Start/Stop** tab contains the **Remote Mode ON** and **OFF** buttons. If Remote Mode is turned on, the **ON** button is green. If Remote Mode is turned off, the **OFF** button is red.

Select **APPLY** to save changes to the Remote Mode.

Remote Server Tab

To Locate the Database Server for Messages to Print:

1. On the **Remote Server** tab, select the **Search** button .
2. In the list of connected servers, select a server.
3. Select **APPLY**. A green checkmark is displayed briefly when the server connects.

Multicast Tab

The Multicast Address IP setting and UDP Port will match the communication settings for the DB server created using Orion. Normally, the settings will be automatically populated with the default value and should not have to be changed. If the address is changed in Orion, it will also have to be changed at the Controller. If the address is changed, notify your IT Administrator to ensure that the new values do not conflict with existing devices.

Orion Communication Settings


Set Date









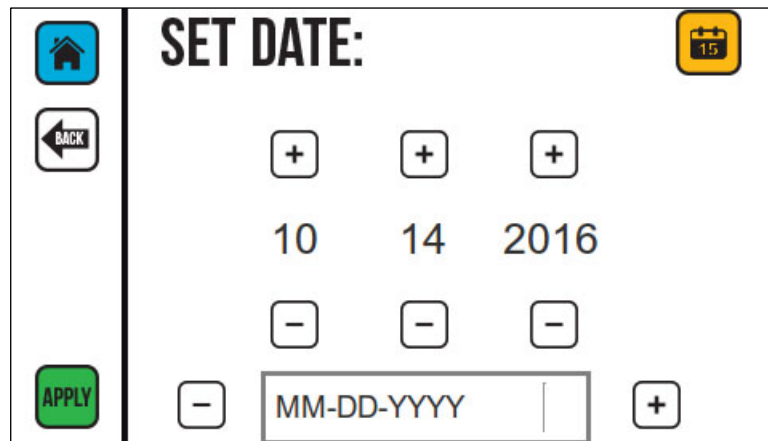





Use the **Set Date** function to set the date in the Printer. This can be the date that printing is taking place, an expiration date, or any other date desired in the message.

1. Use the **Plus (+)** or **Minus (-)** buttons to select the date format at the bottom of the screen.
2. Select the **Plus (+)** or **Minus (-)** buttons to increase or decrease the month, day, and year.
3. Select **APPLY** to set the date.

Set Date Screen



	SET DATE:	
	  	
	10 14 2016	
	  	
	 MM-DD-YYYY 	

Set Time



Use the **Set Time** function to set the current time in the Printer. This is typically set to the current time to track time of packaging.

The time is displayed in hours, minutes, and seconds. To change the time value, select the **Plus (+)** or **Minus (-)** buttons for the hours, minutes, and seconds to increase or decrease the time.

Select **APPLY** to set the current time value. Select **BACK** to return to the previous screen.

Set Time Screen

The screenshot shows a screen titled "SET TIME:" with a blue clock icon in the top right corner. On the left side, there is a vertical menu with three buttons: a home icon, a "BACK" button with a left-pointing arrow, and a green "APPLY" button. The main area of the screen displays "Current Time: 05:52:37". Below this, there are three columns of controls for hours, minutes, and seconds. Each column has a plus sign (+) button above a numerical value and a minus sign (-) button below it. The values are 05 for hours, 52 for minutes, and 34 for seconds.

Hours	Minutes	Seconds
+	+	+
05	52	34
-	-	-


Peak Encoder Speed




Select the **Peak Encoder** button to display the top line speed recorded by the Encoder in feet per minute (fpm).

Peak Encoder speed is used to determine what speed the Printer requires to be able to print accurately. This feature is used with variable-speed production lines that perform short speed bursts where the line speed function is not fast enough to display the peak speed. A horizontally stretched message may indicate that the line speed is faster than the Printer is capable of printing.

To record a lower peak speed, the “Peak Encoder Speed” must be reset. An example of a time when lowering the peak speed would be needed is if the operator wants to slow the production line speed, but inadvertently turns the speed control in the wrong direction, speeding up the production line. The operator may immediately realize their mistake and turn the speed back down, but the higher speed is still displayed until the Peak Encoder Speed is reset or the Peak Encoder Speed records a higher speed.

Select the **Reset** button  to reset the Peak Encoder Speed.


Peak Encoder Speed Screen

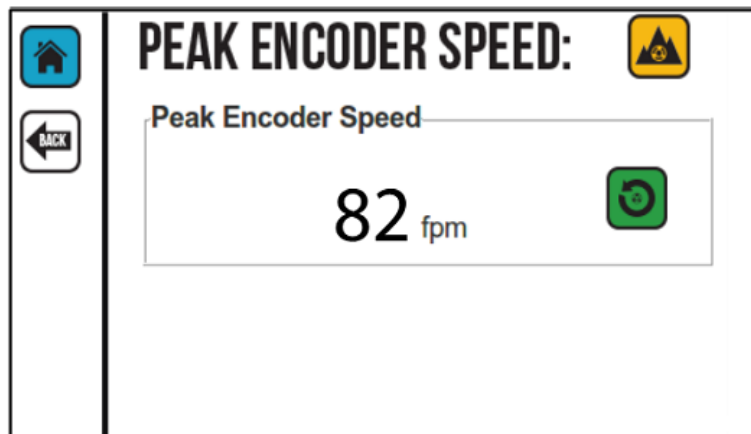

Custom Keyboard



If a custom keyboard has been created in Orion for use with User Data, the **Custom Keyboard Screen** can be used to select that keyboard.

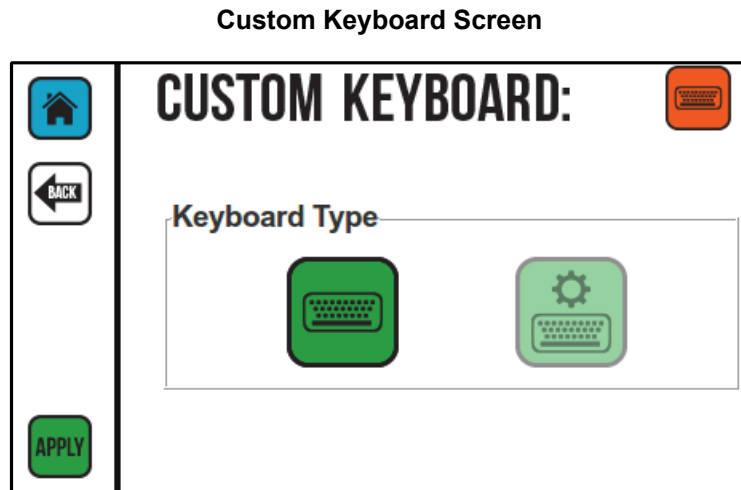

Standard Keyboard Selected



When available, the Controller uses the standard CoPilot 500 keyboard.

Custom Keyboard Unselected



When the **Standard Keyboard** button is available, the **Custom Keyboard** button is not available.

Custom Keyboard Selected



When this button is available, a custom keyboard associated with the user data for the specific message can be opened. Custom keyboards are created in Orion. Refer to the “Custom Keyboards” section in the *Orion Software User Guide* for more information.

NOTE: If the keys on a custom keyboard are all blank, the keyboard was most likely not sent to the Controller from Orion. Verify in Orion that the associated keyboard was sent to the Printer.

Custom Keyboard Example



Language



The CoPilot 500 printing systems support eight languages:



U.S English



German



Mandarin Chinese



Spanish



Korean



Japanese



Russian




Polish

To Select a Language:

1. On **Settings Screen Two**, select the Language icon.
2. In the **Language** window, select the desired language.
3. Select **APPLY**. A blue outline appears around the selected language.

Language Screen 1



4. To open **Language Screen Two**, select the **More**  button. The Controller displays the selected language.

Language Screen 2



5. Restart the Controller for the language change to take effect.

Static IP Address



A static IP address can be assigned to the Controller.

NOTE: When assigning a new IP address, work with the local IT Administrator to ensure that the new address does not conflict with existing devices.

To Provide a Static IP Address (rather than a dynamic IP address):

1. On **Settings Screen Two**, select the **IP Address** button.
2. In the **IP Address** dialog box, select the **Static IP** button.
3. Use the onscreen keyboard to enter a new IP address and subnet mask.

Static IP: 192.168.0.52

Subnet Mask: 255.255.255.0

DHCP Static IP

APPLY

1	2	3	4	5	6	7	8	9	0	-	=	\	`
q	w	e	r	t	y	u	i	o	p	[]	Backspace	
Caps	a	s	d	f	g	h	j	k	l	;	'		
Shift	z	x	c	v	b	n	m	,	.	/	Shift		
Alt											←	→	

4. Select the button to enter the Default Gateway.

Static IP: 192.168.0.52

Default Gateway:

DHCP Static IP

APPLY

1	2	3	4	5	6	7	8	9	0	-	=	\	`
q	w	e	r	t	y	u	i	o	p	[]	Backspace	
Caps	a	s	d	f	g	h	j	k	l	;	'		
Shift	z	x	c	v	b	n	m	,	.	/	Shift		
Alt											←	→	

5. Select **APPLY** to assign the new IP address.

User Data




User data is data that is provided by the user. If user data is contained in the current message, the **User Data** button is available. The **User Data** function allows messages that contain user data to be edited directly from the Touchscreen, USB Keyboard, or USB Barcode Scanner.

If the Message Contains User Data:

1. On the **Home Screen**, select the **User Data** button.
2. On the **User Data Screen**, use the onscreen keypad to enter additional data into the text or barcode string.
3. Select **APPLY** to apply the new data to the current message.

Wireless Interface

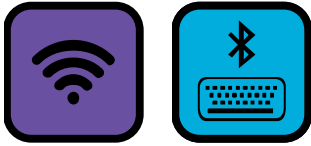

The Controller can be connected to a wireless network or Bluetooth keyboard.

A tablet or desktop computer cannot connect directly to the Controller or Printhead using a wireless network. Instead, a Wireless Router or Wireless USB Adapter compatible with the CoPilot 500 system must be used.

To establish a wireless connection, use either the of the following:


- USB Wireless Adapter (Part Number 2003947) for wireless connectivity between PC or tablet
- Wireless Router (Part Number 2003946) for wireless connectivity between PC or tablet, 300 ft. range

The software that comes with these devices does not need to be installed. These drives are already built into the CoPilot 500 printing system. Wireless Routers and Wireless USB Adapters may be purchased directly from Squid Ink.

When connecting to a wireless network, the Controller may be turned on or off.



NOTE: The Wireless Router must support Wireless Protected Access (WPA) Encryption. Older standards are not supported.

To Connect to a Wireless Network:

1. Install the Wireless USB Adapter.
2. Start the Controller.
3. On the **Settings** menu, select  to open **Settings Screen Two**.


Wireless Interface Screen








4. On **Settings Screen Two**, select the **Wireless** button .
5. On the **WIFI Screen**, select the **Scan** button . The Printer detects the available wireless networks.

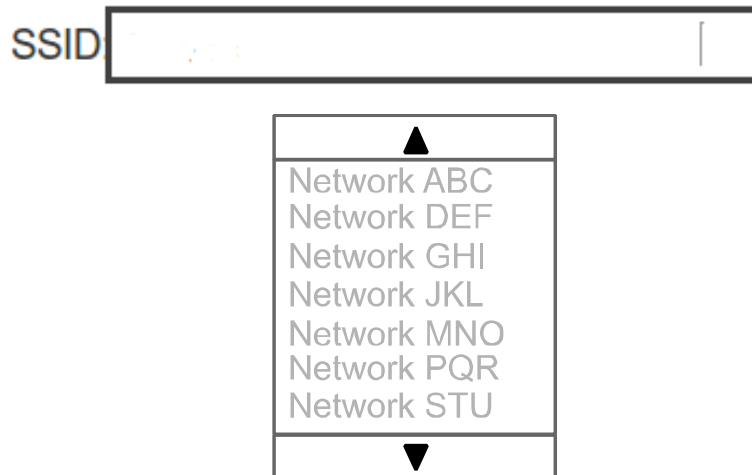



6. In the **SSID** box, select a network from the list of available wireless networks.




7. If there is a security code for the network, select   to use the onscreen keyboard to enter the password.
8. After entering the correct password select the **Onscreen Keyboard** button   to close the keyboard.
9. Select **APPLY** to connect to the network.


When successfully connected to the wireless network, the **Connected**  button is available and the IP address for the CoPilot 500 Controller is displayed. The password is not displayed after the Controller successfully connects.

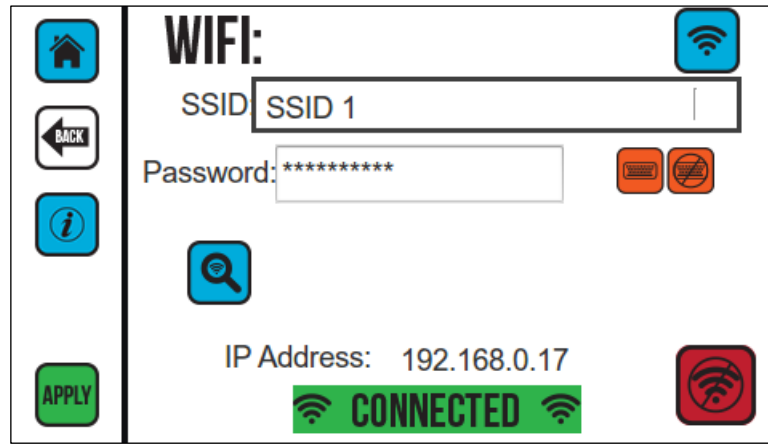


To end the wireless connection, select the **Disconnect** button  before removing the Wireless USB Adapter from the USB Port on the Controller.


To resume wireless, insert the Wireless USB Adapter, and select **APPLY**. The SSID and password from the previous session are used once a wireless connection is established.

To restore LAN operation using the Ethernet, select the **Disconnect** button , then plug in an Ethernet Cable, and then restart the Controller.

Select the **Information** button  to display information about the current Wireless Adapter.

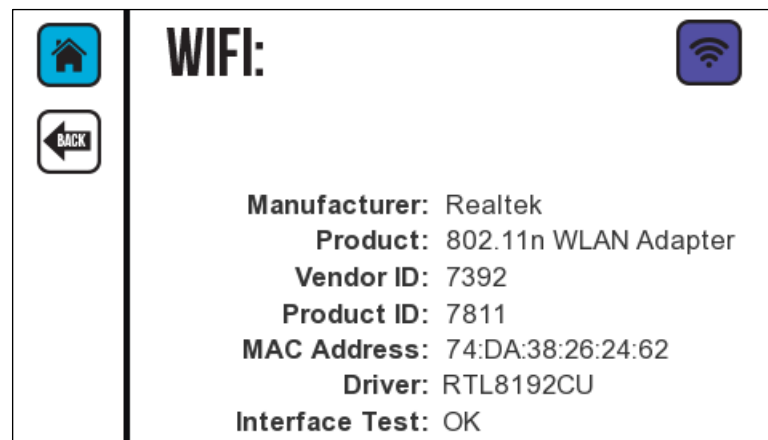

If the following screen is displayed, the Controller has determined that the Adapter is incompatible and cannot be used.

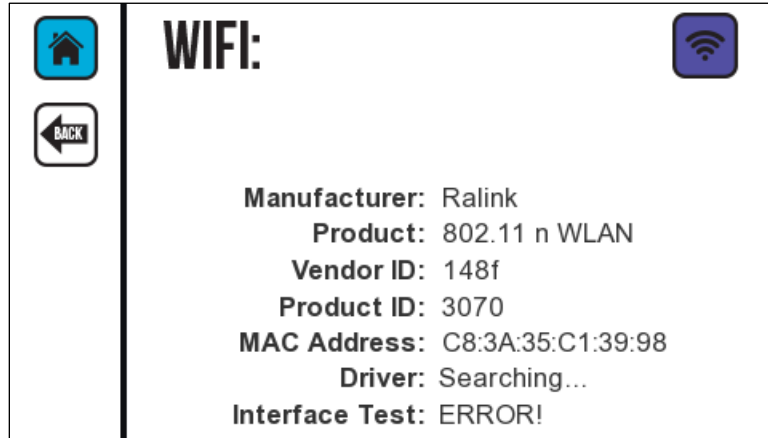

WIFI:

Manufacturer: Ralink
Product: 802.11 n WLAN
Vendor ID: 148f
Product ID: 3070
MAC Address: C8:3A:35:C1:39:98
Driver: Searching...
Interface Test: ERROR!


NOTE: Restart the Controller when changing from wireless to Ethernet or from Ethernet to wireless.

Temperature Warning Screens


The system checks the Printhead temperature every few minutes to detect if it is overheating. For CoPilot 500 Oil systems, if a temperature over 130 °F (54.4 °C) is detected for the interface, a full-screen warning is displayed. For CoPilot 500 Solvent systems, if a temperature over 115 °F (46.1 °C) is detected for the interface, a full-screen warning is displayed. Tap the Touchscreen to dismiss the full-screen warning.



The original screen is displayed.

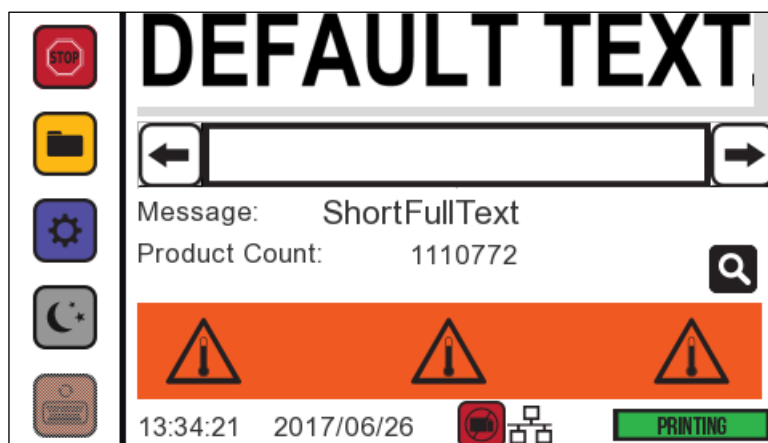


If this happens, the Printhead can still print, but it is possible that a critical warning will follow unless time is taken to cool down the Printhead. If a temperature over 140 °F (60 °C) is detected, a critical warning screen is displayed, and printing is disabled. Tap the Touchscreen to dismiss the full-screen warning.

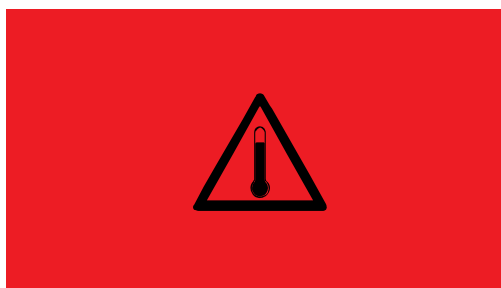

Following a critical temperature warning, allow the Printheads to cool.

When the temperature drops below 130 °F (54.4 °C) on a CoPilot 500 Oil system or below 115 °F (46.1 °C) on a CoPilot 500 Solvent system, the original screen is displayed. Printing can resume.

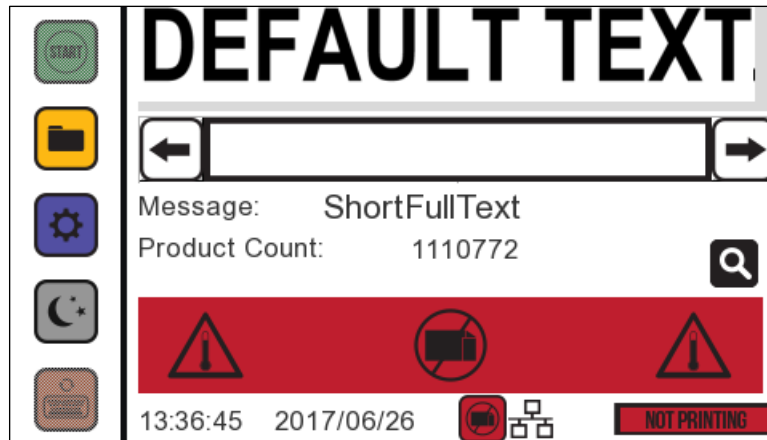


GUI Refresh




GUI Refresh provides updates to the messages, such as counter, shift, time, or date, as they occur over time. Press the **GUI Refresh** button to turn off/on “GUI Refresh”

GUI Refresh is on

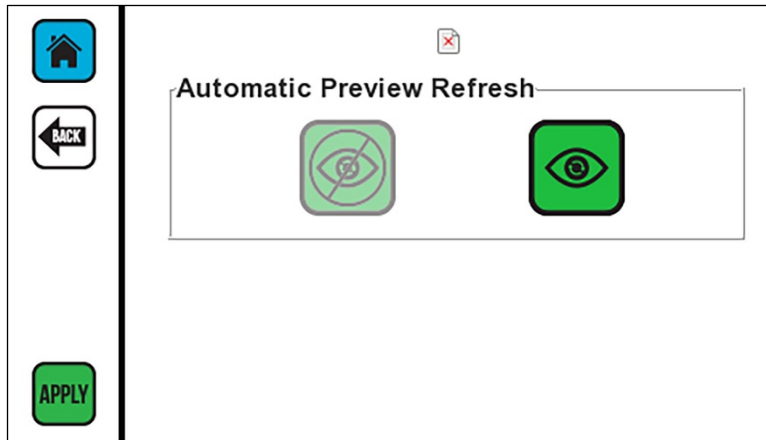

GUI Refresh is off

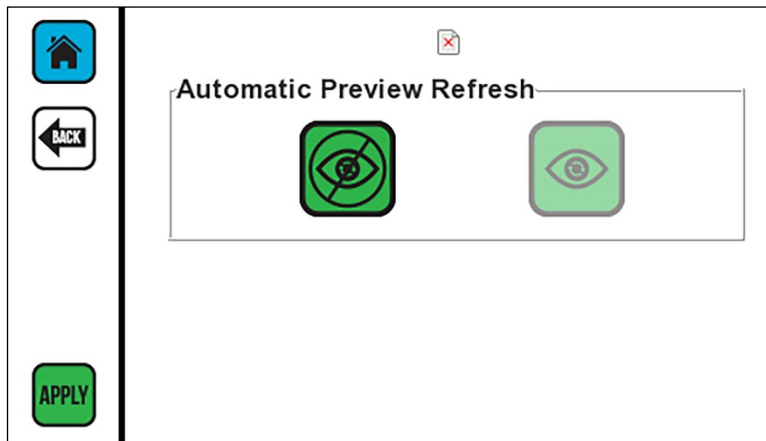

Software Setup

Before printing a message, the proper settings for the physical conditions need to be entered into Orion. This is typically done during installation by a qualified Squid Ink distributor.


VIDEO: Software Setup

To see a video of this procedure, click this link:

<https://youtu.be/zSjTfhCmU8M?t=1113>

Or scan the QR code at right using the camera app on your mobile device.

View Time: 18:33 – 21:33

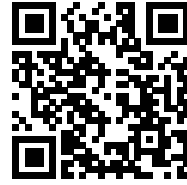

NOTE: This video shows an example of how to perform software setup for a specific scenario. The desired parameters will vary based on needs, connected equipment, inks used, Conveyor direction, and other factors.

Entering the Proper Settings

To Enter the Proper Settings:

1. From the **Home Screen**, select the **Settings Screen**.
2. Go through each of the options on both **Settings** pages (see “Settings Screen” on page 78) and input the choices that apply to the Conveyor and other equipment being used.
3. If using user data, follow the directions under “User Data” on page 105.
4. If using a wireless interface, follow the directions under “Wireless Interface” on page 106.

Operation

Powering On



When all the components have been properly mounted and connected, the system is ready to be powered up to begin printing.

Checklist Before Powering On:

- Ensure that the Nozzle Face is positioned to be 0.125" (3.2 mm) from the items to be printed as they pass by on the Conveyor.
- Verify that nothing is covering the Nozzle Face before priming or printing.
- Ensure that all components have been securely mounted.
- Ensure that all Data and Power Cables are properly seated and connected.
- Ensure that Ink Lines are correctly and securely connected, and that the Printhead is receiving ink.

To Power On:

1. Turn the Power Switch located on the back of the Controller to the ON position.
2. After the power is turned on, the system goes through a brief startup sequence lasting approximately one minute.
3. When startup is complete, the **Home Screen** is displayed on the Touchscreen.

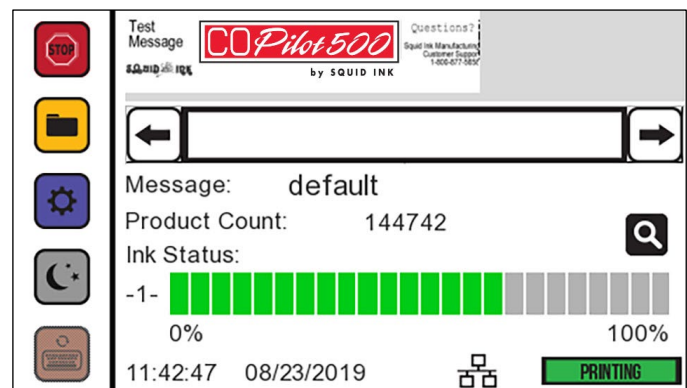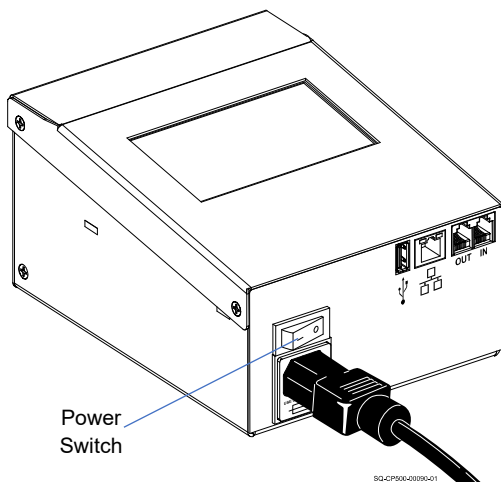

Creating a Print Message

To Create a Print Message:

1. Print messages are created on a PC using Orion software. For more information on creating a print message in Orion, see the *Orion User Guide*.

Transferring a Print Message

Once a print message has been created in Orion, it can be transferred to the Controller by USB or Ethernet.

To Transfer a Print Message by USB:

1. Insert a USB Drive into the USB Port of the PC.

NOTE: The USB format must be FAT32 or NTFS.

2. Transfer the file for the print message onto the USB Drive.
3. Remove the USB drive from the PC and insert the USB Drive into the USB Port of the Controller.
4. On the Touchscreen, copy the message file from the USB Drive to the Controller by selecting the button below.



To Transfer a Print Message by Ethernet:

1. Send the message to the Printer using Orion.

Loading a Print Message

A print message can be loaded directly from the Controller or, if connected to a network, from a remote PC or network.

To Load a Print Message:

1. From the **Home Screen**, go to the **Message Screen** by selecting the **Message** button.




2. Use the **Up** and **Down** arrows or drag the scroll bar to view the list of available messages.
3. Select the desired message and then select **APPLY**. The message loads into the "Message Preview" area of the **Home Screen**.

Printing a Message

To Print a Message:

1. From the Controller, load the desired message. The message name should be visible to the right of “Message” on the **Home Screen**.

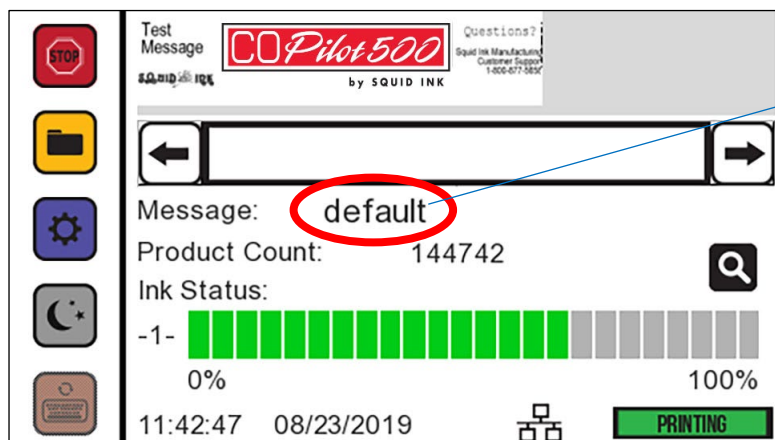

Message Name

2. To start printing, select the **Start** button in the upper left.





3. To stop printing, select the **Stop** button in the upper left..



Powering Off

To power off, turn the Power Switch on the Controller to the OFF position.

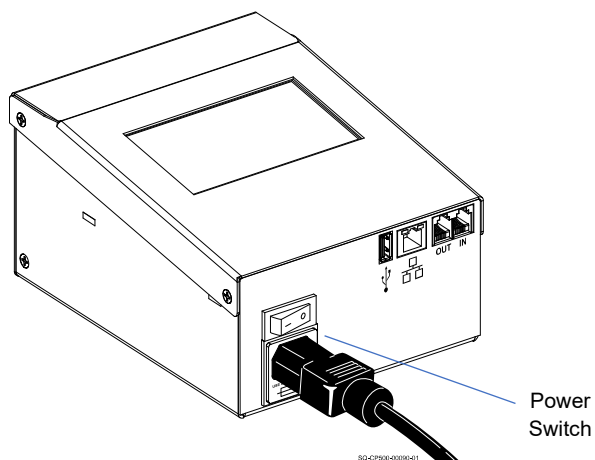

For a soft shutdown, which reduces time needed to boot up, select the **Sleep** mode  on the Touchscreen.

Maintenance

The CoPilot 500 printing system requires very little maintenance during normal operation.



ATTENTION: There are no field-replaceable parts in the Printhead or Controller. Do not attempt to open the Printhead the Controller. Doing so can damage the equipment and will void the warranty. Contact Squid Ink or an authorized Squid Ink distributor for assistance.

Checking Mounting Hardware and Connections

Occasionally check the mounting hardware and retighten any Mounting Brackets or Screws that may have vibrated loose during operation.

Occasionally check the Data Cable connections between components to ensure that they are secure and properly seated.

Cleaning the Nozzle Faceplate

If the Nozzle Faceplate becomes contaminated or clogged, gently wipe the front of the Printhead with a non-abrasive lint-free wipe (Part Number 2005470) and gently spray using a spray bottle of internal flush fluid compatible with the ink type being used (see “Inks and Fluids” on page 133). For oil-based Printheads, never use external cleaning fluid on the Nozzle Faceplate. Instead, if needed, soak the lint-free wipe in internal flush fluid and very gently blot off any other debris, applying very little pressure.



ATTENTION: Use only Squid Ink approved fluids for cleaning or flushing the Nozzle Face. Use only the appropriate cleaning or flushing fluid for the specific ink being used (see “Inks and Fluids” on page 133).



ATTENTION: Use only non-abrasive, lint-free wipes (Part Number 2007021). Always wipe in one direction without applying any finger pressure.



ATTENTION: The Orifice Strip is very fragile. Avoid direct contact with it if at all possible.

Flushing the Printhead

If cleaning the Nozzle Face does not improve print quality, flush the Printhead with the appropriate internal cleaning fluid. The procedure is different depending on whether a Cartridge Ink System or Bag Ink System is being used. Flushing takes approximately five minutes for each Printhead. The tools required are included in the CoPilot 500 Startup Kit.



ATTENTION: Use only Squid Ink approved fluids for cleaning or flushing the Nozzle Face. Use only the appropriate cleaning or flushing fluid for the specific ink being used (see “Inks and Fluids” on page [133](#)).



ATTENTION: Use only non-abrasive lint-free wipes (Part Number 2007021).


Items Needed to Flush the Printhead (Cartridge Ink System):

- Non-Abrasive, Lint-Free Wipes
- Syringe and Tube from Flush Kit (P/N 2001022 for oil-based, P/N 2001083 for solvent-based)
- Quart Container of Internal Flush Fluid Appropriate for the Ink Used (see “Inks and Fluids” on page [133](#))
- Waste Ink Receptacle

To Flush the Printhead (Cartridge Ink System):


1. Power down the system (see “Powering Off” on page [118](#)).
2. Disconnect the Ink Line from the Ink Line IN on the back of the Printhead.
3. Place a container suitable for capturing ink under the Printhead Purge Tube.
4. Remove the Cap from the Printhead Purge Tube.
5. Fold one or more non-abrasive, lint-free wipes and hold them gently against the front of the Nozzle Face.
6. Fill the syringe from the Flush Kit with the appropriate internal flush fluid for the type of ink being used (see “Inks and Fluids” on page [133](#)).
7. Attach one end of the tube from the Flush Kit to the syringe.
8. Connect the other end of the tube to the Ink Line IN, and gently push the internal flush fluid through the Ink Line IN. Ink will exit the Purge Tube.

Pushing Ink Out the Purge Tube

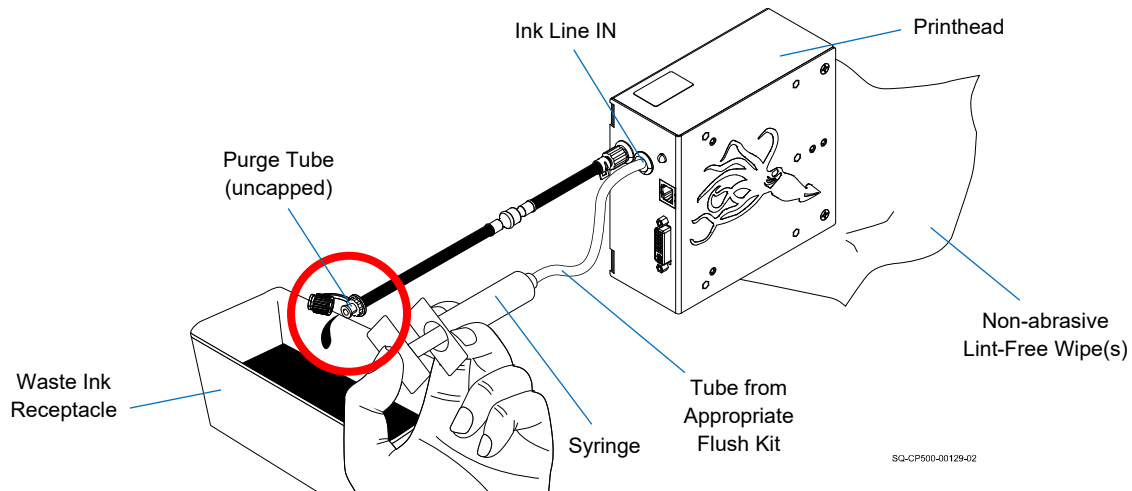

9. Refill the syringe and repeat until the fluid coming out of the Purge Tube is clear and free of ink.
10. Replace the Cap on the Printhead Purge Tube.
11. Move the waste ink receptacle underneath the Nozzle Face.
12. Refill the syringe with internal flush fluid.
13. Connect the other end of the tube to the Ink Line IN, and gently push the flush fluid through the Ink Line IN. Ink and flush fluid will come out the Nozzle Face.

Pushing Fluid Out the Nozzle Face

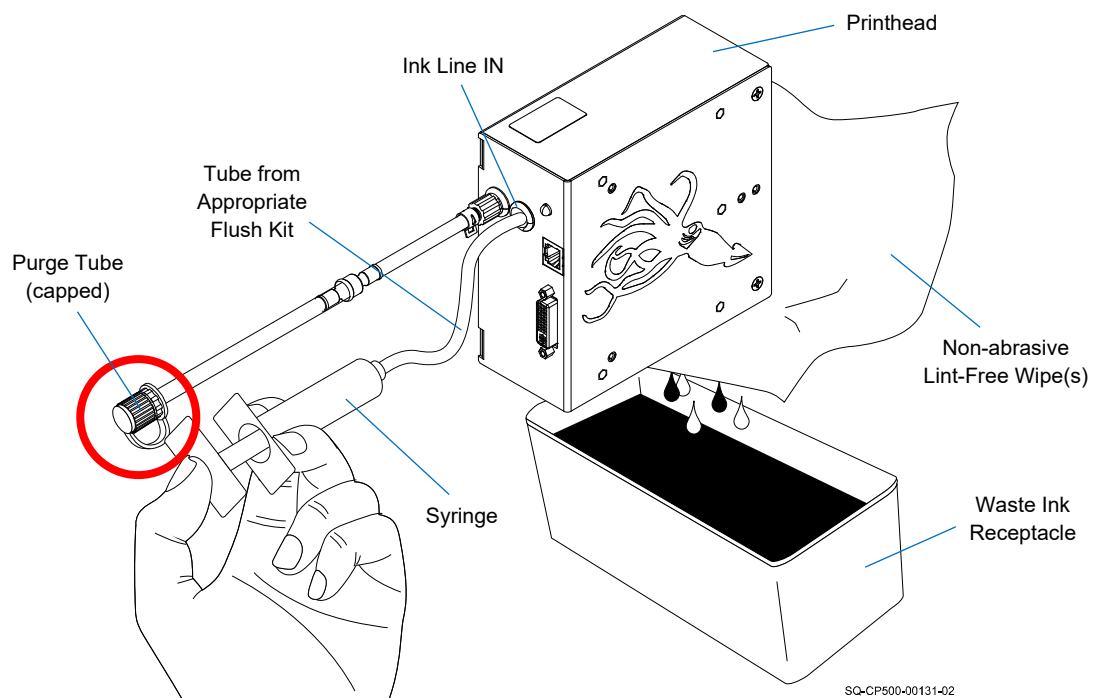

14. Refill the syringe and repeat until the fluid coming out of the Nozzle Face is clear and free of ink.

Items Needed to Flush the Printhead (Bag Ink System):


- Non-Abrasive, Lint-Free Wipes
- Bag of Internal Flush Fluid Appropriate for the Ink Used (see “Inks and Fluids” on page 133)
- Waste Ink Receptacle

To Flush the Printhead (Bag Ink System):

1. Power down the system (see “Powering Off” on page 118).
2. Remove the Ink bag from the Ink Tray, and insert a bag of appropriate internal flush fluid instead.
3. Place a container suitable for capturing ink under the Printhead Purge Tube.
4. Remove the Cap from the Printhead Purge Tube.
5. Fold one or more non-abrasive, lint-free wipes and hold them gently against the front of the Nozzle Face.
6. Gently but firmly press down on the Flush Bag until the fluid coming out of the Purge Tube is clear and free of ink.

IMPORTANT: Be sure to have the wipe in place before applying pressure to the Flush Bag, and be sure to release the pressure before removing the wipe.

Pressing the Flush Bag

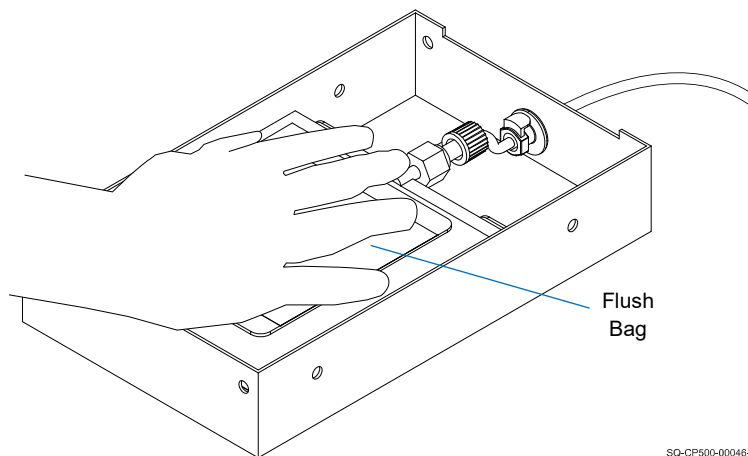

5Q-CP500-00046-02

7. While continuing to press gently but firmly on the Ink Bag, replace the Cap on the Purge Tube. This seal must be tight.
8. Continue to press the Ink Bag until the fluid coming out of the Nozzle Face is clear and free of ink.

Purging the Printhead of Air Bubbles

If print quality is inconsistent, the Ink Lines or Printhead may have air bubbles that need to be purged. To remove bubbles from the ink Lines and Printhead, follow the steps for commissioning the Printhead (see “Commissioning the Printhead” on page 63).

External Cleaning

With the exception of the Nozzle Face, the outside surfaces of the Printhead and Controller can be sprayed with compatible external cleaning fluid and gently wiped clean with a clean cloth. Never immerse the components in water or cleaning fluids.



ATTENTION: Use only Squid Ink approved fluids for cleaning or flushing the Nozzle Face. Use only the appropriate cleaning or flushing fluid for the specific ink being used (see “Inks and Fluids” on page 133).

Preparing a CoPilot 500 for Shipping or Storage


Items Needed to Prepare a CoPilot 500 Printhead for Shipping or Storage:

- Non-Abrasive, Lint-Free Wipes
- Syringe and Tube from Flush Kit (P/N 2001022 for oil-based, P/N 2001083 for solvent-based)
- Internal Flush Fluid (see “Inks and Fluids” on page 133).
- Waste Ink Receptacle
- Resealable Plastic Bag
- Two rubber bands
- 2 Caps (P/N 2006023)

To Prepare a CoPilot 500 Printhead for Shipping or Storage:

1. Thoroughly flush the Printhead (see “Flushing the Printhead” on page 120) using the correct internal flush for the type of ink used (see “Inks and Fluids” on page 133).
2. Use air in the syringe to push remaining fluid out of the Printhead.
3. Refill the syringe with air and repeat until the Printhead no longer contains fluid.
4. Gently spray the Orifice Strip with internal flush fluid.
5. Very gently dab the Orifice Strip with a non-abrasive, lint-free wipe, and use the wipe to gently remove any fluids from the exterior of the Printhead.

6. Disconnect the Purge Tube from the Printhead.
7. Use the appropriate Caps from the Cap Kit to seal the Purge Tube Nozzle and Ink Line IN Nozzle.
8. Fold two non-abrasive, lint-free wipes, hold them so that they cover the entire Nozzle Face, and secure them in place with two rubber bands.
9. Place the Printhead in a resealable plastic bag.
10. Remove as much air as possible from the bag and seal it.

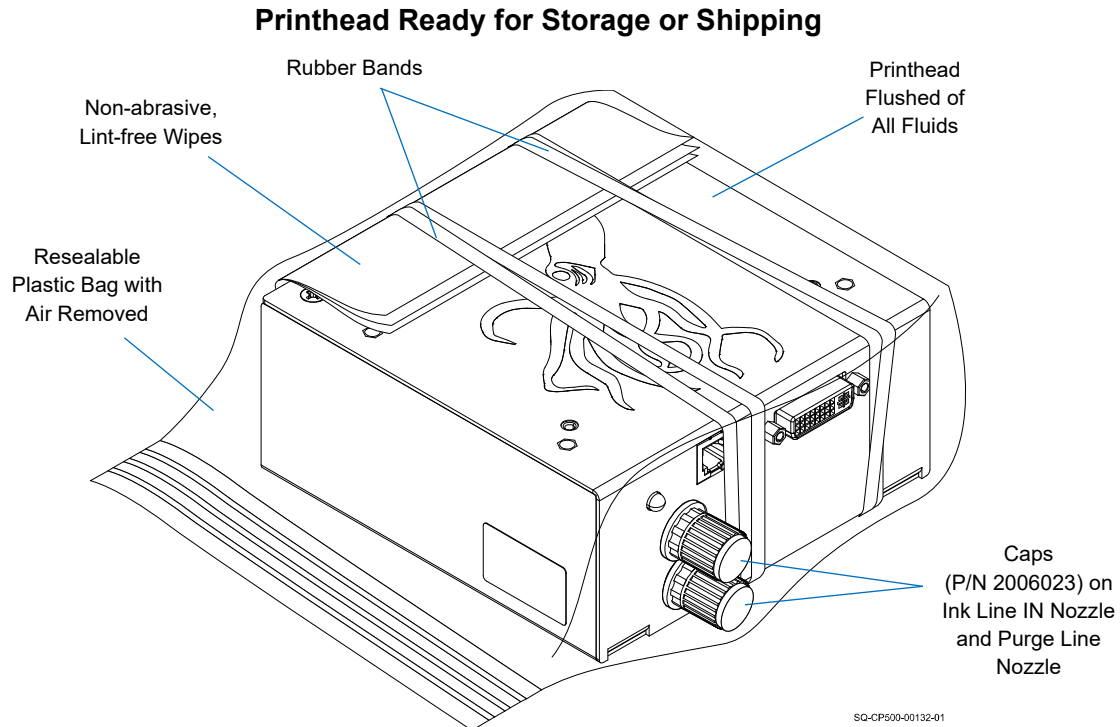


Items Needed to Prepare a CoPilot 500 Ink Reservoir for Shipping or Storage:

- Non-Abrasive, Lint-Free Wipes
- 2 Quarts of Internal Flush Fluid (see “Inks and Fluids” on page [133](#)).
- Large Waste Ink Receptacle

To Prepare a CoPilot 500 Ink Reservoir for Shipping or Storage:


1. Remove the Ink Cartridge from the top of the Ink Reservoir.
2. Disconnect the Ink Line from the Ink Reservoir.
3. Cap the Reservoir Vent Tube.
4. Cap the Ink Line.

Capping Off the Ink Line and Pouring Flush into the Ink Reservoir

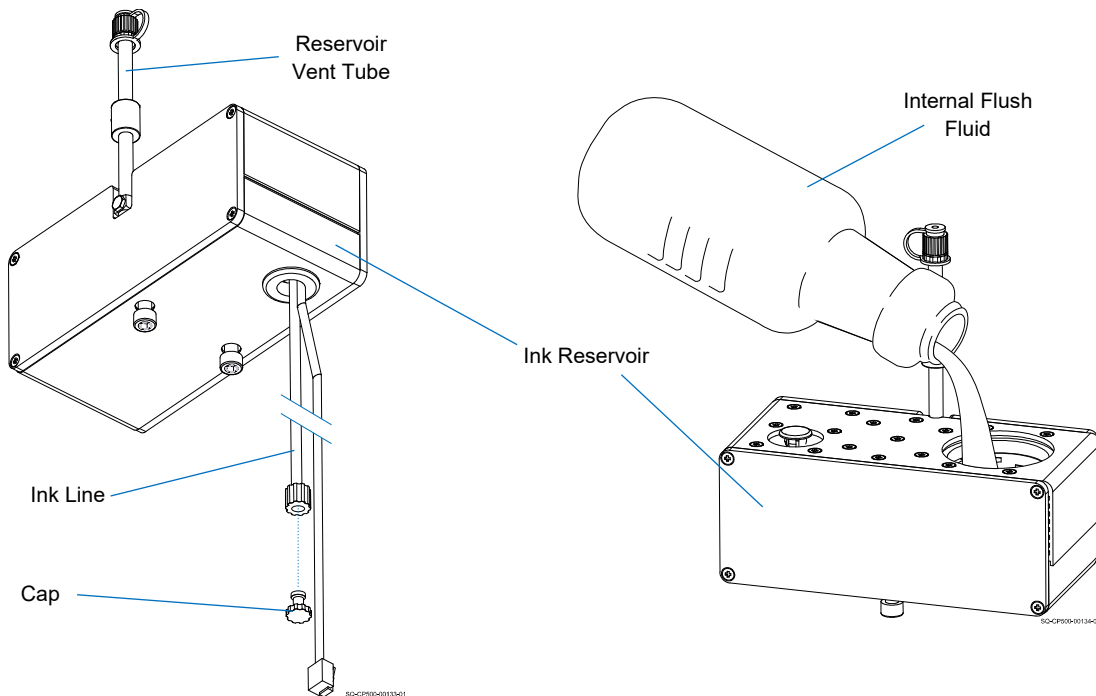

5. Pour half a quart of internal flush fluid into the Ink Reservoir, slosh it around in the Ink Reservoir, and pour it out into the waste ink receptacle.
6. Repeat two more times.
7. Screw the Shipping Cap onto the Ink Reservoir.

Capping the Ink Reservoir

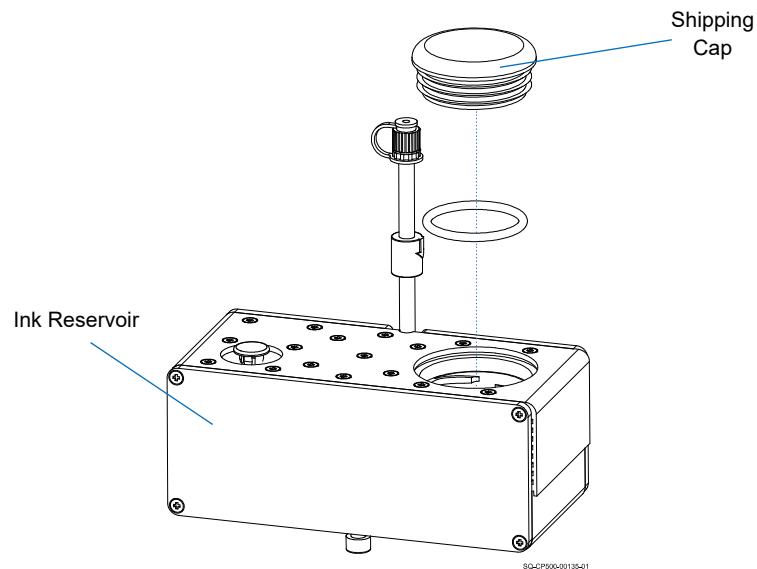

ATTENTION: To avoid damage that can affect functionality, Ink Reservoirs should spend a minimum amount of time in storage or shipping.


Items Needed to Prepare a CoPilot 500 Ink Tray for Shipping or Storage:

- Non-Abrasive, Lint-Free Wipes
- Bag of Internal Flush Fluid Appropriate for the Ink Used (see “Inks and Fluids” on page 133).
- Waste Ink Receptacle
- Nozzle Cap (P/N 2006023)

To Prepare a CoPilot 500 Ink Tray for Shipping or Storage:

1. Remove the Ink bag from the Ink Tray, and insert a bag of appropriate internal flush fluid instead.
2. Place a container suitable for capturing ink beneath the Nozzle side of the Ink Tray.
3. Disconnect the Ink Line from the Ink Tray Nozzle.
4. Gently but firmly press down on the Flush Bag until the fluid coming out of the Nozzle is clear and free of ink. This should happen fairly soon, if not immediately.

Pressing the Flush Bag

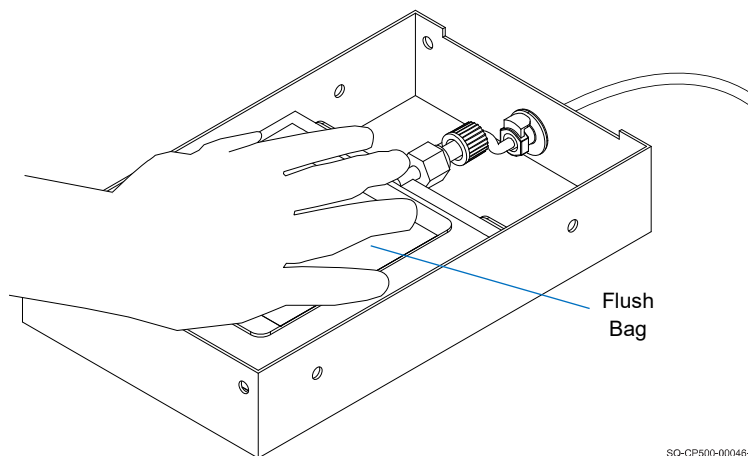

SQ-CP500-00046-02


5. Remove the Flush Bag from the Ink Tray.
6. Dampen a non-abrasive, lint-free wipe with internal flush fluid and gently wipe any ink residue off the inside and outside Nozzles.
7. Cap the outside Nozzle.

Troubleshooting

Problem	Possible Cause	Solution
Print quality distorts occasionally or system locks up.	Line noise, brownouts, or blackouts may be affecting the quality of the AC power supply to the system.	Install a good-quality AC power Line Conditioner or Uninterruptible Power Supply (Part Number 2004199) to ensure clean electrical supply.
Touchscreen buttons no longer activate the corresponding functions or are unresponsive.	Touchscreen needs to be recalibrated.	Recalibrate the Touchscreen (see “Calibrating the Touchscreen” on page 94).
Controller display goes black with one sentence of text.	System power corruption.	Install a Line Conditioner (Part Number 2004199) to ensure clean electrical supply.
	High static discharge.	Add a 0.25" (or wider) Ground Braid (Part Number 2005024) between the Controller and earth ground. Note: A substitute Carbon Fiber Brush (Part Number 2006400) is also available to reduce substrate static electricity build-up.
Print quality is poor.	Clogged Ink Nozzles on the Printhead.	Clean the Nozzle Face (see “Cleaning the Nozzle Faceplate” on page 119).
	Dried ink or impurities in the Printhead or Ink Line.	Flush the Printhead (see “Flushing the Printhead” on page 120).
	Air bubbles in the Printhead or Ink Line.	Purge the Printhead of air bubbles (see “Purging the Printhead of Air Bubbles” on page 123).

Parts List

Replaceable Parts

	ATTENTION: There are no field-replaceable parts in the Printhead or Controller. Do not open the Printhead or Controller on site.
---	---

Complete Systems

System Part Number	Controller	Ink Base	Printhead Type	Number of Printheads	Ink System Type	Number of Ink Systems	
2005930	CoPilot 500 Turbo* 2005095	Oil	CoPilot 500 Oil	1	Cartridge	1	
2005931			2005900	2		2	
2005932		Solvent	CoPilot 500 Solvent	1		1	
2005933			2005901	2		2	
2005934		CoPilot 500 HiSpeed Turbo* 2005095-HS	Oil	CoPilot 500 Oil	1	Bag	1
2005935				2005900	2		2
2005936			Solvent	CoPilot 500 Solvent	1		1
2005937				2005901	2		2
2005960	CoPilot 500 HiSpeed Turbo* 2005095-HS	Oil	CoPilot 500 HiSpeed 2005900-HS	1	Cartridge	1	
2005961				2		2	
2005964				1	Bag	1	
2005965				2		2	

* The CoPilot 500 Controller has been replaced by the CoPilot 500 Turbo Controller.

** The CoPilot 500 HiSpeed Controller has been replaced by the CoPilot 500 HiSpeed Turbo Controller.

Other Replaceable Parts

Part Number	Description	Ink Base
2005900	CoPilot 500 Printhead - Oil-Based:	Oil
2005901	CoPilot 500 Printhead - Solvent-Based	Solvent
2005900-HS	CoPilot 500 HiSpeed Printhead	Oil
1602018	Photocell Assembly	
1604177	Encoder Assembly Kit	
2001065	Cartridge Ink System Porous	Oil
2001066	Cartridge Ink System Non-Porous	Solvent
2001079	CoPilot 500 Starter Kit, Oil Based, Cartridge	Oil
2001080	CoPilot 500 Starter Kit, Solvent-Based, Cartridge	Solvent
2001159	Bag Ink System Porous	Oil
2001160	Bag Ink System Non-Porous	Solvent
2002023	CoPilot 500 Starter Kit, Oil Based, Bag	Oil
2002024	CoPilot 500 Starter Kit, Solvent-Based, Bag	Solvent
2003585	Low Ink Alarm Beacon Assembly Kit	Oil
2003588	Controller to Controller Data Cable 10ft.	
2003864	RJ12 "Y" Splitter Cable	
2003921	Printhead Data Cable 3ft.	
2003927	Low Ink Alarm Beacon Assembly Kit	Solvent
2004187	Power Supply Cord for Controller	
2004918	Printhead Rotation/Tilt Mounting Kit	
2004920	Mounting Bracket Assembly	Oil
2005990	CoPilot 500 Controller (works with CoPilot 500 Oil or Solvent Printhead)	
2005095	CoPilot 500 Turbo Controller (works with CoPilot 500 Oil or Solvent Printhead)	
2005095-HS	CoPilot 500 Turbo Controller (works with CoPilot 500 HiSpeed Printhead only)	Oil

Floor Stand Assemblies

Part Number	Description
2004940	1 short Arm (14"), Brackets for downshoot, Ink Reservoir and Controller * Must order 2004918 to accommodate twist applications
2004941	2 short Arms (14") Brackets for downshoot, Ink Reservoirs and Controller * Must order 2004918 to accommodate twist applications
2004942	1 short Arm (14"), 1 Stitch Plate Bracket set, Brackets for two Ink Reservoirs and one Controller (for one CoPilot 500 with 2 Printheads total)
2004946	2 short Arms (14"), Controller Mounting L-Bracket, black Mounting Plates for CoPilot 500 Printheads, and Ink System Mounting Brackets
2004947	2 long Arms (30"), Controller Mounting L-Bracket, black Mounting Plates for CoPilot 500 Printheads, and Ink System Mounting Brackets
2004951	2 Arms, 2 Stitch Plate Bracket sets for four Printheads, four Ink Reservoir and two Controllers (for two CoPilot 500 Controllers with 4 Printheads total)
2004956	1 short Arm (14"), Controller Mounting L-Bracket, black Mounting Plate for CoPilot 500 Printhead, and Ink System Mounting Bracket
2004957	1 long Arm (30"), Controller Mounting L-Bracket, black Mounting Plate for CoPilot 500 Printhead, and Ink System Mounting Bracket
2005941	1 short Arm (14"), black Baseplate to mount Controller, Printhead and Ink System (2004920), and Printhead Mounting Post (2004918)

Conveyor Mount Assemblies

Part Number	Description
2004925	Tubing kit with one short Arm (14") * Must order Printhead Mounting Post (2004918) to accommodate down, horizontal, or twist applications
2004926	Tubing kit with two short Arms (14") * Must order Printhead Mounting Post (2004918) to accommodate down, horizontal, or twist applications
2004928	Tubing kit with Slider Brackets for two CoPilot 500 Printheads and Ink Systems
2004943	Tubing kit (single head) with black Printhead Plate for low profile Printhead mounting
2004944	Tubing kit (dual head) with black Printhead Plates for low profile Printhead mounting
2004950	Tubing kit with Slider Brackets for four CoPilot 500 Printheads and Ink Systems and two Controllers
2005940	Mounting Bracket for complete printing system, includes: <ul style="list-style-type: none"> • Mounting Bracket Assembly (2004920) • Printhead Rotation/Tilt-Mounting Kit (2004918) • Conveyor Mounting Assembly (2002059)

Inks and Fluids



ATTENTION: Use only Squid Ink approved fluids for cleaning or flushing the Nozzle Face. Use only the appropriate cleaning or flushing fluid for the specific ink being used (see “Inks and Fluids” on page [133](#)).



ATTENTION: For oil-based Printheads, never use External Cleaning Fluid as an Internal Flush Fluid or Storage Solution, and never use External Cleaning Fluid on the Printer Face.



ATTENTION: Always use nonabrasive lint-free wipes (Part Number 2007021) when cleaning and maintaining the Printhead.


Ink Base	Ink Description	Internal Flush Fluid/Storage Solution	External Cleaning Fluid
Oil	SI-PZ1000	SI-PZ1043-Q Part Number: 2101143	SI-PZ1053
Mineral Oil Free (MOF)	SI-PZ1525	SI-PZ1943-Q Part Number: 2101943	SI-PZ1053
Solvent	SI-PZ3300	SI-PZ3043-Q Part Number: 2103143	

Exploded Views

Cartridge Ink System

Cartridge Ink System Assembly

(Part Number 2001065 – Oil) | (Part Number 20001066 – Solvent)

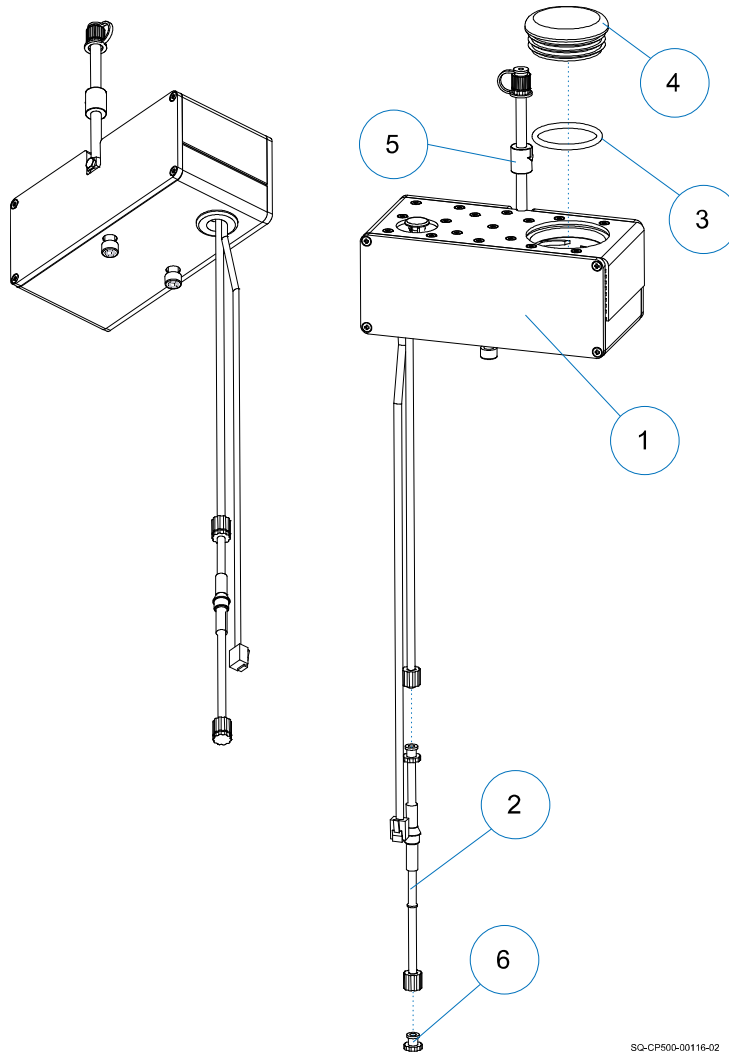


SG-CP500-00116-02

Item Number	Part Number	Description	System	Qty
1		GENERIC INK SYSTEM ASSY		1
2	2002057	CHECK VALVE ASSEMBLY - PO	Oil	1
	2002058	CHECK VALVE ASSEMBLY - PO	Solvent	1
3	2006088	BOTTLE O-RING #221 50 DUR, VITON	Oil	1
	2006094	BOTTLE O-RING #221 50 DUR, EPDM	Solvent	1
4	2006006	DUST CAP-2" OD, BLACK ROUND, LPDE		1
5	2001069	KIT, OIL-BASED VENT KIT	Oil	1
	2001070	KIT, SOLVENT-BASED VENT KIT	Solvent	1
6		CAP		1

Cartridge Ink System Assembly

(Part Number 2001065 – Oil) | (Part Number 20001066 – Solvent)

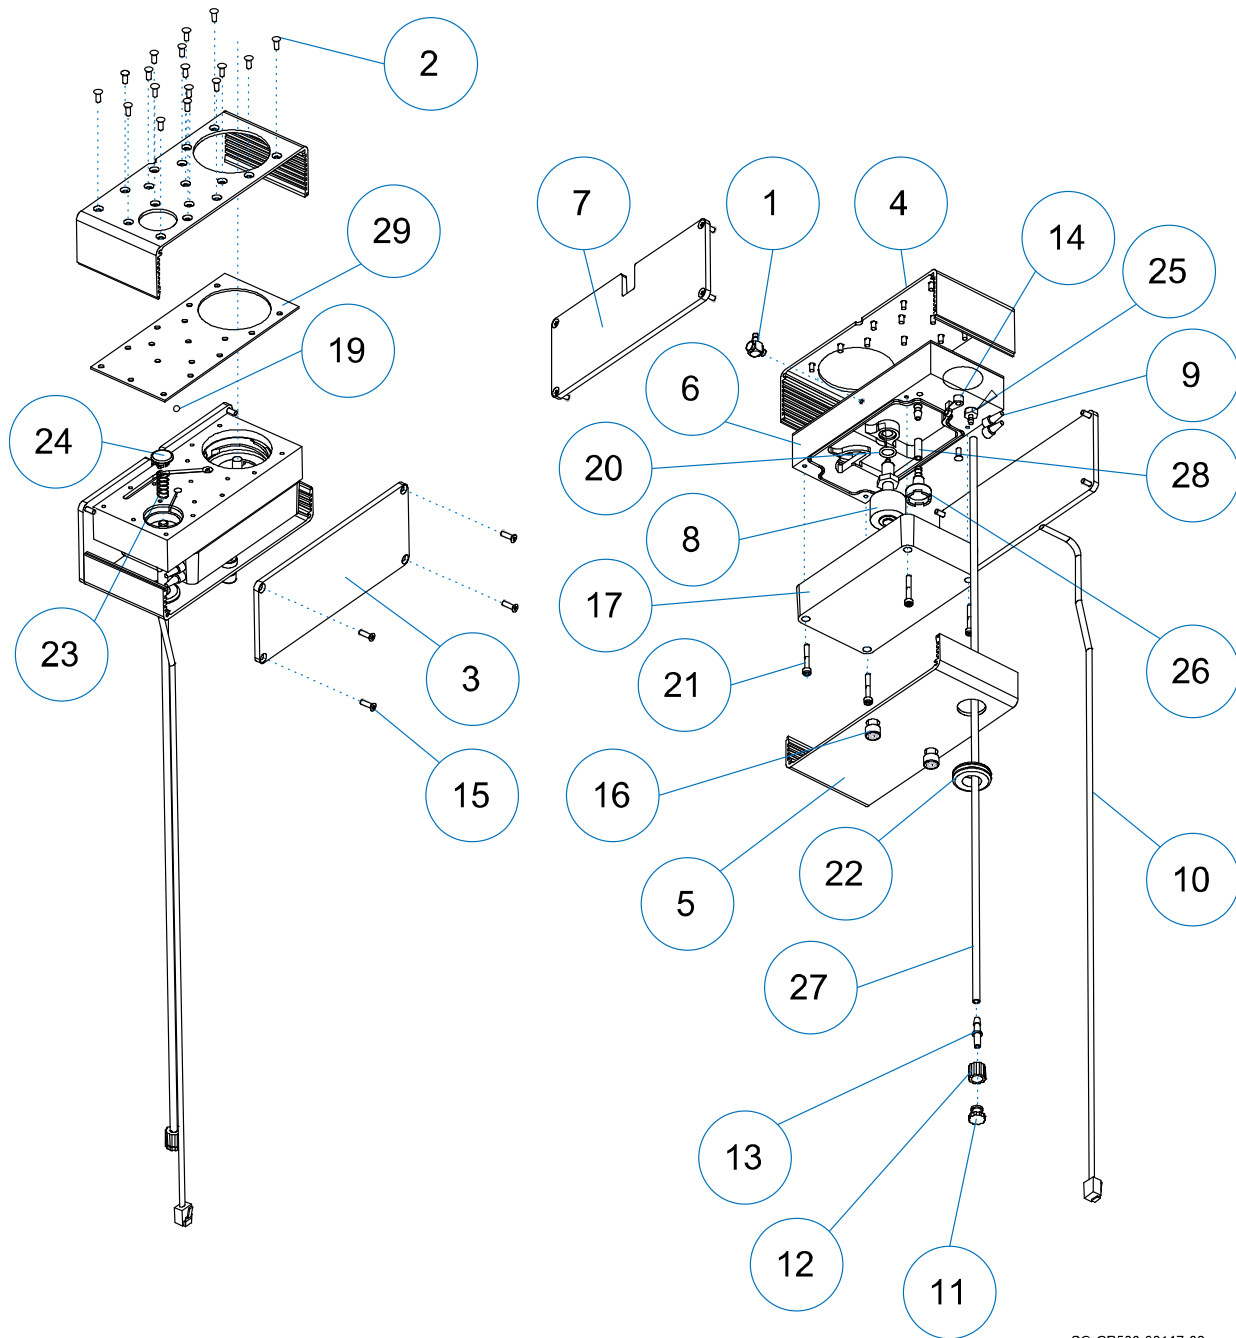


SQ-CP500-00117-02

Item Number	Part Number	Description	System	Qty
	2001065	Cartridge Ink System Assembly	Oil	
	2001066	Cartridge Ink System Assembly	Solvent	
1	1603588	FTG-ELBOW, 1/8 BARB, #10-32		1
2	1705038	SCREW, M3 X 8, FH, BLK		18
3	2003069	PZP END PLATE		1
4	2003072	PZP INK SYS COVER		1
5	2003073	PZP INK SYSTEM BASE		1
6	2003074	PZP TANK COVER		1
7	2003099	PZP END PLATE W/CUT		1
8	2004129	FLOAT SWITCH, NC		1
9	2004131	CRIMP WIRE SPLICES 22-14 GA		2
10	2004156	CABLE, MOD-LOW INK, 6X4		1
11	2006025	FITTING, FEM LUER, CAP, PP		1
12	2006026	LUER LOCK RING USED W/2006027		1
13	2006027	FITTING-MALE LUER, 1/8 BARB		1
14	2006070	TIEWRAP 4" WITH #4 MTG HOLE		1
15	2006082	SCREW – FHP, M3 X 10MM, SS		8
16	2006083	SCREW – SHC, M6 X 10, SS		2
17	2006084	PZP TANK		1
18	2006085	O-RING, TANK, 70 DUR, BUNA		1
19	2006087	TEFLON BALL 5/32"		1
20	2006089	O-RING, SWITCH, 70 DUR, BUNA		1
21	2006091	SCREW, SHC, M3 X 20, SS		4
22	2006092	GROMMET RUBBER SBR 1/2 X 3/4		1
23	2006131	SPRING-COMP .3"ODx.69"Lx.025"		1
24	2006132	PLUG-BUTTON, 3/8"ID, .578D		1
25	2006133	FTG, BARBED, 1/4-28, 1/8 ID TUBE		1
26	2006134	FILTER-TUBE, 149 MICRON		1
27	2003379	TUBING LDPE 1/8" ID	Oil	1
	1701002	TUBING LDPE 1/8" ID	Solvent	1
28	2007009	TUBING LDPE 1/8" ID		1
29	2007133	PZP COVER GASKET-GYLON		1

Bag Ink System

Bag Ink System Assembly – Oil

(Part Number 2001159)

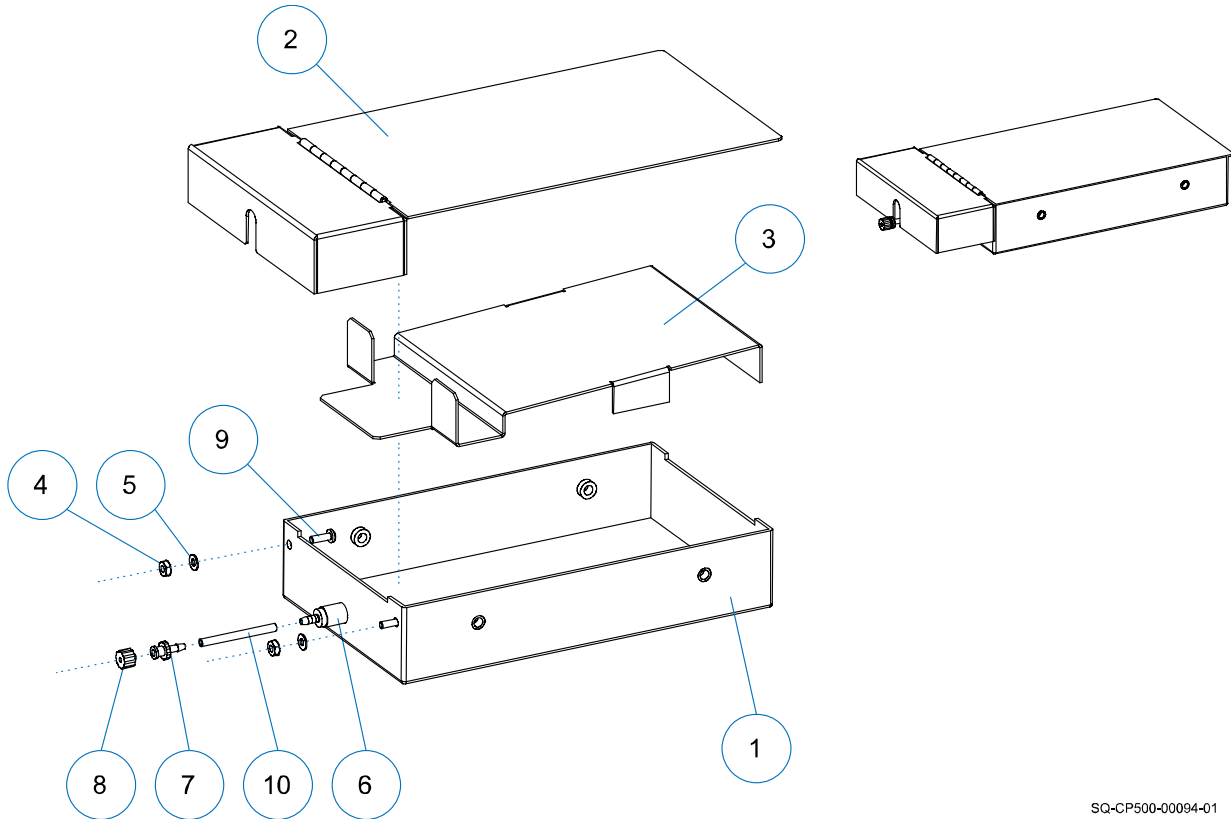


SQ-CP500-00094-01

Item Number	Part Number	Description	Qty
1	2003014	PAN INK SYSTEM	1
2	2003015	COVER INK SYSTEM	1
3	2003017	TRAY INK SYSTEM	1
4	2006007	NUT HEX 8-32 KEPS SS	2
5	2006020	WASHER-FLAT #8 SST	2
6	2006022	FITTING-FEM LUER TO 1/8" BARB	1
7	2006023	LUER LOCK RING	1
8	2006024	FITTING QCONN FEM BLK	1
9	2006056	SCRW-PH 8-32X6/16 SST PH	2
10	2003379	TYGON TUBING	1

Bag Ink System Assembly – Solvent

(Part Number 2001160)

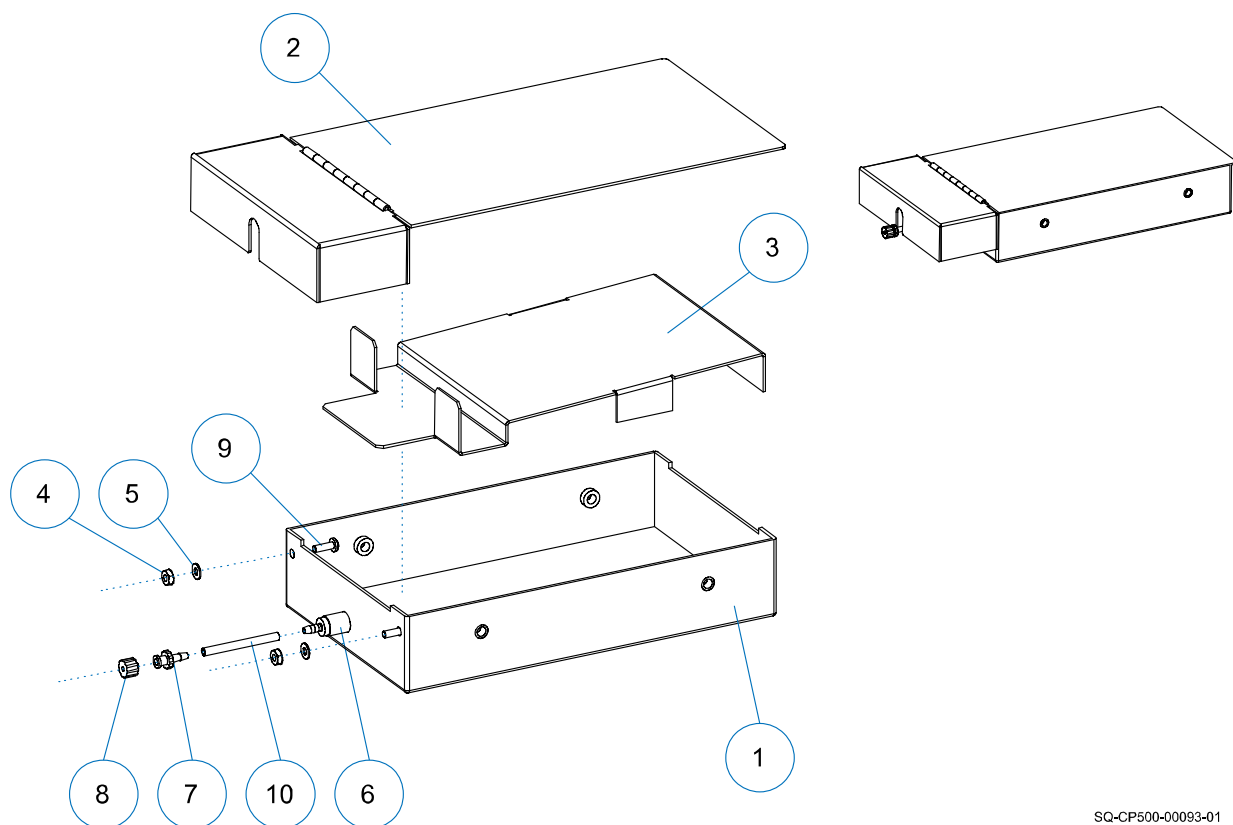


SQ-CP500-00093-01

Item Number	Part Number	Description	Qty
1	2003013	PAN INK SYSTEM	1
2	2003015	COVER INK SYSTEM	1
3	2003017	TRAY INK SYSTEM	1
4	2006007	NUT HEX 8-32 KEPS SS	2
5	2006020	WASHER-FLAT #8 SST	2
6	2006021	FITTING OCONN FEM W/E	1
7	2006022	FITTING-FEM LUER TO 1/8" BARB	1
8	2006023	LUER LOCK RING	1
9	2006056	SCRW-PH 8-32X6/16 SST PH	2
10	2007009	TUBING LDPE 1/8" 4'L	1

Printhead

CoPilot 500 Printhead


Part Number 2005900 – Oil
 Part Number 2005901 – Solvent
 Part Number 2005900-HS – HiSpeed

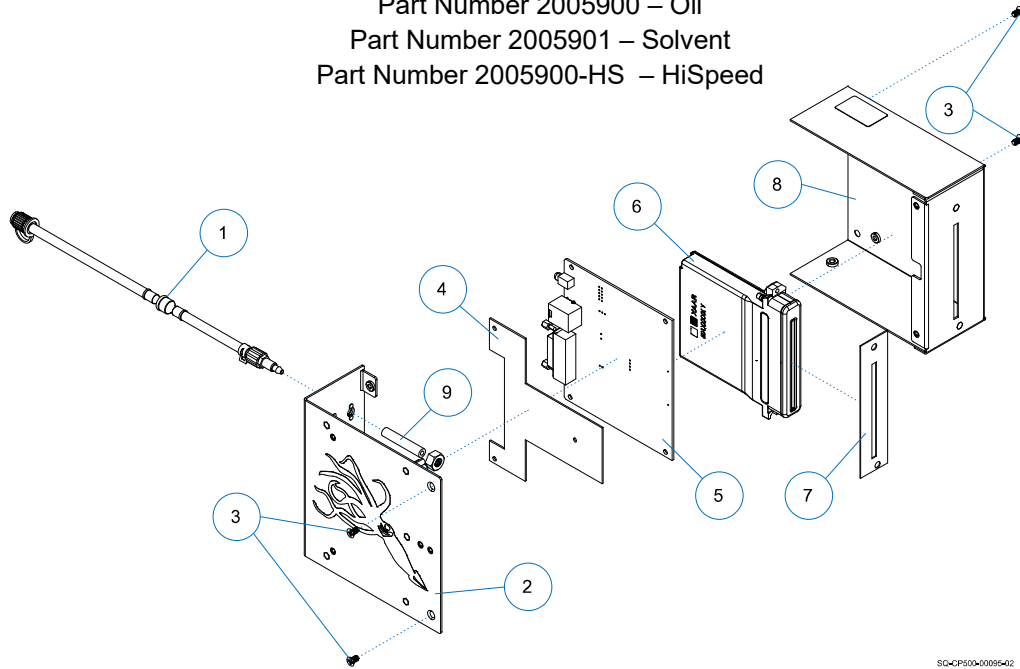

SG-CP500-0009-02

Item Number	Part Number	Description	System	Qty
	2005900	Printhead	Oil	
	2005901	Printhead	Solvent	
	2005900-HS	Printhead	HiSpeed	
1	2005920	CHECK VALVE ASSY	Oil	1
	2005921	CHECK VALVE ASSY	Solvent	1
2	2005905	FAB, PRINTHEAD COVER		1
3	2003271	SCREW, #6-32X1/4, FH UNDERCUT, SS		4
4	2005908	FAB INSIDE GUARD, COPILOT 500		1
5	1440010	PCB ASSY – PRINTHEAD, COPILOT 500		1
6	2005999	PRINT ENGINE, OIL-BASED, COPILOT 500	Oil	1
	2005998	PRINT ENGINE, SOLVENT-BASED, COPILOT 500	Solvent	1
7	2005917	GASKET, PRINTHEAD SEAL, COPILOT 500	Oil	1
	2005916	GASKET, PRINTHEAD SEAL, COPILOT 500	Solvent	
8	2005904	FAB/WELD PRINTHEAD CHASSIS		1
9	2003379	TUBE, TYGON, 1/8" ID, 1/4" OD	Oil	2
	2007009	TUBE, TYGON, 1/8" LDPE, 1/4" OD	Solvent	2

CoPilot 500 Controller*/CoPilot 500 HiSpeed Controller**

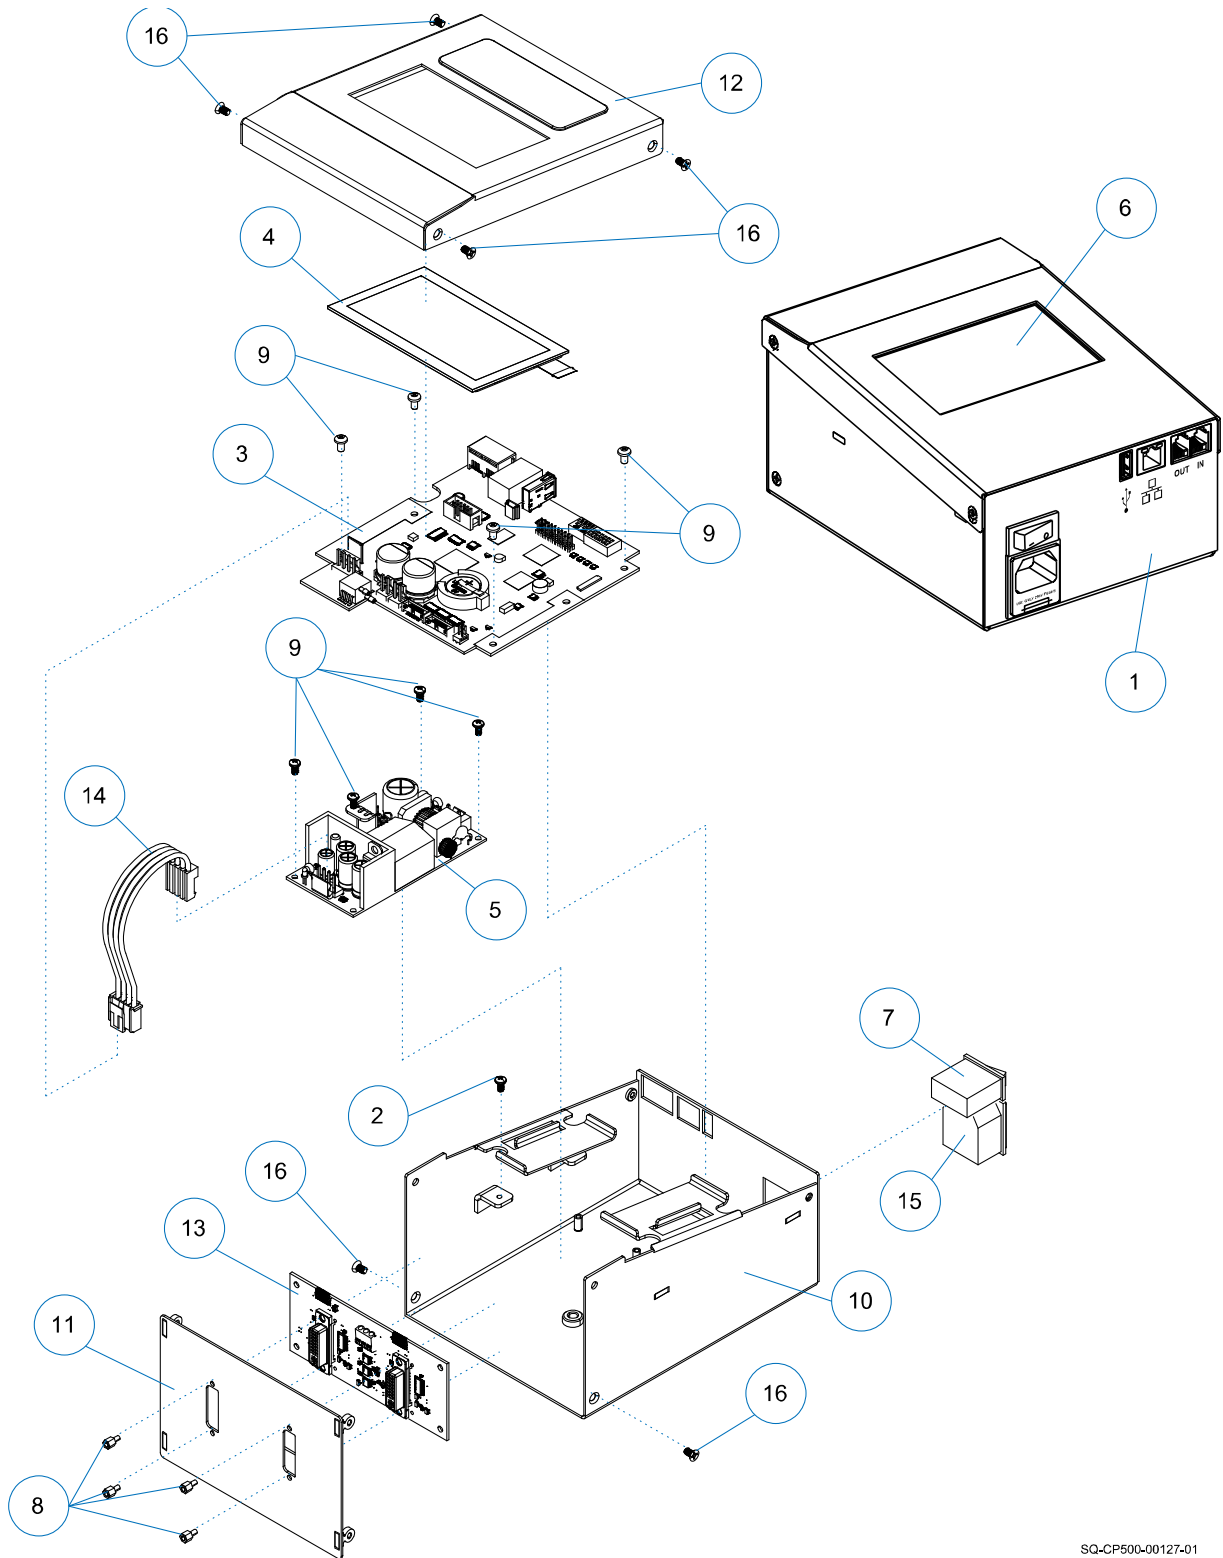


SQ-CP500-00127-01

* The CoPilot 500 Controller has been replaced by the CoPilot 500 Turbo Controller.

** The CoPilot 500 HiSpeed Controller has been replaced by the CoPilot 500 HiSpeed Turbo Controller.

CoPilot 500 Turbo/CoPilot 500 HiSpeed Turbo Controller

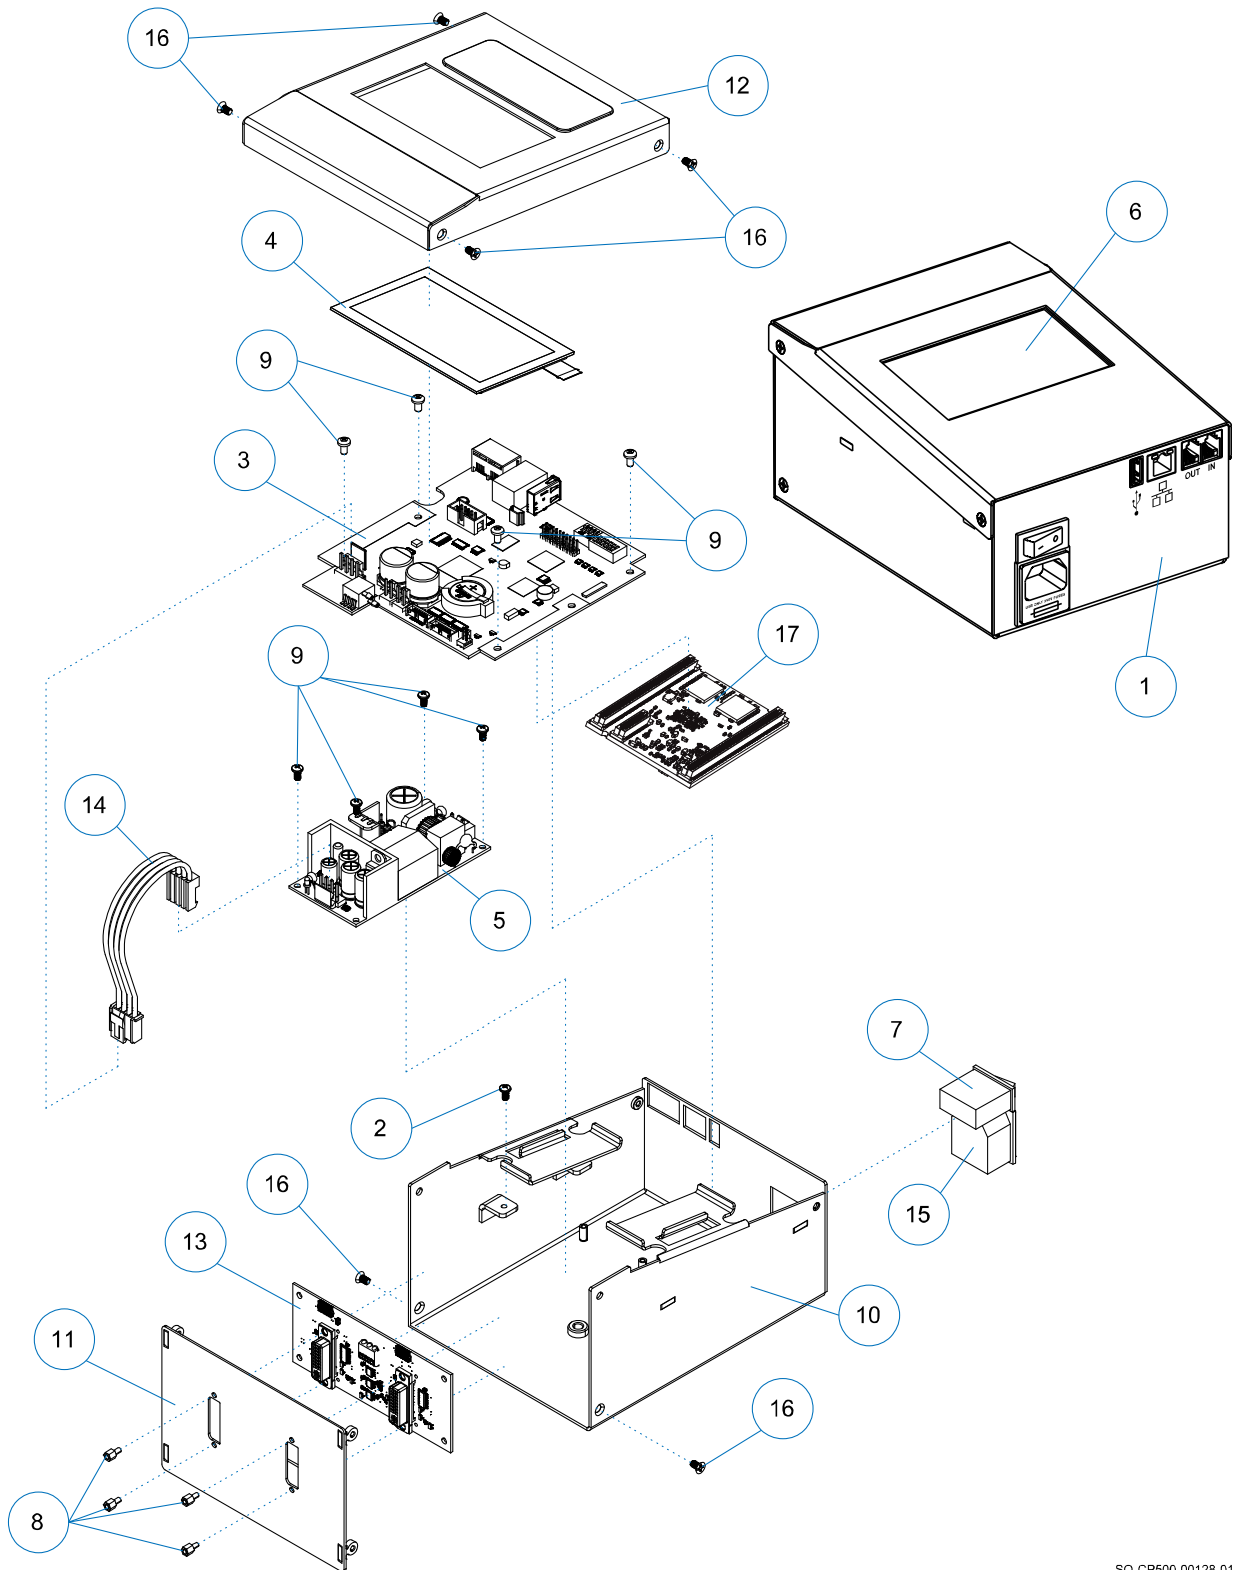

SQ-CP500-00128-01

142 Parts List

Item Number	Part Number	Description	Model	Qty
	2005095	Controller	Standard	
	2005095-HS	Controller	HiSpeed	
	2005095	Controller	Turbo	
	2005095-HS	Controller	HiSpeed Turbo	
1	098898-001	LABEL-PROT EARTH GRND, IEC 5019		1
2	102448-001	NUT-KEP, M3, ZINC		1
3	1603530	ASSY-MAIN PCB*	Standard HiSpeed	1
	1440019	ASSY-MAIN PCB, COPILOT TURBO	Turbo HiSpeed Turbo	1
4	1603526	GASKET – LCD SEAL, JETLINE & CP		1
5	1603529	AC-DC POWER SUPPLY, OUTPUT 24V		1
6	1603532	4.3" LCD W/ TOUCHSCREEN		1
N/S	1603548	CABLE ASSY – JUMPER FOR IEC LINE		1
N/S	1603575	BATTERY – 3V, 230mAh, COIN CELL		1
7	1603576	POWER SWITCH-ROCKER, 10A, 250 VAC		1
N/S	1603578	CABLE ASSY – JUMPER FOR IEC NEUT		1
N/S	1603601	FUSE – 4A, 5 X 20MM, FAST ACT		1
N/S	1603624	TAPE-2 SIDE ADHESIVE, 1/2" SQUARE		4
8	1605001	STANDOFF, HEX M/F, 3/16, ZINC*		4
9	2001430	SCREW – PHP, M3 X 6, W/EXT WASHER		8
10	2003907	FAB – CONTROLLER CHASSIS		1
11	2003908	FAB – BACK PLATE CONTROLLER		1
12	2003909	FAB – CONTROLLER COVER		1
13	2003912	PCB ASSY – HOST INTERFACE BOARD		1
N/S	2003917	CABLE ASSY – POWER TO MAIN PCB		1
N/S	2003918	CABLE ASSY – GROUND, FROM SWITCH		1
N/S	2003919	CABLE – PH DATA, RIBBON, 3.5" LONG		2
14	2003920	CABLE ASSY – POWER TO INTERFACE BOARD		1

Item Number	Part Number	Description	Model	Qty
N/S	2003922	CABLE ASSY – SWITCH TO POWER SUPPLY		1
15	2003923	POWER SOCKET-AC, SNAP-IN, FUSED		1
16	2006225	SCREW – FHP, M3 X 5, SS		6
17	2004000	TQ MODULE	Turbo HiSpeed Turbo	1
N/S	2004031	FERRITE CORE 192 OHM SOLID 15X15X18MM*	Standard HiSpeed	1
N/S	2004032	DOUBLE COATED TISSUE TAPE*	Standard HiSpeed	2
N/S	2004033	EVA FOAM (HARD) SPACER*	Standard HiSpeed	1

* The CoPilot 500 Controller has been replaced by the CoPilot 500 Turbo Controller.

** The CoPilot 500 HiSpeed Controller has been replaced by the CoPilot 500 HiSpeed Turbo Controller.

System Updates

Occasionally software and firmware updates will become available from Squid Ink Manufacturing. Software and Printer System Firmware can be updated from a desktop computer using Orion™. Periodically check to see if updates are available at <https://www.squidink.com/products/coding-marking-software/orion-software/>.

IMPORTANT: All updates are downloaded using the Orion™ Message Creation Software Package. For detailed instructions on receiving software and firmware updates for the CoPilot 500 printing system, refer to the *Orion™ User Guide*.

Applying Updates from USB


Update Software and Firmware

To install software and firmware updates to the printer, install the USB Drive containing the updates into the USB Port and select the **Update Firmware/Software** button in the **USB Load Screen**.




IMPORTANT: USB format must be FAT32 or NTFS.


While the system is updating, a progress screen will display.

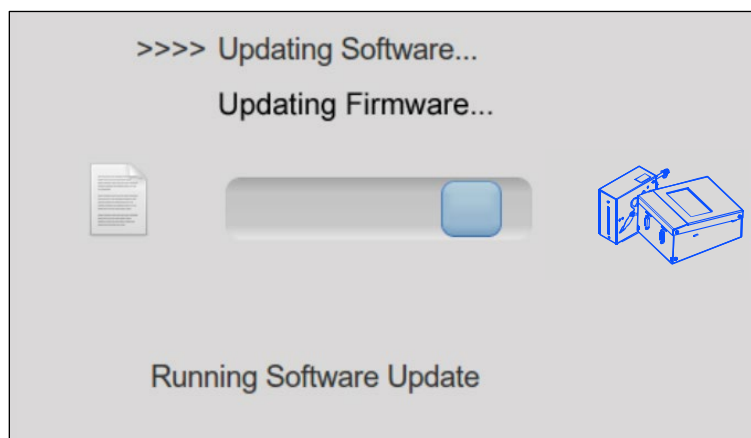

When the update is complete, an “Update Complete” screen will display with a green check next to the update indicating the update has been successful.

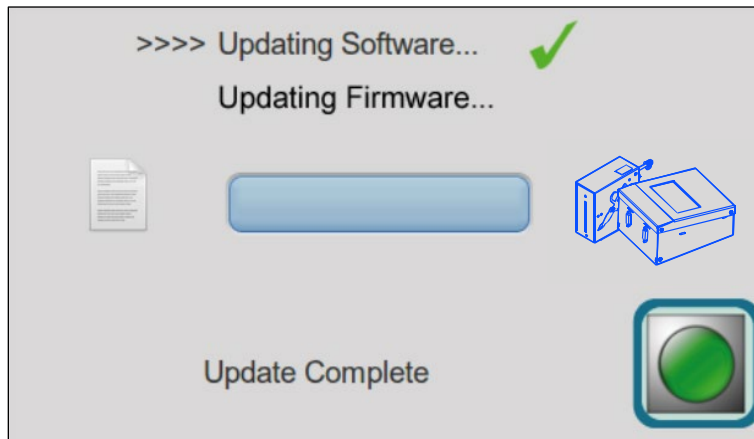

If there is a problem with the update the “ERROR Unable to complete update” screen will display with a red X mark next to the problem update.

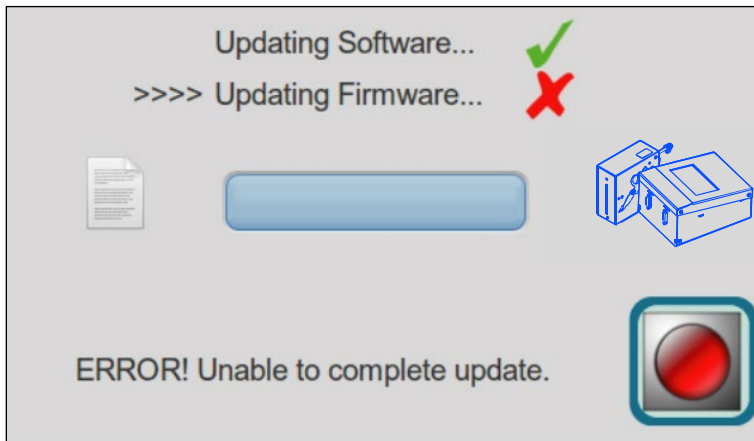

In the unlikely event that there is a problem, remove the USB device containing the update, power the printer off and on, and then retry installing the update. If the problem persists, call Squid Ink Manufacturing Technical Support.

Product Warranty

Warranty Statement

Squid Ink Manufacturing, Inc. warrants that all of the piezo printing systems it ships will be in good working order and free from defects in material and workmanship and will conform to the published specifications for that product.

Warranty Period

For hardware and software products including printheads, the warranty period is 12 months from the date of shipment from Squid Ink.

Printheads

Use of inks, flush fluids, and cleaning fluids that are not obtained from Squid Ink, or which do not meet Squid Ink's manufacturing specifications *and* have written approval of Squid Ink void the warranty on printheads. Use of a printhead wipe material not approved by Squid Ink voids the warranty on printheads. Printheads are specifically not warranted against clogged jets, crooked jets, or scratched orifice plates.

Piezo print engines sold separately as replacement engines and installed by Squid Ink are warranted for 90 days from the date of shipment from Squid Ink. Replacement print engines sold separately and installed by the customer are not warranted.

Repairs

All repairs are rigorously tested for optimum operation and print performance and warranted to be, under normal and proper use, free from defects in material and workmanship for a period of 90 days from the date of service.

Print Quality

Print quality achieved in a given application is dependent on the installation, the material handling, and the maintenance provided. Squid Ink makes no warranty that the print quality achieved in an application will be the same as that achieved during a printer demonstration or on a test piece in our print laboratory.

Shipping Policy

Customer pays all incoming shipping charges. If the item is defective and under warranty, Squid Ink will pay all return shipping charges via the least costly method. If expedited shipping is desired, the customer must furnish their shipping account number and shipping fees will be charged to that account.

Exclusions

Damage due to tampering, abuse, improper adjustment, electrical interference, hot-plugging printheads, or the use of non-approved components will void any and all warranties by Squid Ink and its distributors. Use of inks, flush fluids, and cleaning fluids that are not

obtained from Squid Ink, or which do not meet Squid Ink's manufacturing specifications *and* have written approval of Squid Ink void the warranty on printheads. Use of a printhead wipe material not approved by Squid Ink voids the warranty on printheads. Printheads are specifically not warranted against clogged jets, crooked jets, or scratched orifice plates.

Warranty Procedures

If you believe that a product may be defective and may be covered by warranty, please call Squid Ink Technical Service at 1-800-877-5658. If defective, you will receive a Return Material Authorization number and may return the defective item to Squid Ink. Squid Ink will analyze the product and, if indeed found to be defective, we will, at our option, replace or repair the item. If the item is found not to be eligible for warranty, you will be notified and may decide on disposition. Defective products will be replaced or repaired as promptly as possible.

Warranty within 60 days of invoice

For warranty questions that take place within 60 days of the original invoice, Squid Ink will allow cross-shipment of a replacement component to an end-user customer or Squid Ink distributor. The customer will be invoiced for the replacement component. Upon receipt of the returned component, Squid Ink will evaluate it and issue credit where necessary.

For components that have been misused or externally damaged, Squid Ink will not issue credit, and will contact the customer to determine whether or not they want the component repaired and/or returned.

Warranty 60 days to 1 year from invoice (6 months for Printheads)

For warranty questions that take place more than 60 days from the original invoice, Squid Ink requires the end-user or Squid Ink distributor to return the component to Squid Ink for repair. Upon receipt of the returned component, Squid Ink will evaluate it and repair as necessary.

Components that fall within our warranty policy will be repaired normally within 5 business days of receipt and returned to the customer via standard ground shipping at Squid Ink's expense. If expedited shipping is required, the customer must furnish their shipping account number and shipping fees will be charged to that account.

For components that have been misused or externally damaged, Squid Ink will contact the customer to determine whether or not they want the component repaired and/or returned.

Warranty Eligibility

The warranty provided by Squid Ink Manufacturing, Inc. is only to the original buyer.

Limited Warranty

THE ABOVE WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF

MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND
NONINFRINGEMENT.

Disclaimer of Damages

REGARDLESS OF WHETHER ANY REMEDY SET FORTH HEREIN FAILS OF ITS
ESSENTIAL PURPOSE, IN NO EVENT WILL SQUID INK MANUFACTURING, INC. BE
LIABLE FOR ANY SPECIAL, CONSEQUENTIAL, INDIRECT OR SIMILAR DAMAGES,
INCLUDING LOST PROFIT OR LOST OPPORTUNITIES OF ANY TYPE ARISING OUT OF
THE USE OR INABILITY TO USE THESE PRODUCTS EVEN IF SQUID INK
MANUFACTURING, INC. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH
DAMAGES.



Technical Support

For help installing, operating, and maintaining the CoPilot 500 printing system, contact your authorized Squid Ink reseller or Squid Ink Technical Support.

Toll-Free Phone: 800-253-2627

Phone: (55) 5426-4137

Email: info@alfamaq.mx

Web: www.alfamaq.mx

Thank you for your purchase of Squid Ink products. We are pleased to be a part of your marking and coding needs.

